

## **FCC Information and Copyright**

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. There is no guarantee that interference will not occur in a particular installation.

The vendor makes no representations or warranties with respect to the contents here and specially disclaims any implied warranties of merchantability or fitness for any purpose. Further the vendor reserves the right to revise this publication and to make changes to the contents here without obligation to notify any party beforehand.

Duplication of this publication, in part or in whole, is not allowed without first obtaining the vendor's approval in writing.

The content of this user's manual is subject to be changed without notice and we will not be responsible for any mistakes found in this user's manual. All the brand and product names are trademarks of their respective companies.

---

---

## Table of Contents

---

---

<b>CHAPTER 1: INTRODUCTION .....</b>	<b>1</b>
<b>1.1 BEFORE YOU START .....</b>	<b>1</b>
<b>1.2 PACKAGE CHECKLIST .....</b>	<b>1</b>
<b>1.3 MOTHERBOARD FEATURES .....</b>	<b>2</b>
<b>1.4 REAR PANEL CONNECTORS .....</b>	<b>3</b>
<b>1.5 MOTHERBOARD LAYOUT .....</b>	<b>4</b>
<b>CHAPTER 2: HARDWARE INSTALLATION .....</b>	<b>5</b>
<b>2.1 INSTALLING CENTRAL PROCESSING UNIT (CPU) .....</b>	<b>5</b>
<b>2.2 FAN HEADERS .....</b>	<b>7</b>
<b>2.3 INSTALLING SYSTEM MEMORY .....</b>	<b>8</b>
<b>2.4 CONNECTORS AND SLOTS .....</b>	<b>10</b>
<b>CHAPTER 3: HEADERS &amp; JUMPERS SETUP</b>	<b>12</b>
<b>3.1 HOW TO SETUP JUMPERS .....</b>	<b>12</b>
<b>3.2 DETAIL SETTINGS .....</b>	<b>12</b>
<b>CHAPTER 4: USEFUL HELP .....</b>	<b>18</b>
<b>4.1 DRIVER INSTALLATION NOTE .....</b>	<b>18</b>
<b>4.2 AWARD BIOS BEEP CODE .....</b>	<b>19</b>
<b>4.3 EXTRA INFORMATION .....</b>	<b>19</b>
<b>4.4 TROUBLESHOOTING .....</b>	<b>21</b>
<b>Chapter 6: WarpSpeeder™ .....</b>	<b>22</b>
<b>6.1 Introduction .....</b>	<b>22</b>
<b>6.2 System Requirement .....</b>	<b>22</b>
<b>6.3 Installation .....</b>	<b>23</b>
<b>6.4 WarpSpeeder™ .....</b>	<b>24</b>
<b>Appendices: SPEC In Other Language.....</b>	<b>30</b>
<b>German .....</b>	<b>30</b>
<b>France .....</b>	<b>32</b>
<b>Italian .....</b>	<b>34</b>
<b>Spanish .....</b>	<b>36</b>
<b>Portuguese .....</b>	<b>38</b>
<b>Polish .....</b>	<b>40</b>
<b>RUSSIAN .....</b>	<b>42</b>
<b>ARABIC .....</b>	<b>44</b>
<b>JAPANESE .....</b>	<b>46</b>

---

---

## **CHAPTER 1: INTRODUCTION**

### **1.1 BEFORE YOU START**

Thank you for choosing our product. Before you start installing the motherboard, please make sure you follow the instructions below:

- Prepare a dry and stable working environment with sufficient lighting.
- Always disconnect the computer from power outlet before operation.
- Before you take the motherboard out from anti-static bag, ground yourself properly by touching any safely grounded appliance, or use grounded wrist strap to remove the static charge.
- Avoid touching the components on motherboard or the rear side of the board unless necessary. Hold the board on the edge, do not try to bend or flex the board.
- Do not leave any unfastened small parts inside the case after installation. Loose parts will cause short circuits which may damage the equipment.
- Keep the computer from dangerous area, such as heat source, humid air and water.

### **1.2 PACKAGE CHECKLIST**


- FDD Cable X 1
- HDD Cable X 1
- User's Manual X 1
- Serial ATA Cable X 1
- Fully Setup Driver CD X 1
- Rear I/O Panel for ATX Case X 1
- USB 2.0 Cable X1 (optional)
- S/PDIF Cable X 1 (optional)
- Serial ATA Power Switch Cable X 1 (optional)

### 1.3 MOTHERBOARD FEATURES


SPEC		
CPU	LGA 775 Intel Pentium 4 / Pentium D / Celeron D processor up to 3.8 GHz	Supports Hyper Transport/ Execute Disable Bit/ Enhanced Intel SpeedStep®/ Intel Extended Memory 64 technology
FSB	533 / 800 MHz	
Chipset	Intel 945PL	Intel ICH7
Super I/O	ITE IT8712F Provides the most commonly used legacy Super I/O functionality. Low Pin Count Interface	Environment Control initiatives, H/W Monitor Fan Speed Controller ITE's "Smart Guardian" function
Main Memory	DIMM Slots x 2 Each DIMM supports 256/512MB & 1GB DDR2 Max Memory Capacity 4GB	Dual Channel Mode DDR2 memory module Supports DDR2 400 / 533 Registered DIMM and Non-ECC DIMM is not supported
IDE	Integrated IDE Controller	Ultra DMA 33~100 Bus Master Mode supports PIO Mode 0~4,
SATA 2	Integrated Serial ATA Controller	Data transfer rates up to 3.0 Gb/s. SATA Version 2.0 specification compliant.
LAN	Realtek RTL 8100C / RTL 8100SC (optional)	10 / 100 Mb/s auto negotiation (Gigabit bandwidth is for RTL 8100SC only) Half / Full duplex capability
Sound Codec	ALC655	6 channels audio out AC'97 Version 2.3
Slots	PCI Express x 16 slot	x1 Supports PCI express x16 expansion cards
	PCI Express x 1 slot	x1 Supports PCI express x1 expansion cards
	PCI slot	x2 Supports PCI expansion cards
On Board Connector	Floppy connector	x1 Each connector supports 2 Floppy drives
	IDE Connector	x1 Each connector supports 2 IDE device
	SATA Connector	x4 Each connector supports 1 SATA devices
	Front Panel Connector	x1 Supports front panel facilities
	Front Audio Connector	x1 Supports front panel audio function

SPEC			
	CD-in Connector	x1	Supports CD audio-in function
	S/PDIF out connector	x1	Supports digital audio out function
	S/PDIF in connector (optional)	x1	Supports digital audio in function
	CPU Fan header	x1	CPU Fan power supply (with Smart Fan function)
	System Fan header	x1	System Fan Power supply
	Chassis open header	x1	For chassis intruder detection function
	Clear CMOS header	x1	Restore CMOS data to factory default
	USB connector	x2	Each connector supports 2 front panel USB ports
	Power Connector (24pin)	x1	Connects to Power supply
	Power Connector (4pin)	x1	Connects to Power supply
Back Panel I/O	PS/2 Keyboard	x1	Connects to PS/2 Keyboard
	PS/2 Mouse	x1	Connects to PS/2 Mouse
	Serial Port	x1	Provide RS-232 Serial connection
	Printer Port	x1	Provide printer port connection
	LAN port	x1	Connects to RJ-45 ethernet cable
	USB Port	x4	Connects to USB devices
	Audio Jack	x3	Provide Audio-In/Out and microphone connection
Board Size	219 (W) x 236 (L) mm		Micro ATX form Factor
OS Support	Windows 2000 / XP		Biostar Reserves the right to add or remove support for any OS with or without notice.

## 1.4 REAR PANEL CONNECTORS

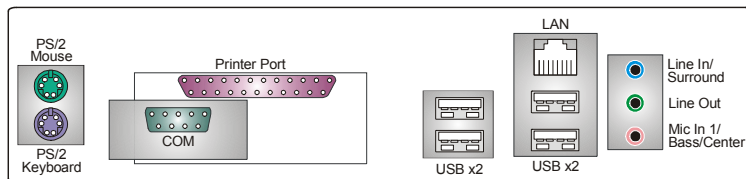


## 1.5 MOTHERBOARD LAYOUT

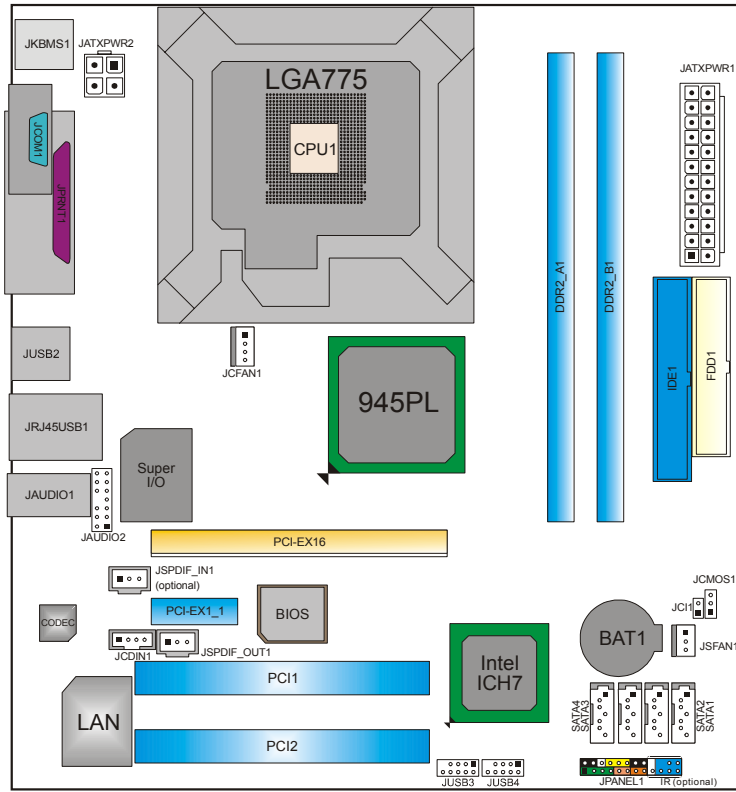

**Note:** ■ represents the 1<sup>st</sup> pin.


## CHAPTER 2: HARDWARE INSTALLATION

### 2.1 INSTALLING CENTRAL PROCESSING UNIT (CPU)

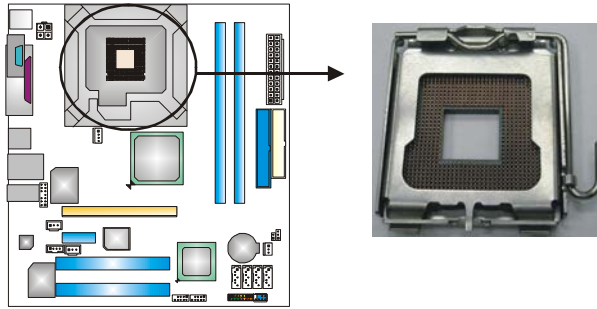


*Special Notice:*

Remove Pin Cap before installation, and make good preservation for future use. When the CPU is removed, cover the Pin Cap on the empty socket to ensure pin legs won't be damaged.

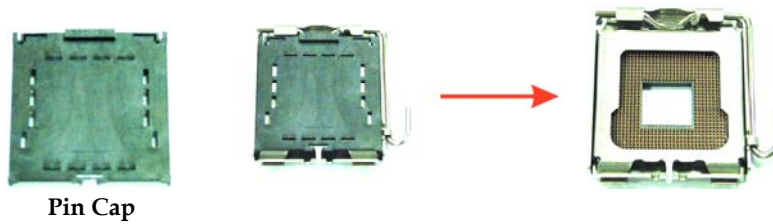

**Step 1:** Pull the socket locking lever out from the socket and then raise the lever up to a 90-degree angle.

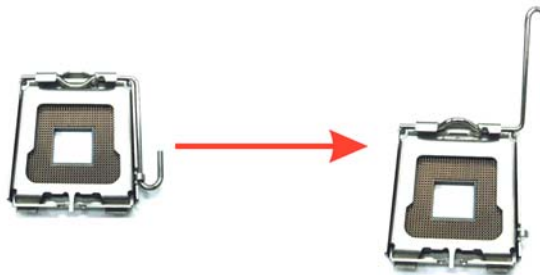


## Motherboard Manual


---

**Step 2:** Look for the triangular cut edge on socket, and the golden dot on CPU should point forwards this triangular cut edge. The CPU will fit only in the correct orientation.

*Step 2-1:*

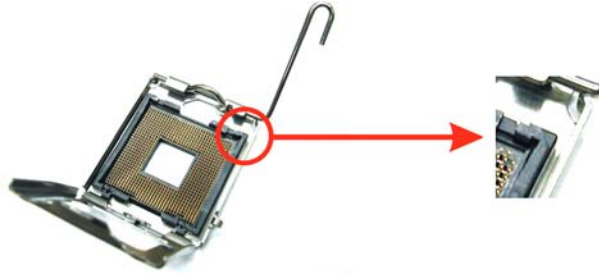

*Step 2-2:*

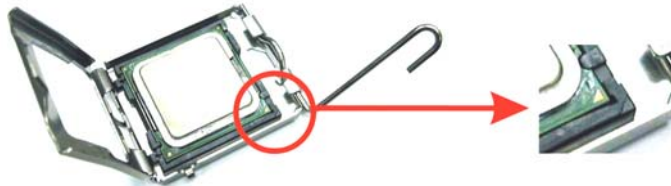

**Step 3:** Hold the CPU down firmly, and then lower the lever to locked position to complete the installation.



**Step 4:** Put the CPU Fan and heatsink assembly on the CPU and buckle it on the retention frame. Connect the CPU FAN power cable into the JCFAN1. This completes the installation.




## 2.2 FAN HEADERS

These fan headers support cooling-fans built in the computer. The fan cable and connector may be different according to the fan manufacturer. Connect the fan cable to the connector while matching the black wire to pin#1.

### JCFAN1: CPU Fan Header

### JSFAN1: System Fan Header

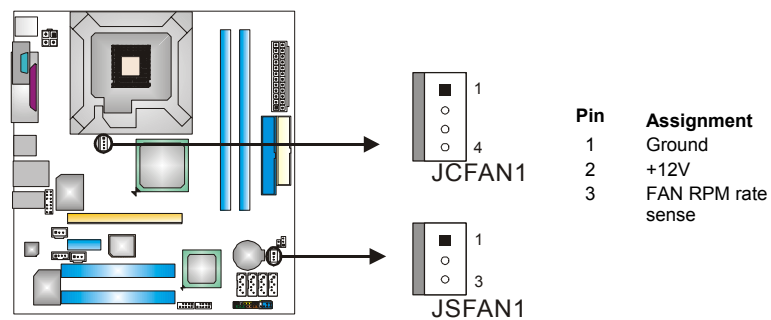


#### Note:


The JCFAN1 and JSFAN2 reserve system cooling fan with Smart Fan Control utility. It supports 4-pin and 3-pin head connector. When connecting with wires onto connectors, please note that the red wire is the positive and should be connected to pin#2, and the black wire is Ground and should be connected to GND.

## 2.3 INSTALLING SYSTEM MEMORY

### A. Memory Modules

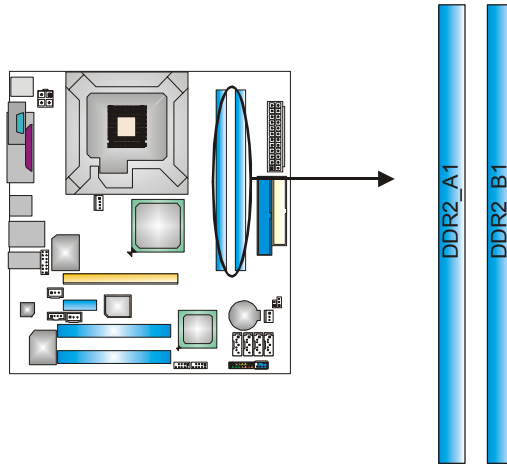

1. Unlock a DIMM slot by pressing the retaining clips outward. Align a DIMM on the slot such that the notch on the DIMM matches the break on the Slot.

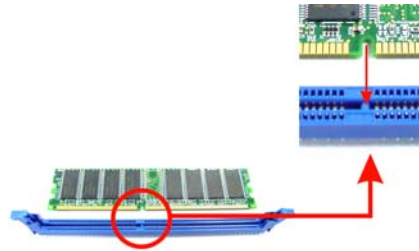

2. Insert the DIMM vertically and firmly into the slot until the retaining chip snap back in place and the DIMM is properly seated.



### B. Memory Capacity

DIMM Socket Location	DDR Module	Total Memory Size
DDR2_A1	256MB/512MB/1GB *1	Max is 2GB.
DDR2_B1	256MB/512MB/1GB *1	

**C. Dual Channel Memory installation**

To trigger the Dual Channel function of the motherboard, the memory module must meet the following requirements:

Install memory module of the same density in pairs, shown in the following table.

<b>Dual Channel Status</b>	<b>DDR2_A1</b>	<b>DDR2_B1</b>
Disabled	O	X
Disabled	X	O
Enabled	O	O


(O means memory installed, X means memory not installed.)

The DRAM bus width of the memory module must be the same (x8 or x16)

## 2.4 CONNECTORS AND SLOTS

### FDD1: Floppy Disk Connector


The motherboard provides a standard floppy disk connector that supports 360K, 720K, 1.2M, 1.44M and 2.88M floppy disk types. This connector supports the provided floppy drive ribbon cables.

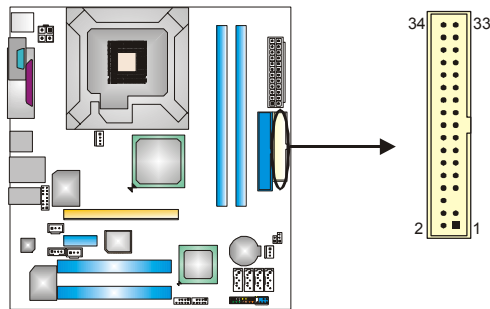

### IDE1/IDE2: Hard Disk Connectors

The motherboard has a 32-bit Enhanced PCI IDE Controller that provides PIO Mode 0~4, Bus Master, and Ultra DMA 33/66/100/133 functionality. It has two HDD connectors IDE1 (primary) and IDE2 (secondary).

The IDE connectors can connect a master and a slave drive, so you can connect up to four hard disk drives. The first hard drive should always be connected to IDE1.

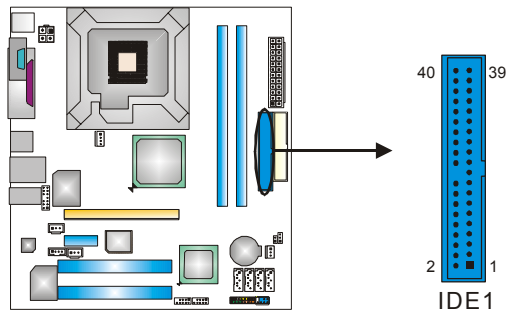


### PCI-Ex16: PCI-Express x16 Slot

- PCI-Express 1.0a compliant.
- Maximum theoretical realized bandwidth of 4GB/s simultaneously per direction, for an aggregate of 8GB/s totally.


### PCI-Ex1\_1: PCI-Express x1 slots

- PCI-Express 1.0a compliant.
- Data transfer bandwidth up to 250MB/s per direction; 500MB/s in total.
- PCI-Express supports a raw bit-rate of 2.5Gb/s on the data pins.
- 2X bandwidth over the traditional PCI architecture.

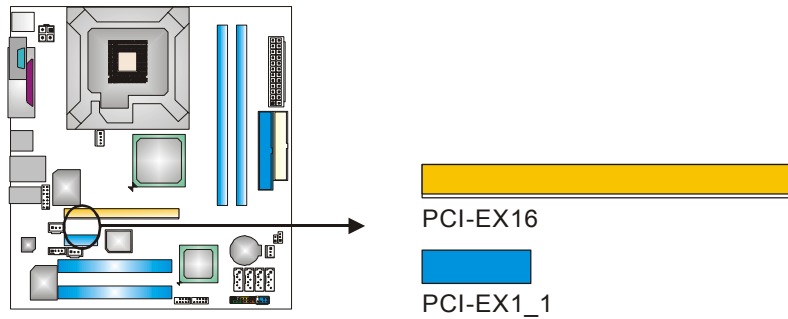

### PCI1~PCI2: Peripheral Component Interconnect Slots

This motherboard is equipped with 2 standard PCI slots. PCI stands for Peripheral Component Interconnect, and it is a bus standard for expansion cards. This PCI slot is designated as 32 bits.

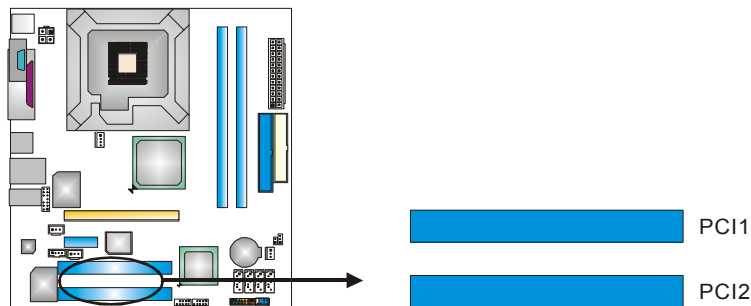

## CHAPTER 3: HEADERS & JUMPERS SETUP

### 3.1 HOW TO SETUP JUMPERS

The illustration shows how to set up jumpers. When the jumper cap is placed on pins, the jumper is “close”, if not, that means the jumper is “open”.



Pin opened



Pin closed





Pin1-2 closed

### 3.2 DETAIL SETTINGS

#### JPANEL1: Front Panel Header


This 24-pin connector includes Power-on, Reset, HDD LED, Power LED, Sleep button, speaker and IrDA Connection. It allows user to connect the PC case's front panel switch functions.

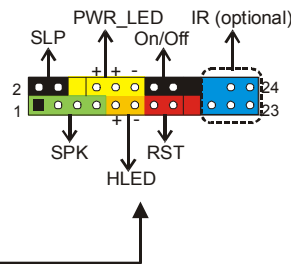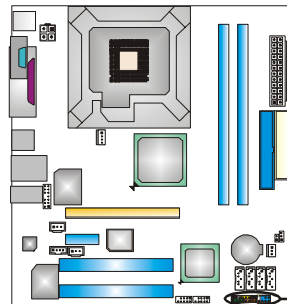

Pin	Assignment	Function	Pin	Assignment	Function
1	+5V	Speaker Connector	2	Sleep control	Sleep button
3	N/A		4	Ground	N/A
5	N/A		6	N/A	
7	Speaker	Hard drive LED	8	Power LED (+)	Power LED
9	HDD LED (+)		10	Power LED (+)	
11	HDD LED (-)		12	Power LED (-)	
13	Ground	Reset button	14	Power button	Power-on button
15	Reset control		16	Ground	
17	N/A	IrDA Connector	18	Key	IrDA Connector
19	N/A		20	Key	
21	+5V		22	Ground	
23	IRTX		24	IRRX	

### ATX Power Source Connector: JATXPWR1


JATXPWR1 allows user to connect 24-pin power connector on the ATX power supply.

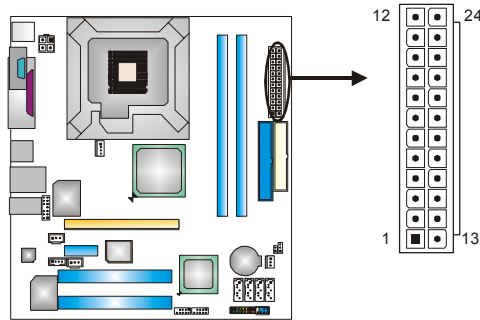

Pin	Assignment	Pin	Assignment
13	+3.3V	1	+3.3V
14	-12V	2	+3.3V
15	Ground	3	Ground
16	PS_ON	4	+5V
17	Ground	5	Ground
18	Ground	6	+5V
19	Ground	7	Ground
20	NC	8	PW_OK
21	+5V	9	Standby Voltage+5V
22	+5V	10	+12V
23	+5V	11	+12V
24	Ground	12	+3.3V

### JATXPWR2: ATX Power Source Connector


By connecting this connector, it will provide +12V to CPU power circuit.

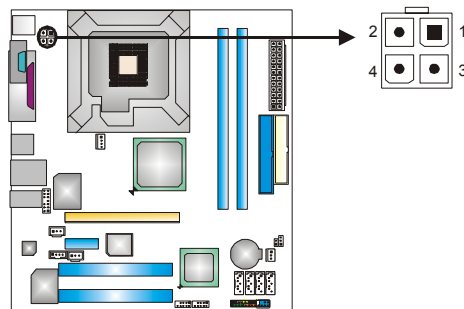

Pin	Assignment
1	+12V
2	+12V
3	Ground
4	Ground

### JUSB3/JUSB4: Headers for USB 2.0 Ports at Front Panel

This header allows user to connect additional USB cable on the PC front panel, and also can be connected with internal USB devices, like USB card reader.

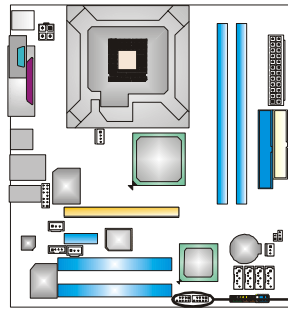


JUSB3 JUSB4

Pin	Assignment
1	+5V (fused)
2	+5V (fused)
3	USB-
4	USB-
5	USB+
6	USB+
7	Ground
8	Ground
9	Key
10	NC

### JAUDIO2: Front Panel Audio Header

This header allows user to connect the front audio output cable with the PC front panel. It will disable the output on back panel audio connectors.

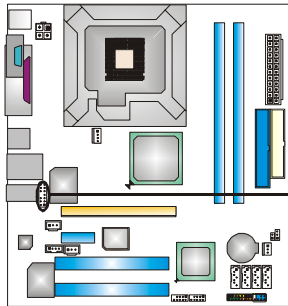


Pin	Assignment
1	Mic in/center
2	Ground
3	Mic power/Bass
4	Audio power
5	Right line out/ Speaker out Right
6	Right line out/ Speaker out Right
7	Reserved
8	Key
9	Left line out/ Speaker out Left
10	Left line out/ Speaker out Left
11	Right line in/ Rear speaker Right
12	Right line in/ Rear speaker Right
13	Left line in/ Rear speaker Left
14	Left line in/ Rear speaker Left




### JCDIN1: CD-ROM Audio-in Connector

This connector allows user to connect the audio source from the variety devices, like CD-ROM, DVD-ROM, PCI sound card, PCI TV turner card etc.

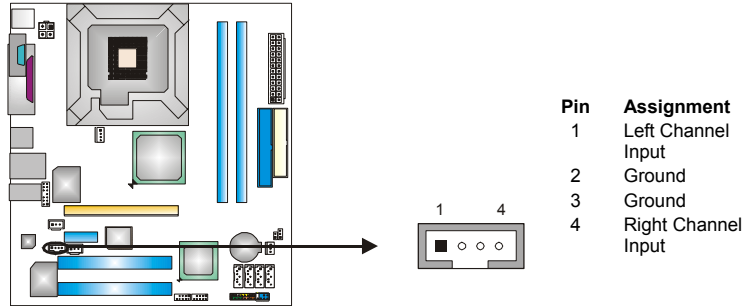

### JCMOS1: Clear CMOS Header

By placing the jumper on pin2-3, it allows user to restore the BIOS safe setting and the CMOS data, please carefully follow the procedures to avoid damaging the motherboard.

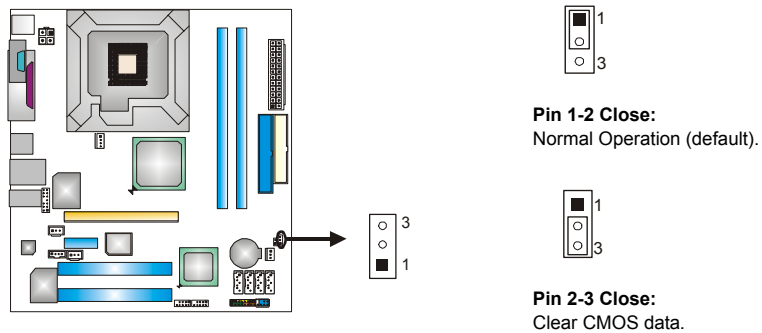


#### ※ Clear CMOS Procedures:

1. Remove AC power line.
2. Set the jumper to "Pin 2-3 close".
3. Wait for five seconds.
4. Set the jumper to "Pin 1-2 close".
5. Power on the AC.
6. Reset your desired password or clear the CMOS data.

### JCI1: Chassis Open Header


This connector allows system to monitor PC case open status. If the signal has been triggered, it will record to the CMOS and show the message on next boot-up.

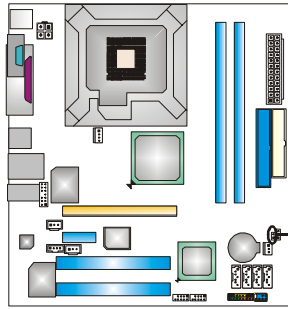

Pin	Assignment
1	Case open signal
2	Ground

### JSATA1~JSATA4: Serial ATA Connectors

The motherboard has a PCI to SATA Controller with 4 channels SATA interface, it satisfies the SATA2.0spec and with transfer rate of 3.0GB/s.

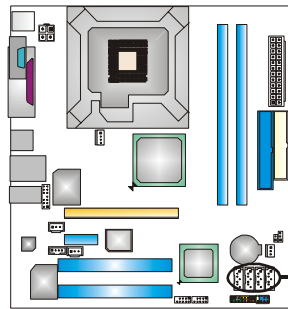


SATA4 SATA3 SATA2 SATA1

Pin	Assignment
1	Ground
2	TX+
3	TX-
4	Ground
5	RX-
6	RX+
7	Ground

### JSPDIF\_OUT1: Digital Audio-out Connector


This connector allows user to connect the PCI bracket SPDIF output header.

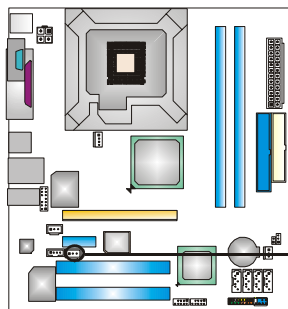

Pin	Assignment
1	+5V
2	SPDIF_OUT
3	Ground

**JSPDIF\_IN1 (optional): Digital Audio-in Connector**

This connector allows user to connect the PCI bracket SPDIF input header.

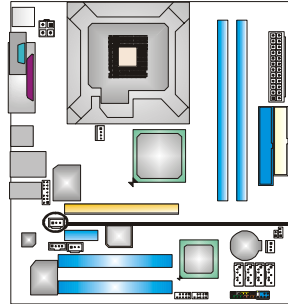


Pin	Assignment
1	+5V
2	SPDIF_IN
3	Ground

## CHAPTER 4: USEFUL HELP

### 4.1 DRIVER INSTALLATION NOTE

After you installed your operating system, please insert the Fully Setup Driver CD into your optical drive and install the driver for better system performance.

You will see the following window after you insert the CD

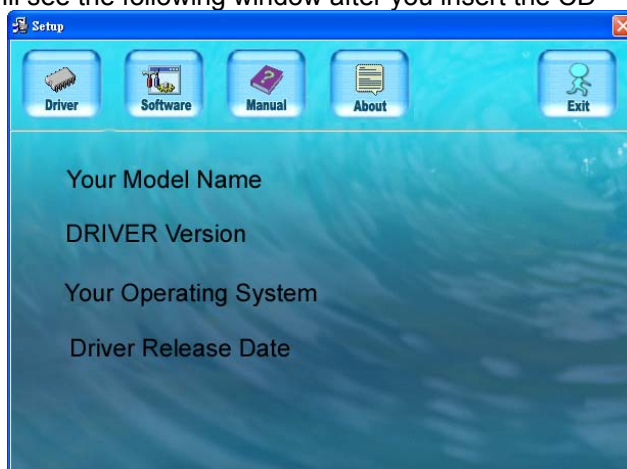

The setup guide will auto detect your motherboard and operating system.

**Note:**

If this window didn't show up after you insert the Driver CD, please use file browser to locate and execute the file **SETUP.EXE** under your optical drive.

#### A. Driver Installation

To install the driver, please click on the Driver icon. The setup guide will list the compatible driver for your motherboard and operating system. Click on each device driver to launch the installation program.

#### B. Software Installation

To install the software, please click on the Software icon. The setup guide will list the software available for your system, click on each software title to launch the installation program.

#### C. Manual

Aside from the paperback manual, we also provide manual in the Driver CD. Click on the Manual icon to browse for available manual.

**Note:**

You will need Acrobat Reader to open the manual file. Please download the latest version of Acrobat Reader software from <http://www.adobe.com/products/acrobat/readstep2.html>

## 4.2 AWARD BIOS BEEP CODE

Beep Sound	Meaning
One long beep followed by two short beeps	Video card not found or video card memory bad
High-low siren sound	CPU overheated System will shut down automatically
One Short beep when system boot-up	No error found during POST
Long beeps every other second	No DRAM detected or install

## 4.3 EXTRA INFORMATION

### A. BIOS Update

After you fail to update BIOS or BIOS is invaded by virus, the Boot-Block function will help to restore BIOS. If the following message is shown after boot-up the system, it means the BIOS contents are corrupted.



In this Case, please follow the procedure below to restore the BIOS:

1. Make a bootable floppy disk.
2. Download the Flash Utility "AWDFLASH.exe" from the Biostar website: [www.biostar.com.tw](http://www.biostar.com.tw)
3. Confirm motherboard model and download the respectively BIOS from Biostar website.
4. Copy "AWDFLASH.exe" and respectively BIOS into floppy disk.
5. Insert the bootable disk into floppy drive and press Enter.
6. System will boot-up to DOS prompt.
7. Type "Awdflash xxxx.bf/sn/py/r" in DOS prompt.  
(xxxx means BIOS name.)
8. System will update BIOS automatically and restart.
9. The BIOS has been recovered and will work properly.

### **B. CPU Overheated**

If the system shutdown automatically after power on system for seconds, that means the CPU protection function has been activated.

When the CPU is over heated, the motherboard will shutdown automatically to avoid a damage of the CPU, and the system may not power on again.

In this case, please double check:

1. The CPU cooler surface is placed evenly with the CPU surface.
2. CPU fan is rotated normally.
3. CPU fan speed is fulfilling with the CPU speed.

After confirmed, please follow steps below to relief the CPU protection function.

1. Remove the power cord from power supply for seconds.
2. Wait for seconds.
3. Plug in the power cord and boot up the system.

Or you can:

1. Clear the CMOS data.  
(See "Close CMOS Header: JCMOS1" section)
2. Wait for seconds.
3. Power on the system again.

## 4.4 TROUBLESHOOTING

Probable	Solution
<ol style="list-style-type: none"> <li>1. No power to the system at all Power light don't illuminate, fan inside power supply does not turn on.</li> <li>2. Indicator light on keyboard does not turn on.</li> </ol>	<ol style="list-style-type: none"> <li>1. Make sure power cable is securely plugged in.</li> <li>2. Replace cable.</li> <li>3. Contact technical support.</li> </ol>
System inoperative. Keyboard lights are on, power indicator lights are lit, and hard drive is spinning.	Using even pressure on both ends of the DIMM, press down firmly until the module snaps into place.
System does not boot from hard disk drive, can be booted from optical drive.	<ol style="list-style-type: none"> <li>1. Check cable running from disk to disk controller board. Make sure both ends are securely plugged in; check the drive type in the standard CMOS setup.</li> <li>2. Backing up the hard drive is extremely important. All hard disks are capable of breaking down at any time.</li> </ol>
System only boots from optical drive. Hard disk can be read and applications can be used but booting from hard disk is impossible.	<ol style="list-style-type: none"> <li>1. Back up data and applications files.</li> <li>2. Reformat the hard drive. Re-install applications and data using backup disks.</li> </ol>
Screen message says "Invalid Configuration" or "CMOS Failure."	Review system's equipment. Make sure correct information is in setup.
Cannot boot system after installing second hard drive.	<ol style="list-style-type: none"> <li>1. Set master/slave jumpers correctly.</li> <li>2. Run SETUP program and select correct drive types. Call the drive manufacturers for compatibility with other drives.</li> </ol>

## **CHAPTER 6: WARPSPEEDER™**



### **6.1 INTRODUCTION**

[WarpSpeeder™], a new powerful control utility, features three user-friendly functions including Overclock Manager, Overvoltage Manager, and Hardware Monitor.

With the Overclock Manager, users can easily adjust the frequency they prefer or they can get the best CPU performance with just one click. The Overvoltage Manager, on the other hand, helps to power up CPU core voltage and Memory voltage. The cool Hardware Monitor smartly indicates the temperatures, voltage and CPU fan speed as well as the chipset information. Also, in the About panel, you can get detail descriptions about BIOS model and chipsets. In addition, the frequency status of CPU, memory, AGP and PCI along with the CPU speed are synchronically shown on our main panel.

Moreover, to protect users' computer systems if the setting is not appropriate when testing and results in system fail or hang, [WarpSpeeder™] technology assures the system stability by automatically rebooting the computer and then restart to a speed that is either the original system speed or a suitable one.


### **6.2 SYSTEM REQUIREMENT**

OS Support: Windows 98 SE, Windows Me, Windows 2000, Windows XP  
DirectX: DirectX 8.1 or above. (The Windows XP operating system includes DirectX 8.1. If you use Windows XP, you do not need to install DirectX 8.1.)




### 6.3 INSTALLATION

1. Execute the setup execution file, and then the following dialog will pop up. Please click “Next” button and follow the default procedure to install.

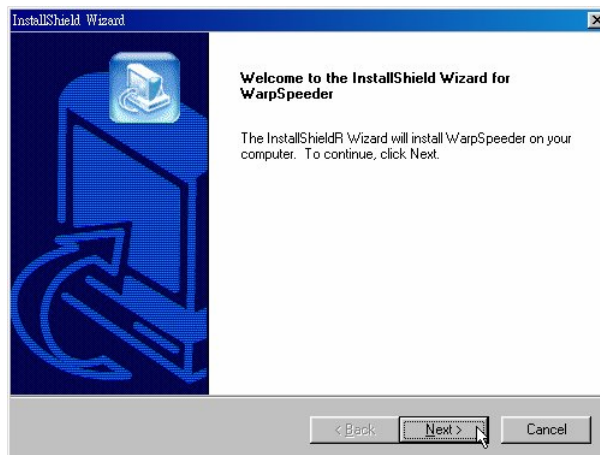

2. When you see the following dialog in setup procedure, it means setup is completed. If the “Launch the WarpSpeeder Tray Utility” checkbox is checked, the Tray Icon utility and [WarpSpeeder™] utility will be automatically and immediately launched after you click “Finish” button.

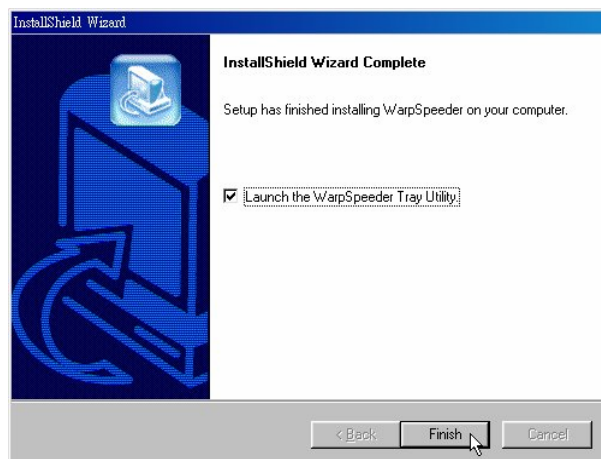


#### Usage:

The following figures are just only for reference, the screen printed in this user manual will change according to your motherboard on hand.


## 6.4 WARPSPEDER™

### 1. Tray Icon:

Whenever the Tray Icon utility is launched, it will display a little tray icon on the right side of Windows Taskbar.

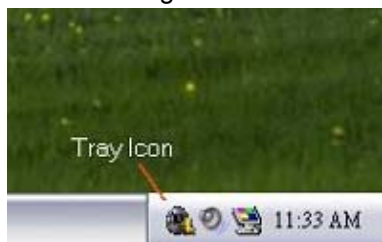

This utility is responsible for conveniently invoking [WarpSpeeder™] Utility. You can use the mouse by clicking the left button in order to invoke [WarpSpeeder™] directly from the little tray icon or you can right-click the little tray icon to pop up a popup menu as following figure. The "Launch Utility" item in the popup menu has the same function as mouse left-click on tray icon and "Exit" item will close Tray Icon utility if selected.

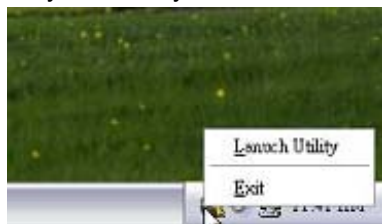


## 2. Main Panel

If you click the tray icon, [WarpSpeeder™] utility will be invoked. Please refer to the following figure; the utility's first window you will see is Main Panel.

### Main Panel contains features as follows:

- Display the CPU Speed, CPU external clock, Memory clock, AGP clock, and PCI clock information.
- Contains About, Voltage, Overclock, and Hardware Monitor Buttons for invoking respective panels.
- With a user-friendly Status Animation, it can represent 3 overclock percentage stages:
  - Man walking→overclock percentage from 100% ~ 110 %
  - Panther running→overclock percentage from 110% ~ 120%
  - Car racing→overclock percentage from 120% ~ above

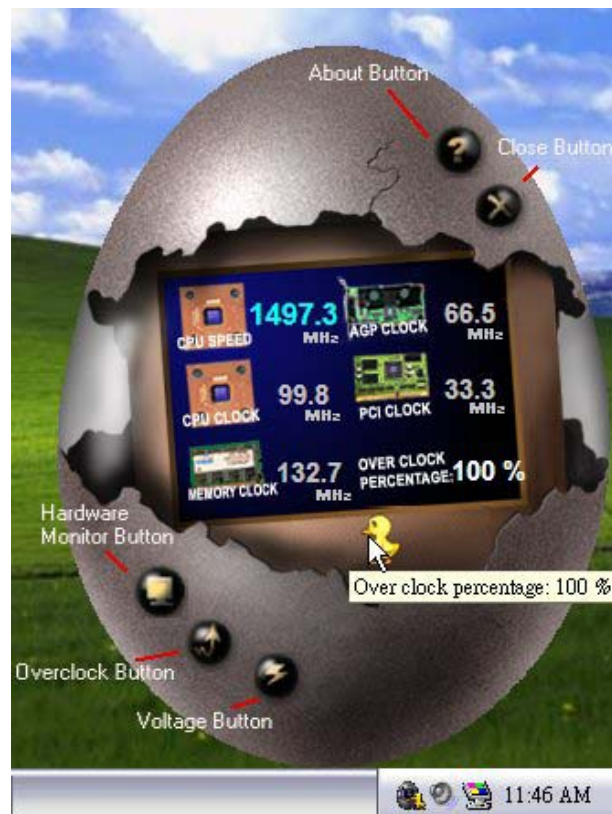

### 3. Voltage Panel

Click the Voltage button in Main Panel, the button will be highlighted and the Voltage Panel will slide out to up as the following figure.

In this panel, you can decide to increase CPU core voltage and Memory voltage or not. The default setting is “No”. If you want to get the best performance of overclocking, we recommend you click the option “Yes”.



#### 4. Overclock Panel

Click the Overclock button in Main Panel, the button will be highlighted and the Overclock Panel will slide out to left as the following figure.




**Overclock Panel contains the these features:**

- “-3MHz button”, “-1MHz button”, “+1MHz button”, and “+3MHz button”:  
provide user the ability to do real-time overclock adjustment.

**Warning:**

Manually overclock is potentially dangerous, especially when the overclocking percentage is over 110 %. We strongly recommend you verify every speed you overclock by click the Verify button. Or, you can just click Auto overclock button and let [WarpSpeeder™] automatically gets the best result for you.

- “Recovery Dialog button”:  
Pop up the following dialog. Let user select a restoring way if system need to do a fail-safe reboot.

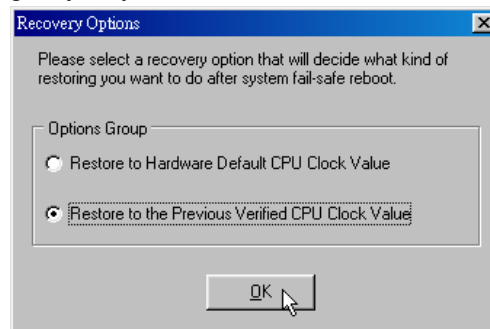

## Motherboard Manual

- c. “Auto-overclock button”: User can click this button and [WarpSpeeder™] will set the best and stable performance and frequency automatically. [WarpSpeeder™] utility will execute a series of testing until system fail. Then system will do fail-safe reboot by using Watchdog function. After reboot, the [WarpSpeeder™] utility will restore to the hardware default setting or load the verified best and stable frequency according to the Recovery Dialog’s setting.
- d. “Verify button”: User can click this button and [WarpSpeeder™] will proceed a testing for current frequency. If the testing is ok, then the current frequency will be saved into system registry. If the testing fail, system will do a fail-safe rebooting. After reboot, the [WarpSpeeder™] utility will restore to the hardware default setting or load the verified best and stable frequency according to the Recovery Dialog’s setting.

**Note:**

Because the testing programs, invoked in Auto-overclock and Verify, include DirectDraw, Direct3D and DirectShow tests, the DirectX 8.1 or newer runtime library is required. And please make sure your display card’s color depth is High color (16 bit) or True color( 24/32 bit ) that is required for Direct3D rendering.

### 5. Hardware Monitor Panel

Click the Hardware Monitor button in Main Panel, the button will be highlighted and the Hardware Monitor panel will slide out to left as the following figure.


In this panel, you can get the real-time status information of your system. The information will be refreshed every 1 second.



## 6. About Panel

Click the “about” button in Main Panel, the button will be highlighted and the About Panel will slide out to up as the following figure.

In this panel, you can get model name and detail information in hints of all the chipset that are related to overclocking. You can also get the mainboard’s BIOS model and the Version number of [WarpSpeeder™] utility.

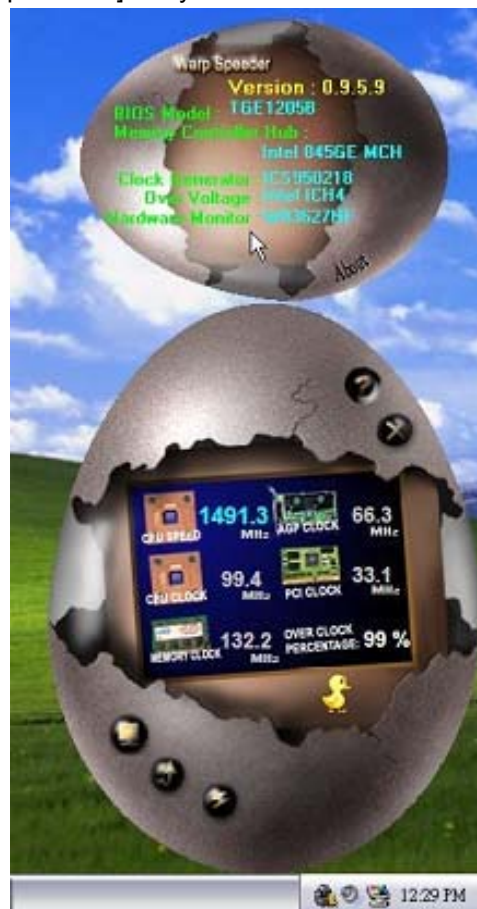

### Note:

Because the overclock, overvoltage, and hardware monitor features are controlled by several separate chipset, [WarpSpeeder™] divide these features to separate panels. If one chipset is not on board, the correlative button in Main panel will be disabled, but will not interfere other panels’ functions. This property can make [WarpSpeeder™] utility more robust.

## APPENDENCIES: SPEC IN OTHER LANGUAGE

### GERMAN

Spezifikationen		
CPU	LGA 775 Intel Pentium 4 / Pentium D / Celeron D Prozessoren mit bis zu 3,8 GHz	Unterstützt Hyper-Threading / Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture-64 / Extended Memory 64 Technology
FSB	533 / 800 MHz	
Chipsatz	Intel 945PL	Intel ICH7
Super E/A	ITE 8712F Bietet die häufig verwendeten alten Super E/A-Funktionen. Low Pin Count-Schnittstelle	Umgebungskontrolle, Hardware-Überwachung Lüfterdrehzahl-Controller "Smart Guardian"-Funktion von ITE
Arbeitsspeicher	DDR2 DIMM-Steckplätze x 2 Jeder DIMM unterstützt 256/512MB & 1GB DDR2. Max. 2GB Arbeitsspeicher	Dual-Kanal DDR2 Speichermodul Unterstützt DDR2 400 / 533 registrierte DIMMs. Nicht-ECC DIMMs werden nicht unterstützt.
IDE	Integrierter IDE-Controller Ultra DMA 33 / 66 / 100 Bus Master-Modus	Unterstützt PIO-Modus 0~4,
SATA II	Integrierter Serial ATA-Controller Datentransferrate bis zu 3Gb/s	Konform mit der SATA-Spezifikation Version 2.0.
LAN	Realtek RTL 8100C / RTL 8100SC (optional)	10 / 100 Mb/s Auto-Negotiation (Gigabit-Bandbreite nur beim RTL 8100SC) Halb-/ Vollduplex-Funktion
Audio-Codec	ALC 655	6-Kanal-Audioausgabe AC'97 Version 2.3
Steckplätze	PCI-Steckplatz x2 PCI Express x16 Steckplatz x1 PCI Express x 1-Steckplatz x1	
Onboard-An	Diskettenlaufwerkanschluss x1	Jeder Anschluss unterstützt 2 Diskettenlaufwerke



Spezifikationen			
anschluss	IDE-Anschluss	x1	Jeder Anschluss unterstützt 2 IDE-Laufwerke
	SATA-Anschluss	x4	Jeder Anschluss unterstützt 1 SATA-Laufwerk
	Fronttafelanschluss	x1	Unterstützt die Fronttafel-Funktionen
	Front-Audioanschluss	x1	Unterstützt die Fronttafel-Audioanschlussfunktion
	CD-IN-Anschluss	x1	Unterstützt die CD Audio-In-Funktion
	S/PDIF-Ausgangsanschluss	x1	Unterstützt die digitale Audioausgabefunktion
	S/PDIF Eingangsanschluss (optional) x1		Unterstützt die digitale Audioeingabefunktion
	CPU-Lüfter-Sockel	x1	CPU-Lüfterstromversorgungsanschluss (mit Smart Fan-Funktion)
	System-Lüfter-Sockel	x1	System-Lüfter-Stromversorgungsanschluss
	"Gehäuse offen"-Sockel	x1	Zur Erkennung eines geöffneten Gehäuses
	"CMOS löschen"-Sockel	x1	
	USB-Anschluss	x2	Jeder Anschluss unterstützt 2 Fronttafel-USB-Anschlüsse
	Stromanschluss (24-polig)	x1	
Stromanschluss (4-polig)	x1		
Rückseiten-E/A	PS/2-Tastatur	x1	
	PS/2-Maus	x1	
	Serieller Anschluss	x1	
	LAN-Anschluss	x1	
	USB-Anschluss	x4	
	Audioanschluss	x3	
Platinengröße.	219 mm (B) X 236 mm (L)		
OS-Unterstützung	Windows 2K / XP	Biostar behält sich das Recht vor, ohne Ankündigung die Unterstützung für ein Betriebssystem hinzuzufügen oder zu entfernen.	

**FRANCE**

SPEC		
UC	LGA 775 Processeurs Intel Pentium 4 / Pentium D / Celeron D jusqu'à 3,8 GHz	Prend en charge les technologies Hyper-Threading / d'exécution de bit de désactivation / Intel SpeedStep® optimisée/ d'architecture Intel 64 / de mémoire étendue 64
Bus frontal	533 / 800 / 1066 MHz	
Chipset	Intel 945PL	Intel ICH7
Super E/S	ITE 8712F Fournit la fonctionnalité de Super E/S patrimoniales la plus utilisée. Interface à faible compte de broches	Initiatives de contrôle environnementales, Moniteur de matériel Contrôleur de vitesse de ventilateur Fonction "Gardien intelligent" de l'ITE
Mémoire principale	Fentes DDR2 DIMM x 2 Chaque DIMM prend en charge des DDR2 de 256/512 Mo et 1Go Capacité mémoire maximale de 2 Go	Module de mémoire DDR2 à mode à double voie Prend en charge la DDR2 400 / 533 Les DIMM à registres et DIMM sans code correcteurs d'erreurs ne sont pas prises en charge
IDE	Contrôleur IDE intégré Mode principale de Bus Ultra DMA 33 / 66 / 100	Prend en charge le mode PIO 0~4,
SATA SATA II	Contrôleur Serial ATA intégré : Taux de transfert jusqu'à 3 Go/s.	Conforme à la spécification SATA Version 2.0
LAN	Realtek RTL 8100C / RTL 8100SC (optional)	10 / 100 Mb/s négociation automatique (La bande passante Gigabit est pour le RTL 8100SC uniquement) Half / Full duplex capability
Codec audio	ALC 655	Sortie audio à 6 voies AC'97 Version 2.3
Fentes	Fente PCI x2 Slot PCI Express x16 x1 Slot PCI Express x 1 x1	
Connecteur embarqué	Connecteur de disquette x1 Connecteur IDE x1	Chaque connector prend en charge 2 lecteurs de disquettes Chaque connecteur prend en charge 2 périphériques IDE

SPEC			
	Connecteur SATA	x4	Chaque connecteur prend en charge 1 périphérique SATA
	Connecteur du panneau avant	x1	Prend en charge les équipements du panneau avant
	Connecteur Audio du panneau avant	x1	Prend en charge la fonction audio du panneau avant
	Connecteur d'entrée CD	x1	Prend en charge la fonction d'entrée audio de CD
	Connecteur de sortie S/PDIF	x1	Prend en charge la fonction de sortie audio numérique
	Connecteur d'entrée S/PDIF (en option)	x1	Prend en charge la fonction d'entrée audio numérique
	Embase de ventilateur UC	x1	Alimentation électrique du ventilateur UC (avec fonction de ventilateur intelligent)
	Embase de ventilateur système	x1	Alimentation électrique du ventilateur système
	Embase d'ouverture de châssis	x1	Pour la fonction de détection d'intrus dans le châssis
	Embase d'effacement CMOS	x1	
	Connecteur USB	x2	Chaque connecteur prend en charge 2 ports USB de panneau avant
	Connecteur d'alimentation (24 broches)	x1	
	Connecteur d'alimentation (4 broches)	x1	
E/S du panneau arrière	Clavier PS/2	x1	
	Souris PS/2	x1	
	Port série	x1	
	Port LAN	x1	
	Port USB	x4	
	Fiche audio	x3	
Dimensions de la carte	219 mm (l) X 236 mm (H)		
Support SE	Windows 2K / XP		Biostar se réserve le droit d'ajouter ou de supprimer le support de SE avec ou sans préavis.

**ITALIAN**

SPECIFICA		
CPU	LGA 775	Supporto di Hyper-Threading / Execute Disable
	Processore Intel Pentium 4 / Pentium D / Celeron D fino a 3.8 GHz	Bit / Enhanced Intel SpeedStep® / Architettura Intel 64 / Tecnologia Extended Memory 64
FSB	533 / 800 MHz	
Chipset	Intel 945PL	Intel ICH7
Super I/O	ITE 8712F	Funzioni di controllo dell'ambiente:
	Fornisce le funzionalità legacy Super I/O usate più comunemente. Interfaccia LPC (Low Pin Count)	Monitoraggio hardware Controller velocità ventolina Funzione "Smart Guardian" di ITE
Memoria principale	Alloggi DIMM DDR2 x 2	Modulo di memoria DDR2 a canale doppio
	Ciascun DIMM supporta DDR2 256/512MB e 1GB Capacità massima della memoria 2GB	Supporto di DDR2 400 / 533 DIMM registrati e DIMM Non-ECC non sono supportati
IDE	Controller IDE integrato	
	Modalità Bus Master Ultra DMA 33 / 66 / 100	Supporto modalità PIO Mode 0-4
SATA II	Controller Serial ATA integrato	
	Velocità di trasferimento dei dati fino a 3 Gb/s.	Compatibile specifiche SATA Versione 2.0.
LAN		Negoziazione automatica 10 / 100 Mb/s (la larghezza di banda Gigabit è solo per RTL 8100SC)
	Realtek RTL 8100C / RTL 8100SC(optional)	Capacità Half / Full Duplex
Codec audio		Uscita audio 6 canali
	ALC 655	AC'97 Versione 2.3
Alloggi	Alloggio PCI	x2
	Alloggio PCI Express x16	x1
	Alloggio PCI Express x1	x1
Connettori	Connettore floppy	x1 Ciascun connettore supporta 2 unità Floppy

SPECIFICA			
su scheda	Connettore IDE	x1	Ciascun connettore supporta 2 unità IDE
	Connettore SATA	x4	Ciascun connettore supporta 1 unità SATA
	Connettore pannello frontale	x1	Supporta i servizi del pannello frontale
	Connettore audio frontale	x1	Supporta la funzione audio pannello frontale
	Connettore CD-in	x1	Supporta la funzione input audio CD
	Connettore output SPDIF	x1	Supporta la funzione d'output audio digitale
	Connettore input S/PDIF (optional)	x1	Supporta la funzione d'input audio digitale
	Collettore ventolina CPU	x1	Alimentazione ventolina CPU (con funzione Smart Fan)
	Collettore ventolina sistema	x1	Alimentazione ventolina di sistema
	Collettore apertura telaio	x1	Per la funzione di rilevamento intrusione telaio
	Collettore cancellazione CMOS	x1	
	Connettore USB	x2	Ciascun connettore supporta 2 porte USB pannello frontale
Connettore alimentazione (24 pin)	x1		
Connettore alimentazione (4 pin)	x1		
I/O pannello posteriore	Tastiera PS/2	x1	
	Mouse PS/2	x1	
	Porta seriale	x1	
	Porta LAN	x1	
	Porta USB	x4	
Connettore audio	x3		
Dimensioni i scheda	219 mm (larghezza) x 236 mm (altezza)		
Sistemi operativi supportati	Windows 2K / XP		Biostar si riserva il diritto di aggiungere o rimuovere il supporto di qualsiasi sistema operativo senza preavviso.

**SPANISH**

Especificación		
CPU	LGA 775 Procesador Intel Pentium 4 / Pentium D / Celeron D hasta 3,8 GHz	Admite Hyper-Threading / Bit de deshabilitación de ejecución / Intel SpeedStep® Mejorado / Intel Architecture-64 / Tecnología Extended Memory 64
FSB	533 / 800 MHz	
Conjunto de chips	Intel 945PL	Intel ICH7
Súper E/S	ITE 8712F Le ofrece las funcionalidades heredadas de uso más común Súper E/S. Interfaz de cuenta Low Pin	Iniciativas de control de entorno, Monitor hardware Controlador de velocidad de ventilador Función "Guardia inteligente" de ITE
Memoria principal	Ranuras DIMM DDR2 x 2 Cada DIMM admite DDR de 256/512MB y 1GB Capacidad máxima de memoria de 2GB	Módulo de memoria DDR2 de canal Doble Admite DDR2 de 400 / 533 No admite DIMM registrados o DIMM no compatibles con ECC
IDE	Controlador IDE integrado Modo bus maestro Ultra DMA 33 / 66 / 100	Soporte los Modos PIO 0~4,
SATA II	Controlador ATA Serie Integrado Tasas de transferencia de hasta 3 Gb/s.	Compatible con la versión SATA 2.0.
Red Local	Realtek RTL 8100C / RTL 8100SC (opcional)	Negociación de 10 / 100 Mb/s (el ancho de banda Gigabit es únicamente para 8100SC) Funciones Half / Full dúplex
Códecs de sonido	ALC 655	Salida de sonido de 6 canales AC'97 Versión 2.3
Ranuras	Ranura PCI X2 Ranura PCI Express x16 X1 Ranura PCI express x 1 X1	

Especificación			
Conectores en placa	Conector disco flexible	X1	Cada conector soporta 2 unidades de disco flexible
	Conector IDE	X1	Cada conector soporta 2 dispositivos IDE
	Conector SATA	X4	Cada conector soporta 1 dispositivos SATA
	Conector de panel frontal	X1	Soporta instalaciones en el panel frontal
	Conector de sonido frontal	X1	Soporta funciones de sonido en el panel frontal
	Conector de entrada de CD	X1	Soporta función de entrada de sonido de CD
	Conector de salida S/PDIF	X1	Soporta función de salida de sonido digital
	Conector de entrada S/PDIF (opcional)	x1	Soporta función de entrada de sonido digital
	Cabecera de ventilador de CPU	X1	Fuente de alimentación de ventilador de CPU (con función Smart Fan)
	Cabecera de ventilador de sistema	X1	Fuente de alimentación de ventilador de sistema
	Cabecera de chasis abierto	X1	Función de detección de intrusos en el chasis
	Cabecera de borrado de CMOS	X1	
	Conector USB	X2	Cada conector soporta 2 puertos USB frontales
	Conector de alimentación (24 patillas)	X1	
Conector de alimentación (4 patillas)	X1		
Panel trasero de E/S	Teclado PS/2	X1	
	Ratón PS/2	X1	
	Puerto serie	X1	
	Puerto de red local	X1	
	Puerto USB	X4	
	Conector de sonido	X3	
Tamaño de la placa	219mm. (A) X 236 Mm. (H)		
Soporte de sistema operativo	Windows 2K / XP		Biostar se reserva el derecho de añadir o retirar el soporte de cualquier SO con o sin aviso previo.

**PORTUGUESE**

ESPECIFICAÇÕES		
CPU	LGA 775 Processador Intel Pentium 4 / Pentium D / Celeron D até 3,8 GHz	Suporta as tecnologias Hyper-Threading / Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture -64 / Extended Memory 64
FSB	533 / 800 MHz	
Chipset	Intel 945PL	Intel ICH7
Especificação Super I/O	ITE 8712F Proporciona as funcionalidades mais utilizadas em termos da especificação Super I/O. Interface LPC (Low Pin Count).	Iniciativas para controlo do ambiente Monitorização do hardware Controlador da velocidade da ventoinha Função "Smart Guardian" da ITE
Memória principal	Ranuras DIMM DDR2 x 2 Cada módulo DIMM suporta uma memória DDR2 de 256/512 MB & 1 GB Capacidade máxima de memória: 2 GB	Módulo de memória DDR2 de canal duplo Suporta módulos DDR2 400 / 533 Os módulos DIMM registados e os DIMM Non-ECC não são suportados
IDE	Controlador IDE integrado Modo Bus master Ultra DMA 33 / 66 / 100	Suporta o modo PIO 0~4,
SATA II	Controlador Serial ATA integrado Velocidades de transmissão de dados até 3 Gb/s.	Compatibilidade com a especificação SATA versão 2.0.
LAN	Realtek RTL 8100C / RTL 8100SC(opcional)	Auto negociação de 10 / 100 Mb/s (a largura de banda Gigabit refere-se apenas à especificação RTL 8100SC) Capacidade semi/full-duplex
Codec de som	ALC 655	Saída de áudio de 6 canais AC'97 Versão 2.3
Ranuras	Ranhura PCI x2 Ranhura PCI Express x16 x1 Ranhura PCI Express x 1 x1	
Conectores na placa	Conector da unidade de disquetes x1 Conector IDE x1	Cada conector suporta 2 unidades de disquetes Cada conector suporta 2 dispositivos IDE



ESPECIFICAÇÕES			
	Conector SATA	x4	Cada conector suporta 1 dispositivo SATA
	Conector do painel frontal	x1	Para suporte de várias funções no painel frontal
	Conector de áudio frontal	x1	Suporta a função de áudio no painel frontal
	Conector para entrada de CDs	x1	Suporta a entrada de áudio a partir de CDs
	Conector de saída S/PDIF	x1	Suporta a saída de áudio digital
	Conector de entrada S/PDIF (opcional)	x1	Suporta a entrada de áudio digital
	Conector da ventoinha da CPU	x1	Alimentação da ventoinha da CPU (com a função Smart Fan)
	Conector da ventoinha do sistema	x1	Alimentação da ventoinha do sistema
	Conector para detecção da abertura do chassis	x1	Para detectar qualquer intrusão no chassis
	Conector para limpeza do CMOS	x1	
	Conector USB	x2	Cada conector suporta 2 portas USB no painel frontal
	Conector de alimentação (24 pinos)	x1	
	Conector de alimentação (4 pinos)	x1	
Entradas/ Saídas no painel traseiro	Teclado PS/2	x1	
	Rato PS/2	x1	
	Porta série	x1	
	Porta LAN	x1	
	Porta USB	x4	
	Tomada de áudio	x3	
Tamanho da placa	219 mm (L) X 236 mm (A)		
Sistemas operativos suportados	Windows 2K / XP		A Biostar reserva-se o direito de adicionar ou remover suporte para qualquer sistema operativo com ou sem aviso prévio.

**POLISH**

SPEC		
Procesor	LGA 775 Procesor Intel Pentium 4 / Pentium D / Celeron D do 3,8 GHz	Obsługa Hyper-Threading / Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture-64 / Extended Memory 64 Technology
FSB	533 / 800 MHz	
Chipset	Intel 945PL	Intel ICH7
Pamięć główna	Gniazda DDR2 DIMM x 2 Każde gniazdo DIMM obsługuje moduły 256/512MB oraz 1GB DDR2 Maks. wielkość pamięci 2GB	Moduł pamięci DDR2 z trybem podwójnego kanału Obsługa DDR2 400 / 533 Brak obsługi Registered DIMM oraz Non-ECC DIMM
Super I/O	ITE 8712F Zapewnia najbardziej powszechne funkcje Super I/O. Interfejs Low Pin Count	Funkcje kontroli warunków pracy, Monitor H/W Kontroler prędkości wentylatora Funkcja ITE "Smart Guardian"
IDE	Zintegrowany kontroler IDE Ultra DMA 33 / 66 / 100 Tryb Bus Master	obsługa PIO tryb 0~4,
SATA II	Zintegrowany kontroler Serial ATA Transfer danych do 3 Gb/s.	Zgodność ze specyfikacją SATA w wersji 2.0.
LAN	Realtek RTL 8100C / RTL 8100SC (opcja)	10 / 100 Mb/s z automatyczną negocjacją szybkości (Pasma gigabitowe wyłącznie dla RTL 8100SC) Działanie w trybie połowicznego / pełnego dupleksu
Kodek dźwiękowy	ALC 655	6 kanałowe wyjście audio AC'97 w wersji 2.3
Gniazda	Gniazdo PCI x2 Gniazdo PCI Express x16 x1 Gniazdo PCI Express x 1 x1	
Złącza	Złącze napędu dyskietek x1	Każde złącze obsługuje 2 napędy dyskietek

SPEC			
wbudowane	Złącze IDE	x1	Każde złącze obsługuje 2 urządzenia IDE
	Złącze SATA	x4	Każde złącze obsługuje 1 urządzenie SATA
	Złącze panela przedniego	x1	Obsługa elementów panela przedniego
	Przednie złącze audio	x1	Obsługa funkcji audio na panelu przednim
	Złącze wejścia CD	x1	Obsługa funkcji wejścia audio CD
	Złącze wyjścia S/PDIF	x1	Obsługa funkcji cyfrowego wyjścia audio
	Złącze wejścia S/PDIF (opcja)	x1	Obsługa funkcji cyfrowego wejścia audio
	Złącze główkowe wentylatora procesora	x1	Zasilanie wentylatora procesora (z funkcją Smart Fan)
	Złącze główkowe wentylatora systemowego	x1	Zasilanie wentylatora systemowego
	Złącze główkowe otwarcia obudowy	x1	Do funkcji wykrywania naruszenia obudowy
	Złącze główkowe kasowania CMOS	x1	
	Złącze USB	x2	Każde złącze obsługuje 2 porty USB na panelu przednim
	Złącze zasilania (24 pinowe)	x1	
	Złącze zasilania (4 pinowe)	x1	
Back Panel I/O	Klawiatura PS/2	x1	
	Mysz PS/2	x1	
	Port szeregowy	x1	
	Port LAN	x1	
	Port USB	x4	
	Gniazdo audio	x3	
Wymiary płyty	219 mm (S) X 236 mm (W)		
Obsługa systemu operacyjnego	Windows 2K / XP		Biostar zastrzega sobie prawo dodawania lub odwoływania obsługi dowolnego systemu operacyjnego bez powiadomienia.

**RUSSIAN**

СПЕЦ.		
CPU (центральный процессор)	LGA 775 Процессор Intel Pentium 4 / Pentium D / Celeron D до 3.8 ГГц	Поддержка технологий Hyper-Threading / Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture-64 / Extended Memory 64 Technology
FSB	533 / 800 МГц	
Набор микросхем	Intel 945PL	Intel ICH7
Основная память	Слоты DDR2 DIMM x 2 Каждый модуль DIMM поддерживает 256/512МБ & 1ГБ DDR2 Максимальная ёмкость памяти 2 ГБ	Модуль памяти с двухканальным режимом DDR2 Поддержка DDR2 400 / 533 Не поддерживает зарегистрированные модули DIMM and Non-ECC DIMM
Super I/O	ITE 8712F Обеспечивает наиболее используемые действующие функциональные возможности Super I/O. Интерфейс с низким количеством выводов	Инициативы по охране окружающей среды, Аппаратный монитор Регулятор скорости Функция ITE "Smart Guardian" (Интеллектуальная защита)
IDE	Встроенное устройство управления встроенными интерфейсами устройств	Режим "хозяина" шины Ultra DMA 33 / 66 / 100 Поддержка режима PIO 0~4,
SATA II	Встроенное последовательное устройство управления ATA	скорость передачи данных до 3 гигабит/с. Соответствие спецификации SATA версия 2.0.
Локальная сеть	Realtek RTL 8100C / RTL 8100SC (дополнительно)	Автоматическое согласование 10 / 100 Мб/с (гигабитная пропускная способность только для гигабитного физического уровня) Частичная / полная дуплексная способность
Звуковой кодек	ALC 655	Шестиканальный звуковой выход AC'97 Версия 2.3
Слоты	Слот PCI x2 Слот PCI Express x16 x1 Слот PCI Express x 1 x1	
Встроенный разъём	Разъём НГМД x1 Разъём IDE x1	Каждый разъём поддерживает 2 накопителя на гибких магнитных дисках Каждый разъём поддерживает 2 встроенных интерфейса накопителей

СПЕЦ.			
	Разъём SATA	x4	Каждый разъём поддерживает 1 устройство SATA
	Разъём на лицевой панели	x1	Поддержка устройств на лицевой панели
	Входной звуковой разъём	x1	Поддержка звуковых функций на лицевой панели
	Разъём ввода для CD	x1	Поддержка функции ввода для CD
	Разъём вывода для S/PDIF	x1	Поддержка вывода цифровой звуковой функции
	Разъём ввода для S/PDIF (дополнительно)	x1	Поддержка ввода цифровой звуковой функции
	Контактирующее приспособление вентилятора центрального процессора	x1	Источник питания для вентилятора центрального процессора (с функцией интеллектуального вентилятора)
	Контактирующее приспособление вентилятора системы	x1	Источник питания для вентилятора системы
	Шасси открытого контактирующего приспособления	x1	Для функции обнаружения злоумышленника шасси
	Открытое контактирующее приспособление CMOS	x1	
	USB-разъём	x2	Каждый разъём поддерживает 2 USB-порта на лицевой панели
	Разъем питания (24 вывод)	x1	
	Разъем питания (4 вывод)	x1	
Задняя панель средств ввода-вывода	Клавиатура PS/2	x1	
	Мышь PS/2	x1	
	Последовательный порт	x1	
	Порт LAN	x1	
	USB-порт	x4	
	Гнездо для подключения наушников	x3	
Размер панели	219 мм (Ш) X 236 мм (В)		
Поддержка OS	Windows 2K / XP		Biostar сохраняет за собой право добавлять или удалять средства обеспечения для OS с или без предварительного уведомления.

## ARABIC

المواصفات		
وحدة المعالجة المركزية	LGA 775 Intel Pentium 4 / Pentium D / Celeron D تدعم تقنيات Hyper-Threading / Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture-64 / Extended Memory 64 Technology	بتردد يصل إلى 3.8 جيجا هرتز
الناقل الأمامي الجانبي		ميغا هرتز 533 / 800 تردد
مجموعة الشرائح	Intel ICH7	Intel 945PL
الذاكرة الرئيسية	مزدوجة القناة DDR2 وحدة ذاكرة ميغا بايت 400 / 533 ساعات DDR2 تدعم الذاكرة من نوع ECC المسجلة وتلك التي لا تتوافق مع DIMM لا تدعم رقائق الذاكرة	قناة DDR2 DIMM عدد 2 تدعم ذاكرة من نوع DIMM تدعم كل قناة ميغا بايت و 1 جيجا 256/512 ساعة DDR2 بايت سعة ذاكرة قصوى 2 جيجا بايت
Super I/O	وسائل التحكم في البيئة: مراقب لمعرفة حالة الأجهزة مراقب في سرعة المروحة ITE من "Smart Guardian" وظيفة	ITE 8712F الأكثر استخداماً. Super I/O توفر وظيفة Low Pin Count Interface تدعم تقنية
منفذ IDE	متكامل IDE PIO Mode 0~4 دعم وضع	Ultra DMA 33 / 66 / 100 ناقل بتقنية وضع رئيسي
SATA II	الإصدار SATA مطابقة لمواصفات 2.0.	متكامل Serial ATA متحكم نقل البيانات بسرعات تصل إلى 3 جيجابايت/ثانية.
شبكة داخلية	تفاوض تلقائي 10/100 ميغا بايت / ثانية و 1 جيجا بايت/ثانية RTL 8100SC (النطاق الترددي للجيجابايت مقصور فقط على إمكانية النقل المزدوج الكامل/النصفي	Realtek RTL 8100C / RTL 8100SC (اختياري)
كوديك الصوت	قنوات لخرج الصوت 6 AC'97 من 2.3 الإصدار	ALC655
الفتحات	عدد 2 عدد 1 عدد 1	قناة PCI قناة PCI Express x 16 قناة PCI Express x 1

المواصفات		
يدعم محركين للأقراص المرنة	عدد 1	منفذ محرك أقراص مرنة
IDE يدعم كل منفذ اثنين من أجهزة	عدد 1	منفذ IDE
SATA يدعم كل منفذ واحد من أجهزة	عدد 4	منفذ SATA
يدعم تجهيزات اللوحة الأمامية	عدد 1	منفذ اللوحة الأمامية
يدعم وظيفة الصوت باللوحة الأمامية	عدد 1	منفذ الصوت الأمامي
يدعم وظيفة دخل صوت القرص المدمج	عدد 1	منفذ CD-IN
يدعم وظيفة خرج الصوت الرقمي	عدد 1	منفذ خرج S/PDIF
يدعم وظيفة دخل الصوت الرقمي	عدد 1	منفذ دخل S/PDIF (اختياري)
Smart Fan(لتوصيل الطاقة لمروحة وحدة المعالجة (مع وظيفة	عدد 1	وصلة مروحة وحدة المعالجة المركزية
لتوصيل الطاقة لمروحة النظام	عدد 1	وصلة مروحة النظام
للكشف عن اختراق الهيكل	عدد 1	وصلة فتح الهيكل
	عدد 1	وصلة مسح CMOS
باللوحة الأمامية USB يدعم كل منفذ فتحتي	عدد 2	منفذ USB
	عدد 1	منفذ توصيل الطاقة (24 دبوس)
	عدد 1	منفذ توصيل الطاقة (4 دبوس)
	عدد 1	لوحة مفاتيح PS/2
	عدد 1	ملوس PS/2
	عدد 1	منفذ تسلسلي
	عدد 1	منفذ شبكة اتصال محلية
	عدد 4	منفذ USB
	عدد 3	مقيس صوت
		حجم اللوحة
		219 مم (عرض) X 236 مم (ارتفاع)
بحقها في إضافة أو إزالة الدعم لأي نظام تشغيل بإخطار أو Biostar تحتفظ بدون إخطار.		دعم أنظمة التشغيل
		Windows 2K / XP

**JAPANESE**

仕様		
CPU	LGA 775 Intel Pentium 4 / Pentium D / Celeron D processor up to 3.8 GHz	Hyper-Threading / Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture-64 / Extended Memory 64 Technology をサポートします
FSB	533 / 800 MHz	
チップセット	Intel 945PL	Intel ICH7
メインメモリ	DDR2 DIMMスロット x 4 各DIMMは 256/512MB & 1GB DDR2を サポート 最大メモリ容量4GB	デュアル チャンネルモードDDR2メモリモジュール DDR2 400 / 533をサポート 登録済みDIMMと非ECC DIMMはサポートされません
Super I/O	ITE 8712F もともと一般に使用されるレガシー Super I/O機能を採用しています。 低ピンカウントインターフェイス	環境コントロールイニシアチブ、 H/Wモニター ファン速度コントローラ/ モニター ITEの「スマートガーディアン」機能
IDE	統合IDEコントローラ Ultra DMA 33 / 66 / 100バスマスタモード	PIO Mode 0~4のサポート、
SATA II	統合シリアルATAコントローラ 最高3 Gb/秒のデータ転送速度	SATAバージョン2.0仕様に準拠。
LAN	Realtek RTL 8100C / RTL 8100SC(オプション)	10 / 100 Mb/秒のオートネゴシエーション (Gigabit バンド幅はRTL 8100SC専用です) 半/全二重機能
サウンド Codec	ALC 655	6チャンネルオーディオアウト AC'97バージョン2.3
スロット	PCIスロット x2 PCI Express x16スロット x1	



仕様			
	PCI Express x 1スロット	x1	
オンボード コネクタ	フロッピーコネクタ	x1	各コネクタは2つのフロッピードライブをサポートします
	IDEコネクタ	x1	各コネクタは2つのIDEデバイスをサポートします
	SATAコネクタ	x4	各コネクタは1つのSATAデバイスをサポートします
	フロントパネルコネクタ	x1	フロントパネル機能をサポートします
	フロントオーディオコネクタ	x1	フロントパネルオーディオ機能をサポートします
	CDインコネクタ	x1	CDオーディオイン機能をサポートします
	S/PDIFアウトコネクタ	x1	デジタルオーディオアウト機能をサポートします
	S/PDIFインコネクタ (オプション)	x1	デジタルオーディオイン機能をサポートします
	CPUファンヘッダ	x1	CPUファン電源装置(スマートファン機能を搭載)
	システムファンヘッダ	x1	システムファン電源装置
	シャーシオープンヘッダ	x1	シャーシ侵入検出機能
	CMOSクリアヘッダ	x1	
	USBコネクタ	x2	各コネクタは2つのフロントパネルUSBポートをサポートします
	電源コネクタ(24ピン)	x1	
電源コネクタ(4ピン)	x1		
背面パネル I/O	PS/2キーボード	x1	
	PS/2マウス	x1	
	シリアルポート	x1	
	LANポート	x1	
	USBポート	x4	
	オーディオジャック	x3	
ボードサイズ	219 mm (幅) X 236 mm (高さ)		
OSサポート	Windows 2K / XP	Biostarは事前のサポートなしにOSサポートを追加または削除する権利を留保します。	

# **945PL-M7 BIOS SETUP**

---

<b>BIOS Setup</b> .....	<b>2</b>
1 Main Menu.....	4
2 Standard CMOS Features.....	7
3 Advanced BIOS Features.....	10
4 Advanced Chipset Features.....	16
5 Integrated Peripherals .....	19
6 Power Management Setup.....	24
7 PnP/PCI Configurations .....	29
8 PC Health Status .....	31
9 Frequency/ Voltage Control.....	32

# 945PL-M7 BIOS Manual

---

## BIOS Setup

### Introduction

This manual discussed Award™ Setup program built into the ROM BIOS. The Setup program allows users to modify the basic system configuration. This special information is then stored in battery-backed RAM so that it retains the Setup information when the power is turned off.

The Award BIOS™ installed in your computer system's ROM (Read Only Memory) is a custom version of an industry standard BIOS. This means that it supports Intel Pentium® 4 processor input/output system. The BIOS provides critical low-level support for standard devices such as disk drives and serial and parallel ports.

Adding important has customized the Award BIOS™, but nonstandard, features such as virus and password protection as well as special support for detailed fine-tuning of the chipset controlling the entire system.

The rest of this manual is intended to guide you through the process of configuring your system using Setup.

### Plug and Play Support

These AWARD BIOS supports the Plug and Play Version 1.0A specification. ESCD (Extended System Configuration Data) write is supported.

### EPA Green PC Support

This AWARD BIOS supports Version 1.03 of the EPA Green PC specification.

### APM Support

These AWARD BIOS supports Version 1.1&1.2 of the Advanced Power Management (APM) specification. Power management features are implemented via the System Management Interrupt (SMI). Sleep and Suspend power management modes are supported. Power to the hard disk drives and video monitors can be managed by this AWARD BIOS.

### ACPI Support

Award ACPI BIOS support Version 1.0 of Advanced Configuration and Power interface specification (ACPI). It provides ASL code for power management and device configuration capabilities as defined in the ACPI specification, developed by Microsoft, Intel and Toshiba.

# 945PL-M7 BIOS Manual

---

## PCI Bus Support

This AWARD BIOS also supports Version 2.1 of the Intel PCI (Peripheral Component Interconnect) local bus specification.

## DRAM Support

DDR SDRAM (Double Data Rate Synchronous DRAM) are supported.

## Supported CPUs

This AWARD BIOS supports the Intel CPU.

## Using Setup

In general, you use the arrow keys to highlight items, press <Enter> to select, use the <PgUp> and <PgDn> keys to change entries, press <F1> for help and press <Esc> to quit. The following table provides more detail about how to navigate in the Setup program by using the keyboard.

Keystroke	Function
Up arrow	Move to previous item
Down arrow	Move to next item
Left arrow	Move to the item on the left (menu bar)
Right arrow	Move to the item on the right (menu bar)
Move Enter	Move to the item you desired
PgUp key	Increase the numeric value or make changes
PgDn key	Decrease the numeric value or make changes
+ Key	Increase the numeric value or make changes
- Key	Decrease the numeric value or make changes
Esc key	Main Menu – Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu – Exit Current page and return to Main Menu
F1 key	General help on Setup navigation keys
F5 key	Load previous values from CMOS
F7 key	Load the optimized defaults
F10 key	Save all the CMOS changes and exit

# 945PL-M7 BIOS Manual

---


## 1 Main Menu

Once you enter Award BIOS™ CMOS Setup Utility, the Main Menu will appear on the screen. The Main Menu allows you to select from several setup functions. Use the arrow keys to select among the items and press <Enter> to accept and enter the sub-menu.

**!! WARNING !!**

For better system performance, the BIOS firmware is being continuously updated. The BIOS information described in this manual (Figure 1, 2, 3, 4, 5, 6, 7, 8, 9) is for your reference only. The actual BIOS information and settings on board may be slightly different from this manual.

■ Figure 1. Main Menu

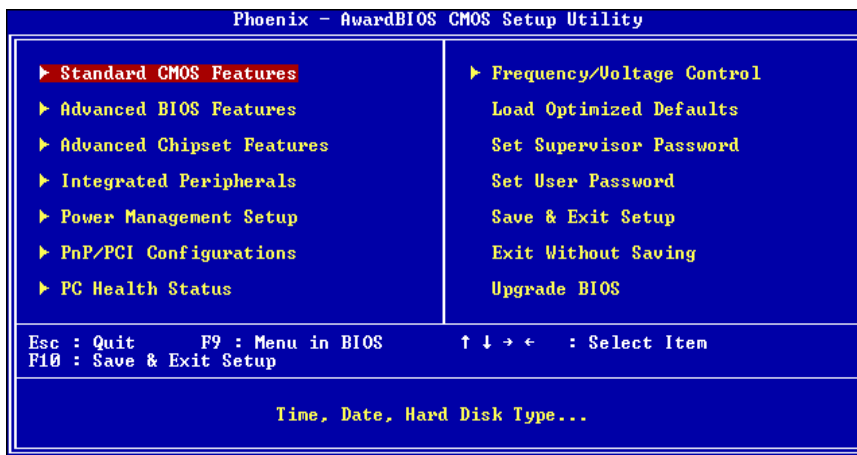

### Standard CMOS Features

This submenu contains industry standard configurable options.

### Advanced BIOS Features

This submenu allows you to configure enhanced features of the BIOS.

### Advanced Chipset Features

This submenu allows you to configure special chipset features.

# 945PL-M7 BIOS Manual

---

## Integrated Peripherals

This submenu allows you to configure certain IDE hard drive options and Programmed Input/ Output features.

## Power Management Setup

This submenu allows you to configure the power management features.

## PnP/PCI Configurations

This submenu allows you to configure certain “Plug and Play” and PCI options.

## PC Health Status

This submenu allows you to monitor the hardware of your system.

## Frequency/ Voltage Control

This submenu allows you to change CPU Vcore Voltage and CPU/PCI clock. **(However, this function is strongly recommended not to use. Not properly change the voltage and clock may cause the CPU or M/B damage!)**

## Load Optimized Defaults

This selection allows you to reload the BIOS when the system is having problems particularly with the boot sequence. These configurations are factory settings optimized for this system. A confirmation message will be displayed before defaults are set.



Load Optimized Defaults <Y/N>? N

## Set Supervisor Password

Setting the supervisor password will prohibit everyone except the supervisor from making changes using the CMOS Setup Utility. You will be prompted with to enter a password.



Enter Password:

# 945PL-M7 BIOS Manual

---

## Set User Password

If the Supervisor Password is not set, then the User Password will function in the same way as the Supervisor Password. If the Supervisor Password is set and the User Password is set, the "User" will only be able to view configurations but will not be able to change them.

```
Enter Password:
```

## Save & Exit Setup

Save all configuration changes to CMOS(memory) and exit setup. Confirmation message will be displayed before proceeding.

```
SAVE to CMOS and EXIT <Y/N>? Y
```

## Exit Without Saving

Abandon all changes made during the current session and exit setup. Confirmation message will be displayed before proceeding.

```
Quit Without Saving <Y/N>? N
```

## Upgrade BIOS

This submenu allows you to upgrade bios.


```
BIOS UPDATE UTILITY <Y/N>? Y
```

# 945PL-M7 BIOS Manual

## 2 Standard CMOS Features

The items in Standard CMOS Setup Menu are divided into 10 categories. Each category includes no, one or more than one setup items. Use the arrow keys to highlight the item and then use the <PgUp> or <PgDn> keys to select the value you want in each item.

■ Figure 2. Standard CMOS Setup

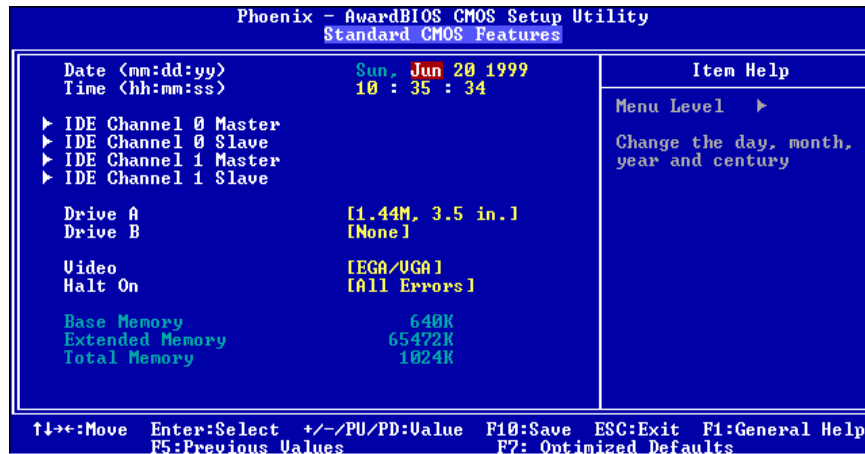



# 945PL-M7 BIOS Manual

---

## Main Menu Selections

This table shows the selections that you can make on the Main Menu.

Item	Options	Description
Date	mm : dd : yy	Set the system date. Note that the 'Day' automatically changes when you set the date.
Time	hh : mm : ss	Set the system internal clock.
IDE Primary Master	Options are in its sub menu.	Press <Enter> to enter the sub menu of detailed options
IDE Primary Slave	Options are in its sub menu.	Press <Enter> to enter the sub menu of detailed options.
IDE Secondary Master	Options are in its sub menu.	Press <Enter> to enter the sub menu of detailed options.
IDE Secondary Slave	Options are in its sub menu.	Press <Enter> to enter the sub menu of detailed options.
Drive A Drive B	360K, 5.25 in 1.2M, 5.25 in 720K, 3.5 in 1.44M, 3.5 in 2.88M, 3.5 in None	Select the type of floppy disk drive installed in your system.
Video	EGA/VGA CGA 40 CGA 80 MONO	Select the default video device.

## 945PL-M7 BIOS Manual


---

Item	Options	Description
Halt On	All Errors No Errors All, but Keyboard All, but Diskette All, but Disk/ Key	Select the situation in which you want the BIOS to stop the POST process and notify you.
Base Memory	N/A	Displays the amount of conventional memory detected during boot up.
Extended Memory	N/A	Displays the amount of extended memory detected during boot up.
Total Memory	N/A	Displays the total memory available in the system.


# 945PL-M7 BIOS Manual

## 3 Advanced BIOS Features

■ Figure 3. Advanced BIOS Setup

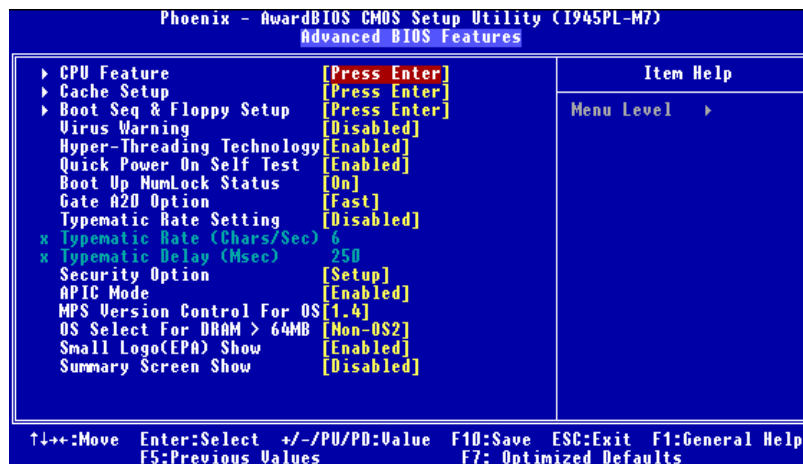

### CPU FEATURE

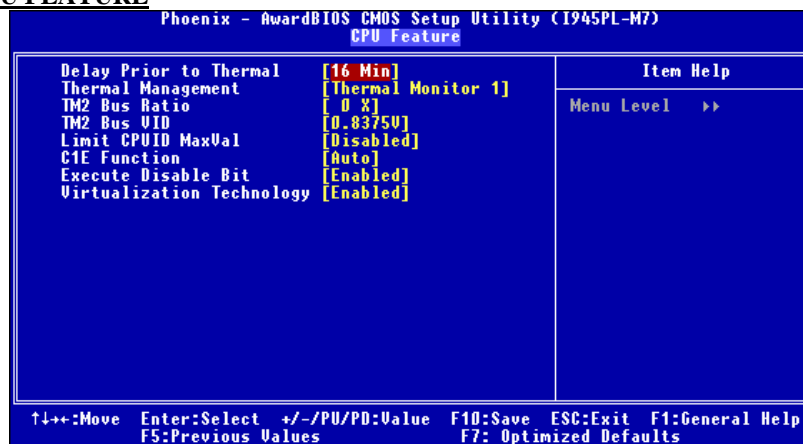

#### Delay Prior to Thermal

Set this item to enable the CPU Thermal function to engage after the specified time.

**The Choices:** 4, 8, 16 (default), 32.

#### Thermal Management

Allow you to choose the thermal management method of your monitor.

**The Choices:** Thermal Monitor 1 (default), Thermal Monitor2.

**Notes:** The choices will be different according to your CPU features.

# 945PL-M7 BIOS Manual

---

## TM2 Bus Ratio

Represents the frequency. Bus ratio of the throttled performance state that will be initiated when the on-die sensor goes from not hot to hot.

**The Choices:** 0X (default).

## TM2 Bus VID

Represents the voltage of the throttled performance state that will be initiated when the on-die sensor goes from not hot to hot.

**The Choices:**0.8375 (default).

## Limit CPU ID Max Val

Set limit CPU ID maximum vale to 3, it should be disabled for Win XP.

**The Choices:** Disabled (default), Enabled.

## C1E Function

CPU C1E Function select.

**The Choices:**Auto (Default).

## Execute Disable Bit


**The Choices:** Enabled (default), Disabled.

## Virtualization Technology

When enabled, a VMM can utilize the additional hardware Capabilities provided by vanderpool Technology.

**The Choices:** Enabled (Default), Disabled.

## Cache Setup

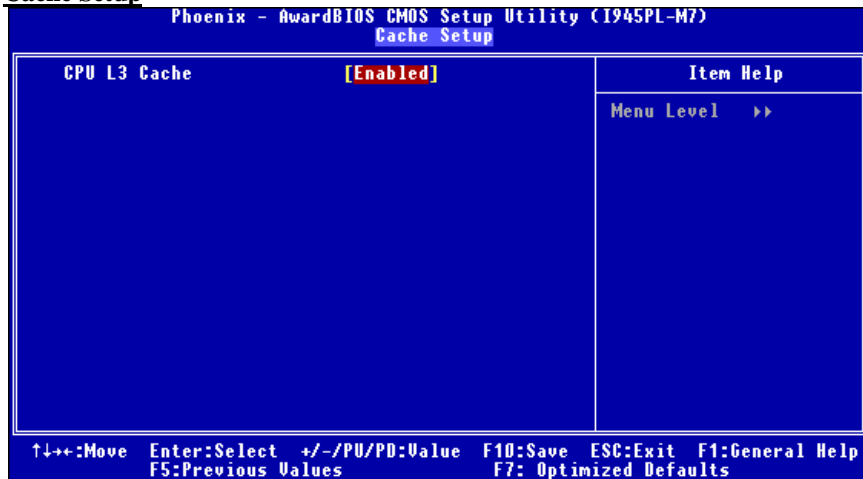

# 945PL-M7 BIOS Manual

## CPU L3 Cache

Depending on the CPU/chipset in use, you may be able to increase memory access time with this option.

**Enabled** (default) Enable cache.

**Disabled** Disable cache.

## BOOT SEQ & FLOPPY SETUP

```
Phoenix - AwardBIOS CMOS Setup Utility (I945PL-M7)
Boot Seq & Floppy Setup
```

<pre> ▶ Hard Disk Boot Priority [Press Enter]   First Boot Device      [Floppy]   Second Boot Device     [Hard Disk]   Third Boot Device      [CDROM]   Boot Other Device      [Enabled]  Swap Floppy Drive       [Disabled] Boot Up Floppy Seek     [Enabled] Report No FDD For WIN 95 [No] </pre>	<pre> Item Help Menu Level  &gt;&gt; Select Hard Disk Boot Device Priority </pre>
---	---

↑↓←→:Move    Enter:Select    +/-/PU/PD:Value    F10:Save    ESC:Exit    F1:General Help  
 F5:Previous Values    F6:Fail-Safe Defaults    F7:Optimized Defaults

## HARD DISK BOOT PRIORITY

```
Phoenix - AwardBIOS CMOS Setup Utility (I945PL-M7)
Hard Disk Boot Priority
```

<pre> 1. Pri.Master: 2. Pri.Slave : 3. Sec.Master: 4. Sec.Slave : 5. USBHDD0  : 6. USBHDD1  : 7. USBHDD2  : 8. Bootable Add-in Cards </pre>	<pre> Item Help Menu Level  &gt;&gt;&gt;&gt; Use &lt;↑&gt; or &lt;↓&gt; to select a device , then press &lt;+&gt; to move it up , or &lt;-&gt; to move it down the list. Press &lt;ESC&gt; to exit this menu. </pre>
---	--

↑↓:Move    PU/PD/+/-:Change Priority    F10:Save    ESC:Exit  
 F5:Previous Values    F6:Fail-Safe Defaults    F7:Optimized Defaults

These BIOS attempt to load the operating system from the device in the sequence selected in these items.

**The Choices:** Pri. Master, Pri.Slave, Sec.Master, Sec. Slave, USBHDD0, USBHDD1, USBHDD2 and Bootable Add-in Carde.

# 945PL-M7 BIOS Manual

---

## **First/Second/Third/Boot Other Device**

These BIOS attempt to load the operating system from the device in the sequence selected in these items.

**The Choices:** Floppy, LS120, HDD-0, SCSI, CDROM, HDD-1, HDD-2, HDD-3, ZIP100, LAN, HPT370, Disabled, Enabled.

## **Swap Floppy Drive**

For systems with two floppy drives, this option allows you to swap logical drive assignments.

**The Choices:** Disabled (default), Enabled.

## **Boot Up Floppy Seek**

Enabling this option will test the floppy drives to determine if they have 40 or 80 tracks. Disabling this option reduces the time it takes to boot-up.

**The Choices:** Disabled, Enabled (default).

## **Report NO FDD for Win95**

**The Choices:** NO (default).

## **Virus Warning**

This option allows you to choose the Virus Warning feature that is used to protect the IDE Hard Disk boot sector. If this function is enabled and an attempt is made to write to the boot sector, BIOS will display a warning message on the screen and sound an alarm beep.

<b>Disabled</b> (default)	Virus protection is disabled.
Enabled	Virus protection is activated.

## **HYPER-THREADING TECHNOLOGY**

This option allows you to enable or disabled CPU Hyper-Threading. Enabled for Windows XP and Linux 2.4.x (OS optimized for Hyper Threading Technology. Disabled for other OS (OS not optimized for Hyper Threading Technology.

**The Choices:** Enabled (Default), Disabled.

## **QUICK POWER ON SELF TEST**

Enabling this option will cause an abridged version of the Power On Self-Test (POST) to execute after you power up the computer.

Disabled Normal POST.

**Enabled** (default) Enable quick POST.

## **BOOT UP NUMLOCK STATUS**

Selects the NumLock. State after power on.

**On** (default) Numpad is number keys.

Off Numpad is arrow keys.

# 945PL-M7 BIOS Manual

---

## GATE A20 OPTION

Select if chipset or keyboard controller should control Gate A20.  
Normal A pin in the keyboard controller controls GateA20.  
**Fast** (default) Lets chipset control Gate A20.

## TYPEMATIC RATE SETTING

When a key is held down, the keystroke will repeat at a rate determined by the keyboard controller. When enabled, the typematic rate and typematic delay can be configured.  
**The Choices: Disabled** (default), Enabled.

## TYPEMATIC RATE (CHARS/SEC)

Sets the rate at which a keystroke is repeated when you hold the keydown.  
**The Choices: 6** (default), 8,10,12,15,20,24,30

## TYPEMATIC DELAY (MSEC)

Sets the delay time after the key is held down before it begins to repeat the keystroke.  
**The Choices: 250** (default), 500, 750, and 1000.

## SECURITY OPTION

This option will enable only individuals with passwords to bring the system online and/or to use the CMOS Setup Utility.  
System A password is required for the system to boot and is also required to access the Setup Utility.  
**Setup** (default) A password is required to access the Setup Utilityonly.  
This will only apply if passwords are set from the Setup main menu.

## APIC MODE

Selecting Enabled enables APIC device mode reporting from the BIOS to the operating system.  
**The Choices: Enabled** (default), Disabled.

## MPS VERSION CONTROL FOR OS

The BIOS supports version 1.1 and 1.4 of the Intel multiprocessor specification.  
Select version supported by the operation system running on this computer.  
**The Choices: 1.4** (default), 1.1.

## OS SELECT FOR DRAM > 64MB

A choice other than Non-OS2 is only used for OS2 systems with memory exceeding 64MB.  
**The Choices: Non-OS2** (default), OS2.

# 945PL-M7 BIOS Manual

---

## SMALL LOGO (EPA) SHOW

This item allows you to select whether the “Small Logo” shows.

**Enabled** (default) “Small Logo” shows when system boot up.

**Disabled** No “Small Logo” shows when system boots up.

## SUMMARY SCREEN SHOW

This item allows you to enable/disable the summary screen. Summary screen means system configuration and PCI device listing.

**The choices:** Enabled, **Disabled** (default).




# 945PL-M7 BIOS Manual

## 4 Advanced Chipset Features

This submenu allows you to configure the specific features of the chipset installed on your system. This chipset manage bus speeds and access to system memory resources, such as DRAM. It also coordinates communications with the PCI bus. The default settings that came with your system have been optimized and therefore should not be changed unless you are suspicious that the settings have been changed incorrectly.

### ■ Figure 4. Advanced Chipset Setup

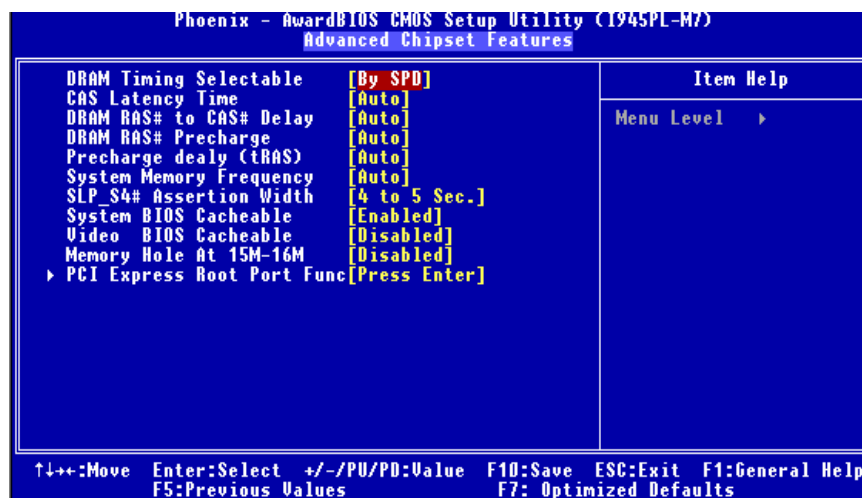

### DRAM TIMING SELECTABLE

When synchronous DRAM is installed, the number of clock cycles of CAS latency depends on the DRAM timing.

**The Choices:** By SPD (default), Manual.

### CAS LATENCY TIME

When synchronous DRAM is installed, the number of clock cycles of CAS latency depends on the DRAM timing.

**The Choices:** Auto(default).

### DRAM RAS# TO CAS# DELAY

This field let you insert a timing delay between the CAS and RAS strobe signals, used when DRAM is written to, read from, or refreshed. Fast gives faster performance; and slow gives more stable performance. This field applies only when synchronous DRAM is installed in the system.

**The Choices:** Auto (default).

# 945PL-M7 BIOS Manual

---

## **DRAM RAS# PRECHARGE**

If an insufficient number of cycles is allowed for RAS to accumulate its charge before DRAM refresh, the refresh may be incomplete, and the DRAM may fail to retain data. Fast gives faster performance; and Slow gives more stable performance. This field applies only when synchronous DRAM is installed in the system.

**The Choices:** Auto (default).

## **PRECHARGE DELAY (TRAS)**

This item controls the number of DRAM clocks to activate the precharge delay.

**The Choices:** Auto (default).

## **SYSTEM MEMORY FREQUENCY**

This item allows you to select the Memory Frequency.

**The Choices:** Auto (default), DDR266, DDR300, and DDR400.

## **SLP S4# ASSERTION WIDTH**

This item sets the minimum assertion width of the SLP-S4# signal to guarantee the DRAM has been safely power-cycled.

## **SYSTEM BIOS CACHEABLE**

Selecting Enabled allows you caching of the system BIOS ROM at F0000h~FFFFFh, resulting a better system performance. However, if any program writes to this memory area, a system error may result.

**The Choices:** Enabled (default), Disabled.

## **VIDEO BIOS CACHEABLE**

Select Enabled allows caching of the video BIOS, resulting a better system performance. However, if any program writes to this memory area, a system error may result.

**The Choices:** Disabled (default), Enabled.

## **MEMORY HOLE AT 15M-16M**


You can reserve this area of system memory for ISA adapter ROM. When this area is reserved it cannot be cached. The user information of peripherals that need to use this area of system memory usually2 discussed their memory requirements.

**The Choices:** Disabled (default), Enabled.

# 945PL-M7 BIOS Manual

---

## PCI Express Root Port Func.

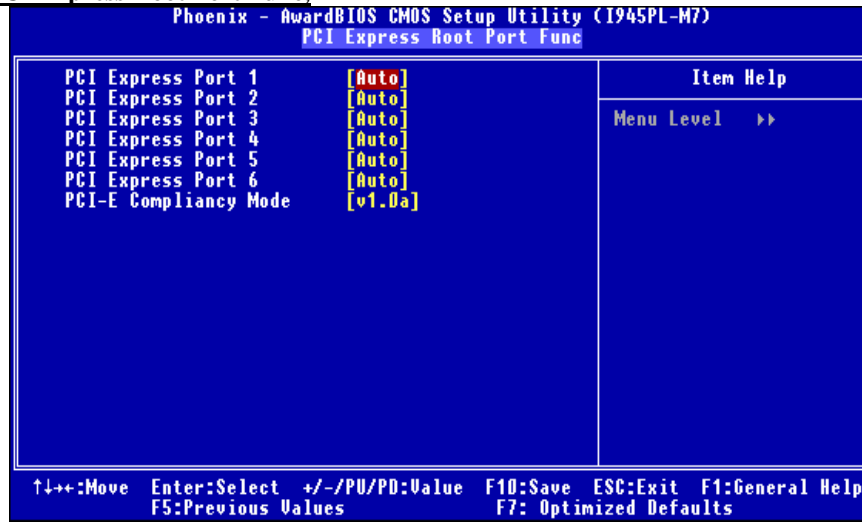

### PCI Express Port 1/ 2/3/4/5/6

This item allows you to select the PCI Express Port.

**The Choices:** Auto (default), Enabled, Disabled.

### PCI-E Compliancy Mode


This item allows you to select the PCI-E Compliancy Mode.

**The Choices:** v1.0a (default), v1.0.


# 945PL-M7 BIOS Manual

## 5 Integrated Peripherals

■ Figure 5. Integrated Peripherals

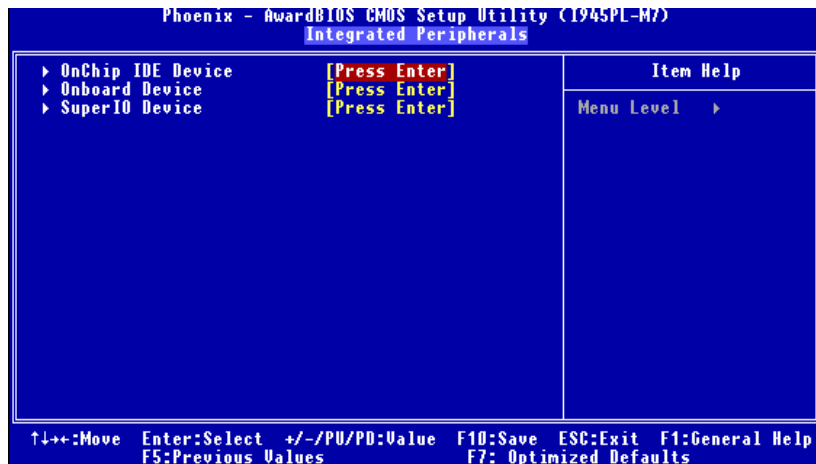

### OnChip IDE Device

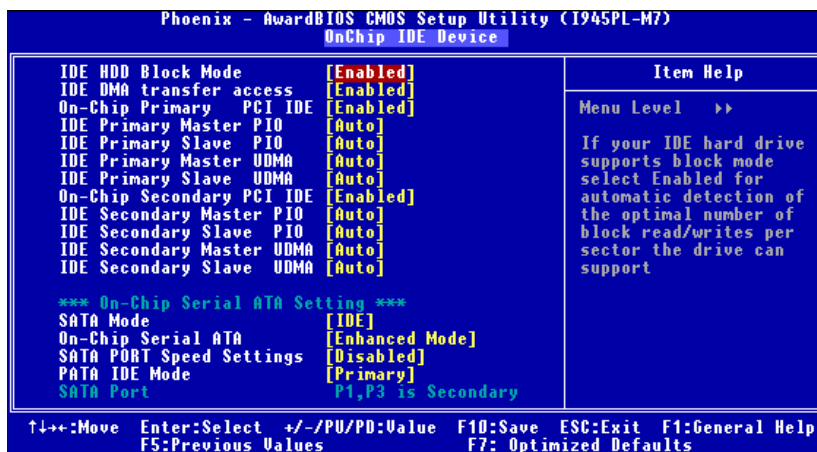

### IDE HDD Block Mode

Block mode is also called block transfer, multiple commands, or multiple sector read / write. If your IDE hard drive supports block mode (most new drives do), select Enabled for automatic detection of the optimal number of block mode (most new drives do), select Enabled for automatic detection of the optimal number of block read / write per sector where the drive can support.

**The Choices:** Enabled (default), Disabled.

# 945PL-M7 BIOS Manual

---

## **IDE DMA Transfer Access**

This item allows you to enable or disable the IDE transfer access.

**The Choices:** **Enabled** (default), Disabled.

## **On-chip Primary PCI IDE**

This item allows you to enable or disable the primary/ secondary IDE Channel.

**The Choices:** **Enabled** (Default), Disabled.

## **IDE Primary/Secondary/Master/Slave PIO**

The IDE PIO (Programmed Input / Output) fields let you set a PIO mode (0-4) for each of the IDE devices that the onboard IDE interface supports. Modes 0 to 4 will increase performance progressively. In Auto mode, the system automatically determines the best mode for each device.

**The Choices:** **Auto** (default), Mode0, Mode1, Mode2, Mode3, and Mode4.

## **On-chip Secondary PCI IDE**

This item allows you to enable or disable the primary/ secondary IDE Channel.

**The Choices:** **Enabled** (Default), Disabled.

## **IDE Primary/Secondary/Master/Slave UDMA**

Ultra DMA/100 functionality can be implemented if it is supported by the IDE hard drives in your system. As well, your operating environment requires a DMA driver (Windows 95 OSR2 or a third party IDE bus master driver). If your hard drive and your system software both support Ultra DMA/100, select Auto to enable BIOS support.

**The Choices:** **Auto** (default), Disabled.

## **On-Chip Serial ATA Setting**

This item allows you to choose:

**Disabled:** disabled SATA Controller

**Combined Mode:** PATA and SATA are combined max of 2 IDE drivers in each channel.


**Enhanced Mode:** enabled both SATA and PATA max of 6 IDE drivers are supported.

**SATA Only:** SATA is operating in legacy mode.

**The Choices:** **Default** (default), Auto, Combined Mode, Enhanced Mode, and SATA only.

# 945PL-M7 BIOS Manual

## ONBOARD DEVICE

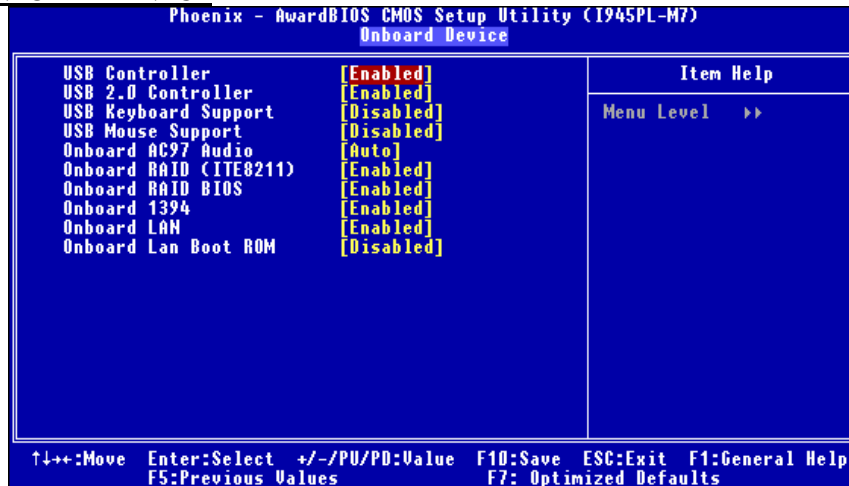

### USB Controller

Select Enabled if your system contains a Universal Serial Bus (USB) controller and you have USB peripherals.

**The Choices:** Enabled (default), Disabled

### USB 2.0 Controller

This entry is to enable/ disable EHCI controller only. This BIOS itself may/ may not have high speed USB support. If the BIOS has high speed USB support built in, the support will automatically turn on, when high speed device were attached.

**The Choices:** Enabled(default).

### USB Keyboard Support

This item allows you to enable or disable the USB Keyboard Legacy Support.

Enabled Enable USB Keyboard Support.

Disabled(default) Disable USB Keyboard Support.

### USB Mouse Support

This item allows you to enable or disable the USB Mouse Legacy Support.

Enabled Enable USB Mouse Support.

Disabled (default) Disable USB Mouse Support.

### Onboard AC97 Audio

This item allows you to decide to enable/ disable to support AC97 Audio.

**The Choices:** Auto (default), Disabled.

### Onboard RAID <ITE8211>

**The Choices:** Enabled (default), Disabled.

# 945PL-M7 BIOS Manual

## Onboard RAID BIOS

The Choices: Enabled (default), Disabled.

## Onboard 1394

The Choices: Enabled (default), Disabled.

## Onboard LAN

This item allows you to enable or disable the Onboard LAN.


The Choices: Enabled (default), Disabled.

## Onboard LAN Boot ROM

This item allows you to enable or disable the Onboard LAN Boot ROM.

The Choices: Disabled (default), Enabled.

## 5.3 Super IO Device

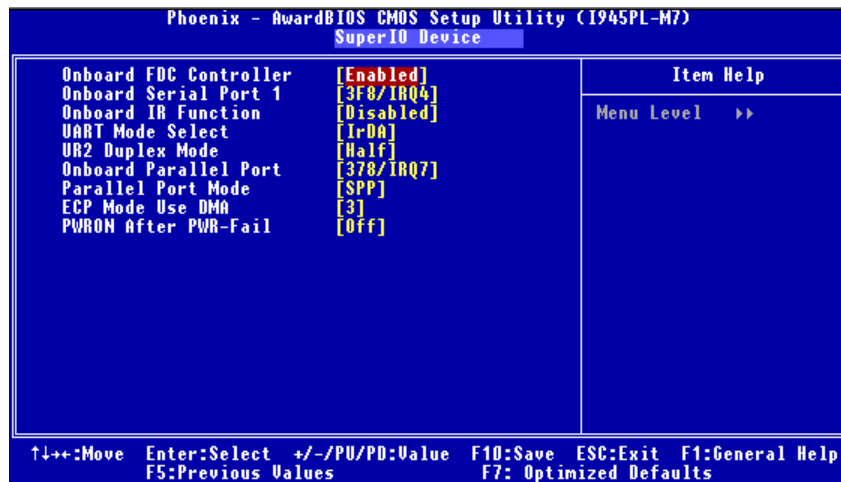

If you highlight the literal "Press Enter" next to the "Super IO Device" label and then press the enter key, it will take you a submenu with the following options:

## Onboard FDC Controller

Select Enabled if your system has a floppy disk controller (FDC) installed on the system board and you wish to use it. If install and FDC or the system has no floppy drive, select Disabled in this field.

The Choices: Enabled (default), Disabled.

## Onboard Serial Port 1

Select an address and corresponding interrupt for the first and second serial ports.

The Choices: Disabled, 3F8/IRQ4 (default), 2F8/IRQ3, 3E8/IRQ4, 2E8/IRQ3, Auto.

# 945PL-M7 BIOS Manual

---

## Onboard IR Function

The Choices: Disabled (default), Enabled.

## UART Mode Select

This item allows you to determine which Infra Red (IR) function of onboard I/O chip.

The Choices: IrDA (default), AS KIR, Normal.

## UR2 Duplex Mode

Select the value required by the IR device connected to the IR port. Full-duplex mode permits simultaneous two-direction transmission. Half-duplex mode permits transmission in one direction only at a time.

The Choices: Half (default), Full.

## Onboard Parallel Port

This item allows you to determine access onboard parallel port controller with which I/O Address.

The Choices: 378/IRQ7 (default), 278/IRQ5, 3BC/IRQ7, Disabled.

## Parallel Port Mode

The default value is SPP.

The Choices:

SPP(default)	Using Parallel port as Standard Printer Port.
EPP	Using Parallel Port as Enhanced Parallel Port.
ECP	Using Parallel port as Extended Capabilities Port.
ECP+EPP	Using Parallel port as ECP & EPP mode.

## ECP Mode Use DMA

Select a DMA Channel for the port.

The Choices: 3 (default), 1.

## POWER After PWR-Fail

This setting specifies whether your system will reboot after a power fail or interrupts occurs.

**Off** Leaves the computer in the power off state.

**On** Reboots the computer.

**Former-Sts** Restores the system to the status before power failure or interrupt occurs.

The Choices: Off (default), On, Former-Sts.




# 945PL-M7 BIOS Manual


## 6 Power Management Setup

The Power Management Setup Menu allows you to configure your system to utilize energy conservation and power up/power down features.

### ■ Figure 6. Power Management Setup

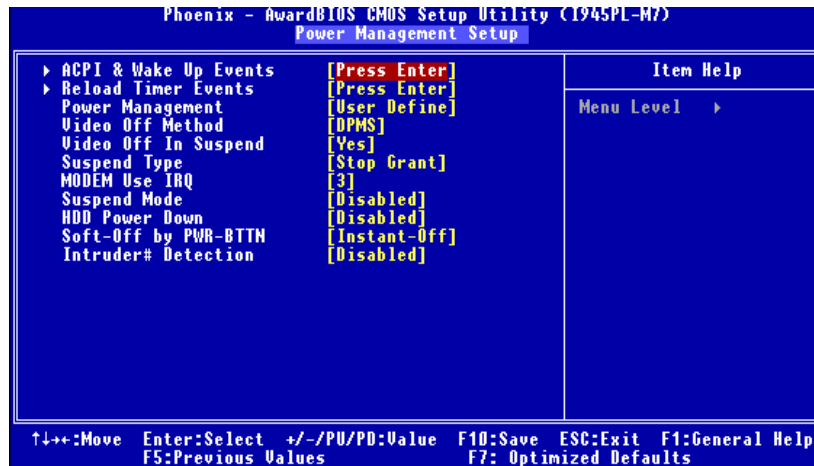

### ACPI & WAKE UP EVENTS

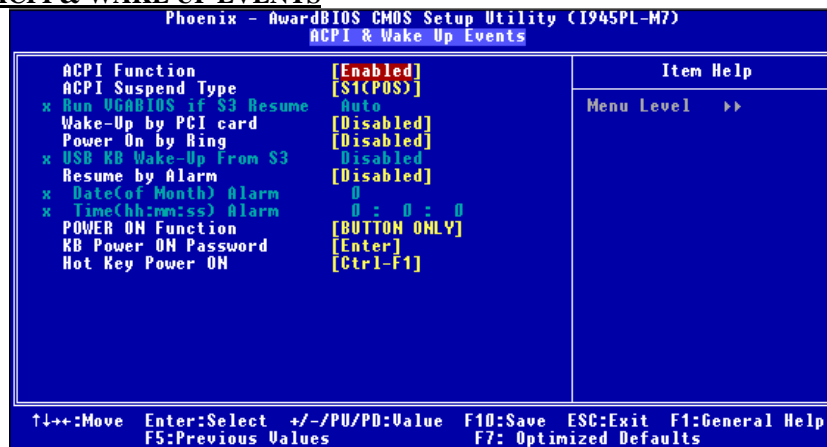

### ACPI Function

This item displays the status of the Advanced Configuration and Power Management (ACPI).

The Choices: Enabled (default), Disabled.

# 945PL-M7 BIOS Manual

---

## ACPI Suspend Type

The item allows you to select the suspend type under the ACPI operating system.

**The Choices:** **S1 (POS)** (default) Power on Suspend

S3 (STR) Suspend to RAM

S1 & S3 POS+STR

## Run VGABIOS if S3 Resume

Choosing Enabled will make BIOS run VGA BIOS to initialize the VGA card when system wakes up from S3 state. The system time is shortened if you disable the function, but system will need AGP driver to initialize the card. So, if the AGP driver of the VGA card does not support the initialization feature, the display may work abnormally or not function after S3.

**The Choices:** **Auto** (default), Yes, No.

## Wake-Up by PCI card

When you select "Enable", a PME signal from PCI card returns the system to Full On state.

**The Choices:** Enabled, **Disabled** (default).

## Power On by Ring

An input signal on the serial Ring Indicator (RI) line (in other words, an incoming call on the modem) awakens the system from a soft off state.

**The Choices:** Enabled, **Disabled** (default).

## USB KB Wake-Up From S3

This item allows you to enable or disabled USB keyboard wake up from S3.

**The Choices:** **Disabled** (Default), Enabled.

## Resume by Alarm

This function is for setting date and time for your computer to boot up. During Disabled, you cannot use this function. During Enabled, Choose the Date and Time.

### Date (of Month) Alarm

You can choose which month the system will boot up.

### Time (hh:mm:ss) Alarm

You can choose what hour, minute and second the system will boot up.

**Note: If you have change the setting, you must let the system boot up until it goes to the operating system, before this function will work.**

## POWER ON Function

This item allows you to choose the power on function.

**The Choices:** **Button Only** (default), Password, Hot Key, Mouse Left, Mouse Right, Any Key, Keyboard 98.

## KB POWER ON Password

Input password and press Enter to set the Keyboard power on password.


# 945PL-M7 BIOS Manual

## Hot Key Power ON

Input password and press Enter to set the Keyboard power on password.

**The Choices:** Ctrl-F1 (default), Ctrl-F2, Ctrl-F3, Ctrl-F4, Ctrl-F5, Ctrl-F6, Ctrl-F7, Ctrl-F8, Ctrl-F9, Ctrl-F10, Ctrl-F11, and Ctrl-F12.

## RELOAD TIMER EVENTS

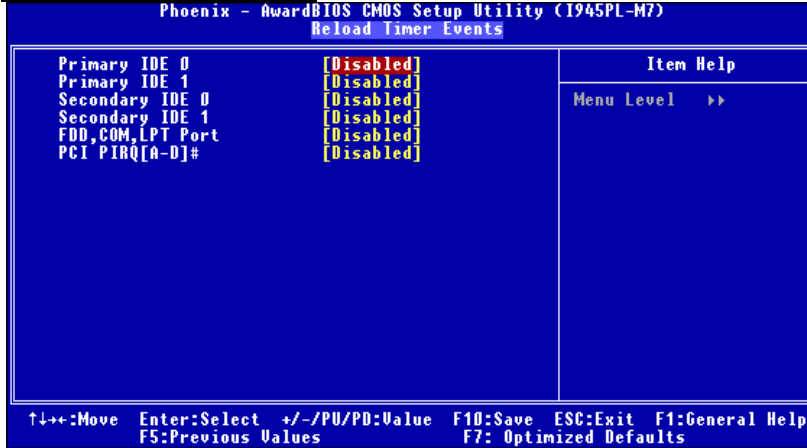

### Primary/Secondary IDE 0/1

You can select to enable or disable Primary or Secondary RAID 0 or RAID 1 function under this item.

**The Choices:** Disabled (default), Enabled.

### FDD, COM, LPT Port

You can select to enable or disable FDD, COM, and LPT port under this item.

**The Choices:** Disabled (default), Enabled.

### PCI PIRQ [A-D]#

You can select to enable or disable PCI PIRQ [A-D]# under this item.

**The Choices:** Disabled (default), Enabled.

# 945PL-M7 BIOS Manual

---

## **Power Management**

This category allows you to select the type (or degree) of power saving and is directly related to the following modes:

- 1.HDD Power Down.
- 2.Suspend Mode.

There are four options of Power Management, three of which have fixed mode settings

Min. Power Saving

Minimum power management.

Suspend Mode = 1 hr.

HDD Power Down = 15 min

Max. Power Saving

Maximum power management only available for sl CPU's.

Suspend Mode = 1 min.

HDD Power Down = 1 min.

**User Define** (default)

Allows you to set each mode individually.

When not disabled, each of the ranges are from 1 min. to 1 hr. except for HDD Power Down which ranges from 1 min. to 15 min. and disable.

## **Video Off Method**

This option determines the manner in which the monitor is goes blank.

**The Choices: DPMS (default)**

## **VIDEO OFF IN SUSPEND**

This determines the manner in which the monitor is blanked.

**The Choices: Yes** (default), No.

## **SUSPEND TYPE**

Select the Suspend Type.

**The Choices: Stop Grant** (default), PwrOn Suspend.

## **Modem Use IRQ**

This determines the IRQ, which can be applied in MODEM use.

**The Choices: 3** (default),4 / 5 / 7 / 9 / 10 / 11 / NA.

# 945PL-M7 BIOS Manual

---

## Suspend Mode

The item allows you to select the suspend type under ACPI operating system.

**The Choices:** **Disabled** (default), 1 Min, 2 Min, 4 Min, 6 Min, 8 Min, 10 Min, 20 Min, 30 Min, 40 Min, 1 Hour.

This selection will cause the system to turn off the vertical and horizontal synchronization ports and write blanks to the video buffer.

Blank Screen

This option only writes blanks to the video buffer.

## HDD Power Down

When enabled, the hard disk drive will power down and after a set time of system inactivity. All other devices remain active.

**The Choices:** **Disabled** (default), 1 Min, 2 Min, 3 Min, 4 Min, 5 Min, 6 Min, 7 Min, 8 Min, 9 Min, 10 Min, 11 Min, 12 Min, 13 Min, 14 Min, 15Min.

## Soft-Off by PWR-BTN

Pressing the power button for more than 4 seconds forces the system to enter the oft-Off state when the system has “hung.”

**The Choices:** Delay 4 Sec, **Instant-Off** (default).

## INTRUDER# DETECTION

This item allows you to enable or disable intruder# detection.


**The Choices:** **Disabled** (Default), Enabled.

# 945PL-M7 BIOS Manual

## 7 PnP/PCI Configurations

This section describes configuring the PCI bus system. PCI, or Personal Computer Interconnect, is a system which allows I/O devices to operate at speeds nearing the speed of the CPU itself uses when communicating with its own special components. This section covers some very technical items and it is strongly recommended that only experienced users should make any changes to the default settings.

### ■ Figure 7. PnP/PCI Configurations

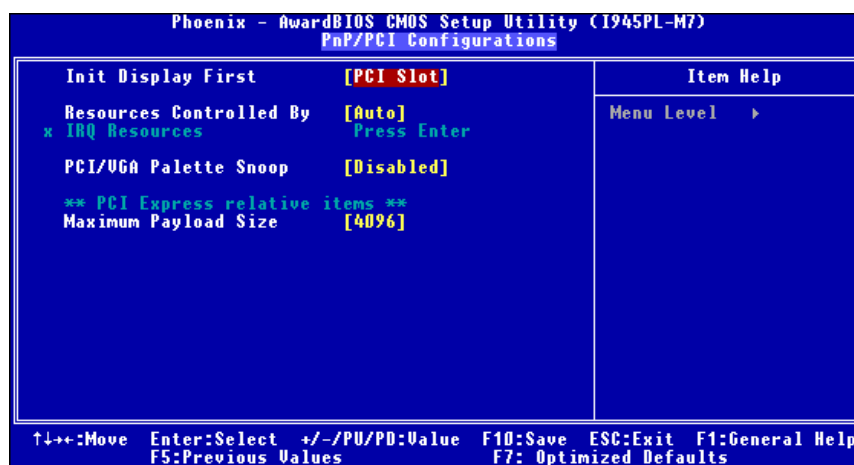

### INIT DISPLAY FIRST

This item allows you to decide to active whether PCI Slot or on-chip VGA first.

**The Choices:** PCI Slot (default), Onboard/ AGP.

### RESOURCES CONTROLLED BY

By Choosing “Auto (ESCD)” (default), the system BIOS will detect the system resources and automatically assign the relative IRQ and DMA channel for each peripheral. By Choosing “Manual”, the user will need to assign IRQ & DMA for add-on cards. Be sure that there are no IRQ/DMA and I/O port conflicts.

# 945PL-M7 BIOS Manual

---

## IRQ RESOURCES

This submenu will allow you to assign each system interrupt a type, depending on the type of device using the interrupt. When you press the “Press Enter” tag, you will be directed to a submenu that will allow you to configure the system interrupts. This is only configurable when “Resources Controlled By” is set to “Manual”.

IRQ-3	assigned to PCI Device
IRQ-4	assigned to PCI Device
IRQ-5	assigned to PCI Device
IRQ-7	assigned to PCI Device
IRQ-9	assigned to PCI Device
IRQ-10	assigned to PCI Device
IRQ-11	assigned to PCI Device
IRQ-12	assigned to PCI Device
IRQ-14	assigned to PCI Device
IRQ-15	assigned to PCI Device

## PCI / VGA PALETTE SNOOP

Choose Disabled or Enabled. Some graphic controllers that are not VGA compatible take the output from a VGA controller and map it to their display as a way to provide boot information and VGA compatibility. However, the color information coming from the VGA controller is drawn from the palette table inside the VGA controller to generate the proper colors, and the graphic controller needs to know what is in the palette of the VGA controller. To do this, the non-VGA graphic controller watch for the Write access to the VGA palette and registers the snoop data. In PCI based systems, where the VGA controller is on the PCI bus and a non-VGA graphic controller is on an ISA bus, the Write Access to the palette will not show up on the ISA bus if the PCI VGA controller responds to the Write.

In this case, the PCI VGA controller should not respond to the Write, it should only snoop the data and permit the access to be forwarded to the ISA bus. The non-VGA ISA graphic controller can then snoop the data on the ISA bus. Unless you have the above situation, you should disable this option.

**Disabled** (default) disable the function.

**Enabled** Enable the function.

## PCI EXPRESS RELATIVE ITEMS

### **Maximum Payload Size**


Set the maximum payload size for Transaction packets (TLP).

**The Choice: 4096** (default.)

# 945PL-M7 BIOS Manual

## 8 PC Health Status

■ Figure 8. PC Health Status

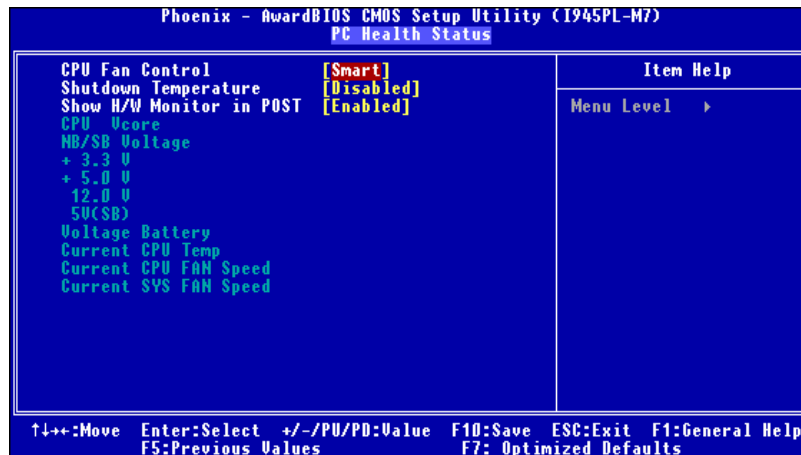

### CPU FAN Control

The Choice “smart” can make your CPU FAN to reduce noise.

**The Choices:** Always On, **Smart**(default).

### Shutdown Temperature

This item allows you to set up the CPU shutdown Temperature. This item only effective

under Windows 98 ACPI mode

**The Choices:** 60oC/140oF, 65oC/149oF, 70oC/158oF, **Disabled** (default).

### Show H/W Monitor in POST

If you computer contain a monitoring system, it will show PC health status during POST stage. The item offers several delay time to select you want.

**The Choices:** **Enabled** (default), Disabled .

### CPU Vcore,NB/SB Voltage +3.3V,+5.0V,+12.0V,5V(SB),VoltageBattery

Detect the system’s voltage status automatically.

### Current CPU Temp

This field displays the current temperature of CPU.

### Current CPU FAN Speed

This field displays the current speed of CPU fan.

### Current SYS FAN Speed


This field displays the current speed SYSTEM fan.



# 945PL-M7 BIOS Manual

## 9 Frequency/ Voltage Control

■ Figure 9. Frequency/ Voltage Control

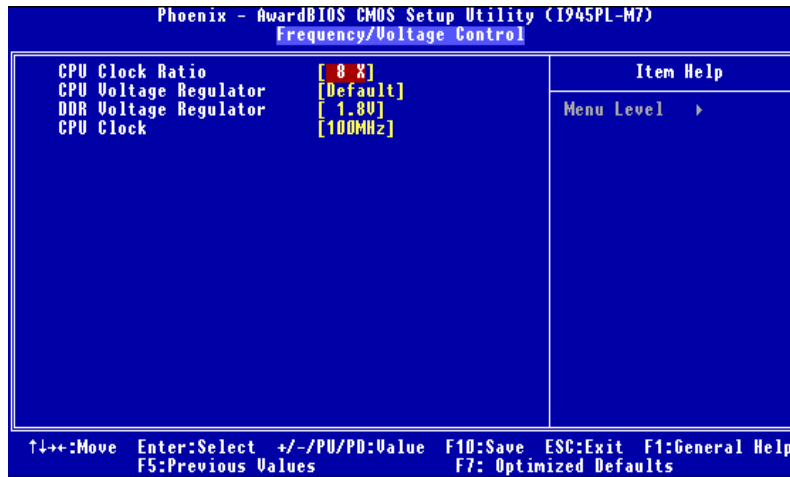

### CPU CLOCK RATIO

The Choices: 8X (default), 9X, 10X, 11X, 12X, 13X, 14 X, 15X, 16X, 17X, 18X, 19X, 20 X, 21 X, 22 X, and 23X.

### CPU Voltage Regulator

This item allows you to select CPU Voltage Regulator

The Choices: Default (default).

### DDR Voltage Regulator

This item allows you to select DDR Voltage Regulator

The Choices: 1.8V(Default).

### CPU CLOCK

This item allows you to select CPU Clock, and CPU over clocking.

#### **Special Notice:**

If unfortunately, the system's frequency that you are selected is not functioning, there are two methods of booting-up the system.

#### **Method 1:**

Clear the COMS data by setting the JCOMS1 ((2-3) closed) as "ON" status. All the CMOS data will be loaded as defaults setting.

# **945PL-M7 BIOS Manual**

---

**Method 2:**

Press the <Insert> key and Power button simultaneously, after that keep-on pressing the <Insert> key until the power-on screen showed.

This action will boot-up the system according to FSB of the processor

**It's strongly recommended to set CPU Vcore and clock in default setting. If the CPU Vcore and clock are not in default setting, it may cause CPU or M/B damage.**