



FCC Information and Copyright

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. There is no guarantee that interference will not occur in a particular installation.

The vendor makes no representations or warranties with respect to the contents here and specially disclaims any implied warranties of merchantability or fitness for any purpose. Further the vendor reserves the right to revise this publication and to make changes to the contents here without obligation to notify any party beforehand.

Duplication of this publication, in part or in whole, is not allowed without first obtaining the vendor's approval in writing.

The content of this user's manual is subject to be changed without notice and we will not be responsible for any mistakes found in this user's manual. All the brand and product names are trademarks of their respective companies.



Dichiarazione di conformità sintetica
Ai sensi dell'art. 2 comma 3 del D.M. 275 del
30/10/2002
Si dichiara che questo prodotto è conforme
alle normative vigenti e soddisfa i requisiti
essenziali richiesti dalle direttive
2004/108/CE, 2006/95/CE e 1999/05/CE
quando ad esso applicabili

Short Declaration of conformity
We declare this product is complying with the
laws in force and meeting all the essential
requirements as specified by the directives
2004/108/CE, 2006/95/CE and 1999/05/CE
whenever these laws may be applied

Table Of Contents

FCC Information and Copyright	1
Chapter 1: Introduction.....	3
1.1 Before You Start	3
1.2 Package Checklist.....	3
1.3 Specifications.....	4
1.4 Rear Panel Connectors.....	5
1.5 Motherboard Layout	6
Chapter 2: Hardware installation.....	7
2.1 Install Central Processing Unit (CPU)	7
2.2 Install a Heatsink.....	8
2.3 Connect Cooling Fans	10
2.4 Install System Memory	10
2.5 Expansion Slots.....	12
2.6 Jumper & Switch Setting.....	13
2.7 Headers & Connectors.....	14
2.8 Buttons & LEDs	18
Chapter 3: UEFI BIOS & Software.....	19
3.1 UEFI BIOS Setup	19
3.2 BIOS Update.....	19
3.3 Software.....	23
Chapter 4: Useful help.....	30
4.1 Driver Installation	30
4.2 AMI BIOS Beep Code.....	31
4.3 Troubleshooting.....	31
4.4 RAID Functions.....	32
APPENDIX I: Specifications in Other Languages	34
Arabic.....	34
German.....	35
Russian.....	36
Spanish	37
Thai.....	38

Chapter 1: Introduction

1.1 Before You Start

Thank you for choosing our product. Before you start installing the motherboard, please make sure you follow the instructions below:

- Prepare a dry and stable working environment with sufficient lighting.
- Always disconnect the computer from power outlet before operation.
- Before you take the motherboard out from anti-static bag, ground yourself properly by touching any safely grounded appliance, or use grounded wrist strap to remove the static charge.
- Avoid touching the components on motherboard or the rear side of the board unless necessary. Hold the board on the edge, do not try to bend or flex the board.
- Do not leave any unfastened small parts inside the case after installation. Loose parts will cause short circuits which may damage the equipment.
- Keep the computer from dangerous area, such as heat source, humid air and water.
- The operating temperatures of the computer should be 0 to 45 degrees Celsius.
- To avoid injury, be careful of:
 - Sharp pins on headers and connectors
 - Rough edges and sharp corners on the chassis
 - Damage to wires that could cause a short circuit

1.2 Package Checklist

- Serial ATA Cable x4
- Rear I/O Panel for ATX Case x1
- User's Manual x1
- Fully Setup Driver DVD x1


Note

- » *The package contents may be different due to the sales region or models in which it was sold. For more information about the standard package in your region, please contact your dealer or sales representative.*
-

1.3 Specifications

Specifications		
CPU Support	Socket AM4 supports AMD® A-series APU, Ryzen APU / Ryzen CPU * Please refer to www.biostar.com.tw for CPU support list.	
Chipset	AMD® B350 (B350GT5) AMD® X370 (X370GT5)	
Memory	Supports Dual Channel DDR4 1866/2133/2400/2667/2933(OC)/3200(OC) 4 x DDR4 DIMM Memory Slot, Max. Supports up to 64 GB Memory Each DIMM supports non-ECC 4/8/16 GB DDR4 module * DDR4 - 2667 only for Ryzen CPU. * Please refer to www.biostar.com.tw for Memory support list.	
Storage	B350GT5: 4x SATA III Connector (6Gb/s) : Supports AHCI & RAID 0, 1, 10 1x M.2 (32Gb/s) : Supports PCI-E & SATA SSD	X370GT5: 6x SATA III Connector (6Gb/s) : Supports AHCI & RAID 0, 1, 10 1x M.2 (32Gb/s) : Support PCI-E & SATA SSD
	* M.2 (32Gb/s) : The bandwidth is depended on CPU, Ryzen is 32Gb/s ; APU is 16Gb/s.	
LAN	Realtek RTL 8118AS 10/ 100/ 1000 Mb/s auto negotiation, Half / Full duplex capability	
Audio Codec	ALC892 7.1 Channels, High Definition Audio	
USB	B350GT5: 1x USB 3.1 Gen2 (10Gb/s) Type-C & 1x USB 3.1 Gen2 (10Gb/s) Type-A port (2 on rear I/Os) 6x USB 3.1 Gen1 (5Gb/s) port (4 on rear I/Os and 2 via internal headers) 4x USB 2.0 port (4 via internal headers)	X370GT5: 1x USB 3.1 Gen2 (10Gb/s) Type-C & 1x USB 3.1 Gen2 (10Gb/s) Type-A port (2 on rear I/Os) 8x USB 3.1 Gen1 (5Gb/s) port (4 on rear I/Os and 4 via internal headers) 4x USB 2.0 port (4 via internal headers)
	Expansion Slots 2x PCI Slot 2x PCIe 2.0 x1 Slot 1x PCIe 2.0 x16 Slot (x4) 1x PCIe 3.0 x16 Slot (When using APU, the bandwidth is x8 speed)	
Rear I/Os	1x PS/2 Keyboard / Mouse 1x DVI-D Port 1x HDMI Port 1x LAN port	1x USB 3.1 Gen2 (10Gb/s) Type-C Port 1x USB 3.1 Gen2 (10Gb/s) Type-A Port 4x USB 3.1 Gen1 (5Gb/s) Port 6x Audio Jack
Internal I/Os	B350GT5: 4x SATA III 6.0Gb/s Connector 2x USB 2.0 Header (each header supports 2 USB 2.0 ports) 1x USB 3.1 Gen1 (5Gb/s) Header (each header supports 2 USB 3.1 Gen1 ports) 1x 8-Pin Power Connector 1x 24-Pin Power Connector 2x CPU Fan Connector 2x System Fan Connector 1x Front Panel Header 1x Front Audio Header 1x Clear CMOS Header 1x S/PDIF out Connector 1x Serial Port Header 2x 5050 LED Header	X370GT5: 6x SATA III 6.0Gb/s Connector 2x USB 2.0 Header (each header supports 2 USB 2.0 ports) 2x USB 3.1 Gen1 (5Gb/s) Header (each header supports 2 USB 3.1 Gen1 ports) 1x 8-Pin Power Connector 1x 24-Pin Power Connector 2x CPU Fan Connector 2x System Fan Connector 1x Front Panel Header 1x Front Audio Header 1x Clear CMOS Header 1x S/PDIF out Connector 1x Serial Port Header 2x 5050 LED Header
Form Factor	ATX Form Factor, 305 mm x 244 mm	
OS Support	Windows 7(64bit) / 10(64bit) Biostar reserves the right to add or remove support for any OS with or without notice.	


1.4 Rear Panel Connectors

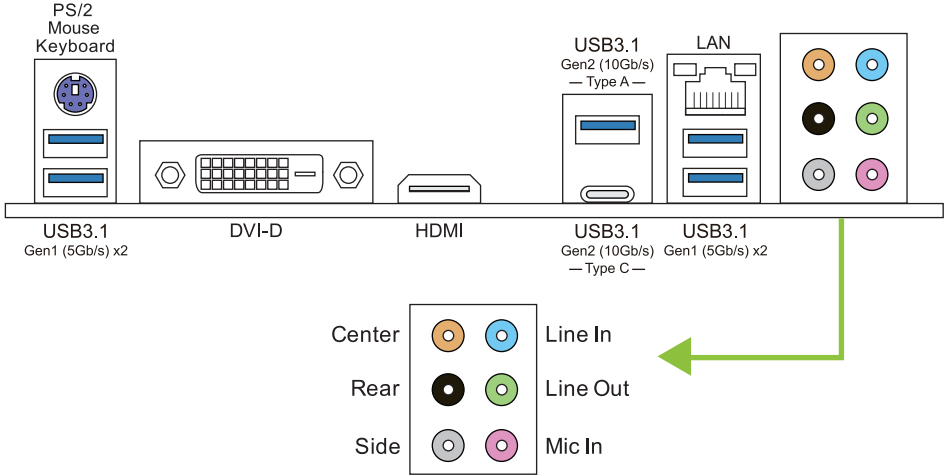

Note

- » DVI-D / HDMI output require an AMD family processor with integrated graphics.
- » Since the audio chip supports High Definition Audio Specification, the function of each audio jack can be defined by software. The input / output function of each audio jack listed above represents the default setting. However, when connecting external microphone to the audio port, please use the Line In (Blue) and Mic In (Pink) audio jack.
- » Maximum resolution
 - DVI-D: 1920 x 1200 @60Hz
 - HDMI: 4096 x 2160 @24Hz or 3840 x 2160 @30Hz
- » The Athlon CPU will not support HDMI port signals.
- » When using the front HD audio jack and plug in the headset, the rear sound will be automatically Disabled.

1.5 Motherboard Layout

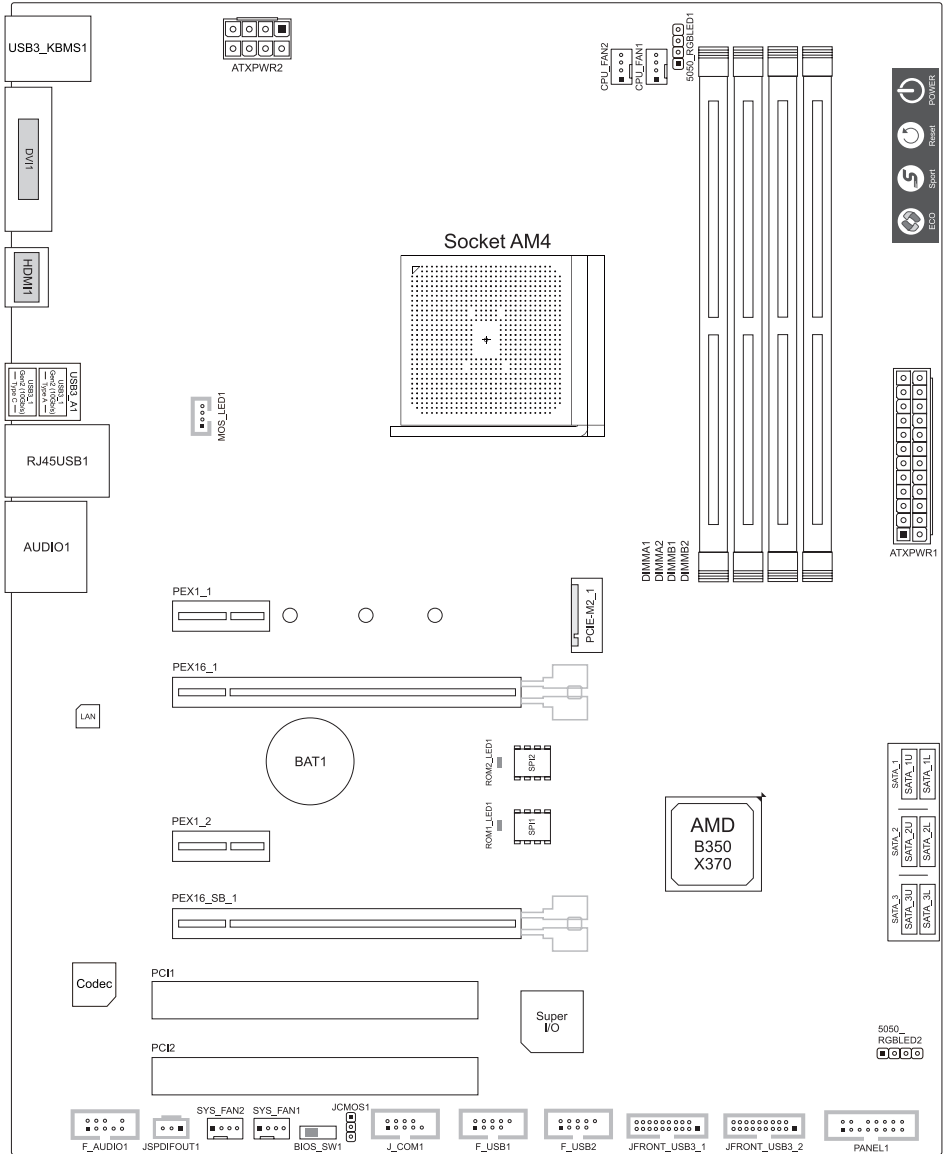


Note

» ■ represents the 1st pin.


Chapter 2: Hardware installation

2.1 Install Central Processing Unit (CPU)


Step 1: Locate the CPU socket on the motherboard

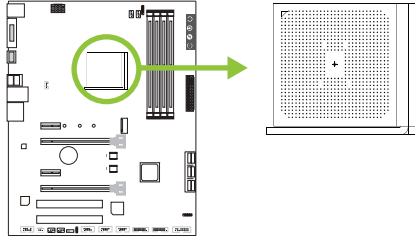


Step 2: Pull the socket locking out from the socket and then raise the lever up to a 90-degree angle.

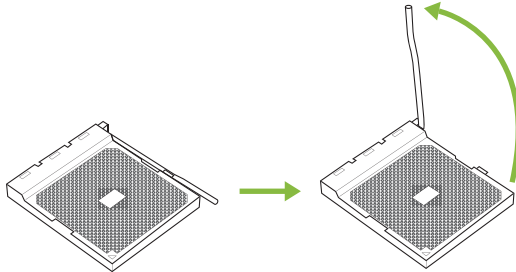

Step 3: Look for the white triangle on socket, and the gold triangle on CPU should point towards this white triangle. The CPU will fit only in the correct orientation.

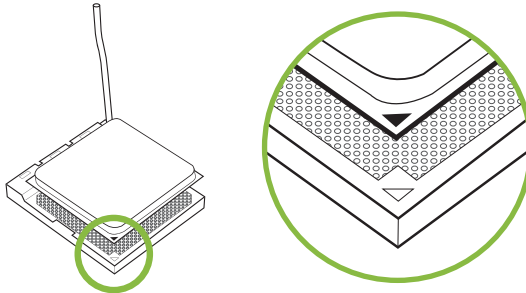

Step 4: Hold the CPU down firmly, and then close the lever to locked the position

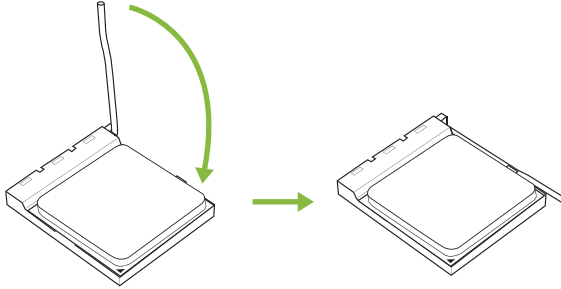


Note

» Please turn off the Power Supply before remove the CPU socket.


2.2 Install a Heatsink

<TypeA>

Step 1: Place the heatsink and fan assembly onto the retention frame. Match the heatsink clip with the socket mounting-lug. Hook the spring clip to the mounting-lug.

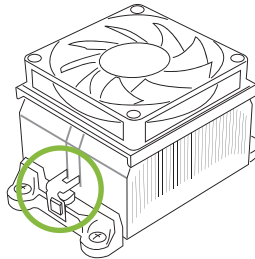


Step 2: On the other side, push the retention clip straight down to lock into the plastic lug on the retention frame, and then press down the locker until it stops.

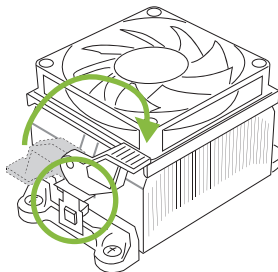


<TypeB>

Step 1: Remove the heatsink and fan assembly bracket on the motherboard and keep the cooler backplane under the motherboard.

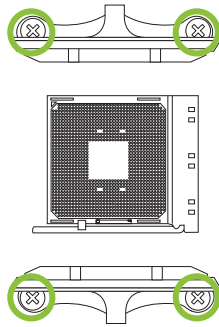

Step 2: Place the heatsink and fan assembly on top of the installed CPU and make sure that the fan cable is closest to the CPU fan connector. Please refer diagram to the following screw into the screw hole in the order shown.

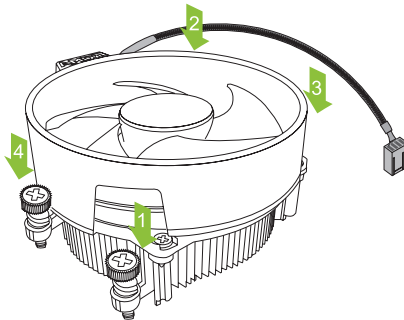
**Note**

- » Do not forget to connect the CPU fan connector.
- » For proper installation, please kindly refer to the installation manual of your CPU heatsink.

2.3 Connect Cooling Fans


These fan headers support cooling-fans built in the computer. The fan cable and connector may be different according to the fan manufacturer.

CPU_FAN1/2: CPU Fan Header

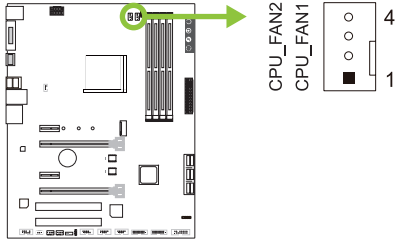

Pin	Assignment
1	Ground
2	+12V
3	FAN RPM rate sense
4	Smart Fan Control (By Fan)

SYS_FAN1/2: System Fan Header

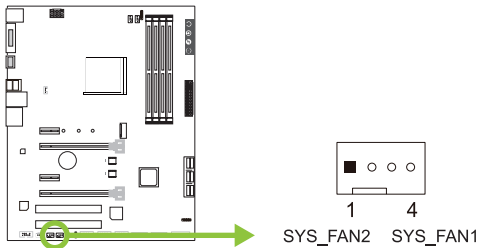


Pin	Assignment
1	Ground
2	+12V
3	FAN RPM rate sense
4	Smart Fan Control (By Fan)

Note


- » CPU_FAN1/2, SYS_FAN1/2 support 4-pin and 3-pin head connectors. When connecting with wires onto connectors, please note that the red wire is the positive and should be connected to pin#2, and the black wire is Ground and should be connected to pin#1(GND).

2.4 Install System Memory


DDR4 Modules

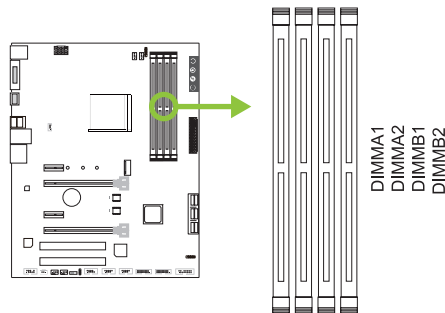

Step 1: Unlock a DIMM slot by pressing the retaining clips outward. Align a DIMM on the slot such that the notch on the DIMM matches the break on the slot.

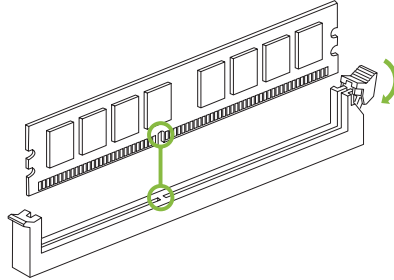

Step 2: Insert the DIMM vertically and firmly into the slot until the retaining clips snap back in place and the DIMM is properly seated.

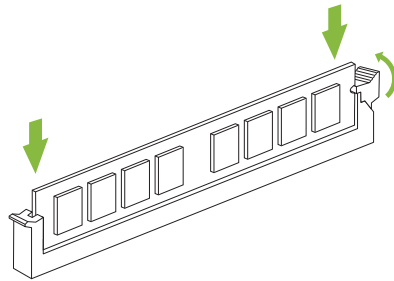

► **Note**

» If the DIMM does not go in smoothly, do not force it. Pull it all the way out and try again.

Memory Capacity

DIMM Socket Location	DDR4 Module	Total Memory Size
DIMMA1	4GB/8GB/16GB	Max is 64GB.
DIMMA2	4GB/8GB/16GB	
DIMMB1	4GB/8GB/16GB	
DIMMB2	4GB/8GB/16GB	

Dual Channel Memory Installation

Please refer to the following requirements to activate Dual Channel function: Install memory module of the same density in pairs, shown in the table.

Dual Channel Status	DIMMA1	DIMMA2	DIMMB1	DIMMB2
Enabled	O	X	O	X
Enabled	X	O	X	O
Enabled	O	O	O	O

(O means memory installed, X means memory not installed.)

► **Note**

» When installing more than one memory module, we recommend to use the same brand and capacity memory on this motherboard.


Ryzen - DDR Maximum Frequency Support Table

Maximum	DIMMA1	DIMMA2	DIMMB1	DIMMB2
DDR4-2667	--	SR	--	--
DDR4-2667	--	DR	--	--
DDR4-2667	--	SR	--	SR
DDR4-2400	--	DR	--	DR
DDR4-2133	SR	SR	SR	SR
DDR4-1866	DR	DR	DR	DR

Note

- » SR - Single-rank DIMM, 1R x4 or 1R x8.
- » DR - Dual-rank DIMMs, 2R x4 or 2R x8.
- » For the better DDR4 module compatibility, please follow the table to install your DDR4 modules.

2.5 Expansion Slots

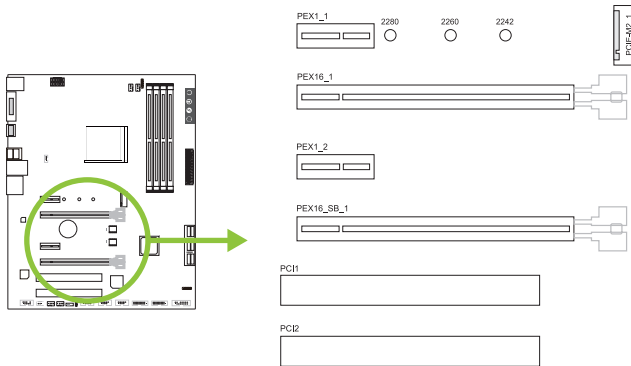

PCI1/PCI2: Peripheral Component Interconnect Slots

- The PCI slots support cards used in PCs include: LAN cards, sound cards, modems, TV tuner cards and other cards that comply with PCI standard.

PEX16_1: PCI-Express Gen3 x16 Slot (x16 speed)

(When using APU, the bandwidth is x8 speed)

- PCI-Express 3.0 compliant.
- Theoretical maximum bandwidth using two slots simultaneously is 16GB/s for each slot, a total of 32GB/s.

PEX16_SB_1: PCI-Express Gen2 x16 Slot (x4 speed)

- PCI-Express 2.0 compliant.
- Theoretical maximum bandwidth using two slots simultaneously is 2GB/s for each slot, a total of 4GB/s.

PEX1_1/1_2: PCI-Express Gen2 x1 Slot

- PCI-Express 2.0 compliant.
- Data transfer bandwidth up to 500MB/s per direction; 1GB/s in total.

PCI-E-M2_1: M.2 (Key M) Slot

(The bandwidth is depended on CPU, Ryzen is 32Gb/s ; APU is 16Gb/s)

- The M.2 slot supports M.2 Type 2242/2260/2280 SSD module. When installing M.2 SSD module, please place the screw and hex pillar to correct position.
- Support M.2 SATA III (6.0 Gb/s) module and M.2 PCI Express module up to Gen3 x4 (32Gb/s).

Install an Expansion Card

You can install your expansion card by following steps:

- Read the related expansion card's instruction document before install the expansion card into the computer.
- Remove your computer's chassis cover, screws and slot bracket from the computer.
- Place a card in the expansion slot and press down on the card until it is completely seated in the slot.
- Secure the card's metal bracket to the chassis back panel with a screw.
- Replace your computer's chassis cover.
- Power on the computer, if necessary, change BIOS settings for the expansion card.
- Install related driver for the expansion card.

2.6 Jumper & Switch Setting

The illustration shows how to set up jumpers. When the jumper cap is placed on pins, the jumper is "close", if not, that means the jumper is "open".


Pin opened



Pin closed




 Pin 1-2 closed



JCMOS1: Clear CMOS Jumper

The jumper allows users to restore the BIOS safe setting and the CMOS data. Please carefully follow the procedures to avoid damaging the motherboard.

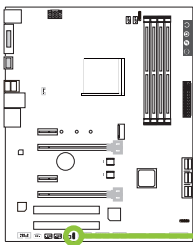

Pin 1-2 Close:
Normal Operation (default).




Pin 2-3 Close:
Clear CMOS data.

Clear CMOS Procedures:

1. Remove AC power line.
2. Set the jumper to “Pin 2-3 close”.
3. Wait for five seconds.
4. Set the jumper to “Pin 1-2 close”.
5. Power on the AC.
6. Load Optimal Defaults and save settings in CMOS.

BIOS_SW1: Dual BIOS Switch

The Dual BIOS Switch allows you to choose one of the BIOS ROMs (ROM1/ROM2) for boot up.

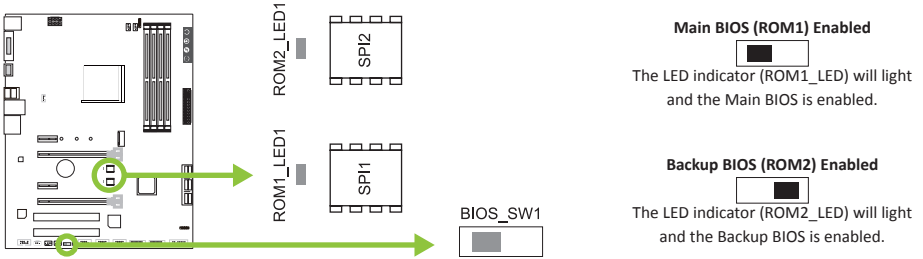


Note

- » Do not use this switch when your system is power-on.
- » Before flashing BIOS ROMs, please make sure this switch is set to the BIOS ROM which you want to update.

2.7 Headers & Connectors

ATXPWR1: ATX Power Source Connector



For better compatibility, we recommend to use a standard ATX 24-pin power supply for this connector. Make sure to find the correct orientation before plugging the connector.

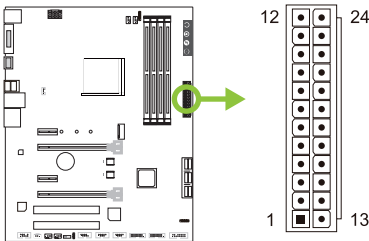

Pin	Assignment	Pin	Assignment
13	+3.3V	1	+3.3V
14	-12V	2	+3.3V
15	Ground	3	Ground
16	PS_ON	4	+5V
17	Ground	5	Ground
18	Ground	6	+5V
19	Ground	7	Ground
20	NC	8	PW_OK
21	+5V	9	Standby Voltage+5V
22	+5V	10	+12V
23	+5V	11	+12V
24	Ground	12	+3.3V

ATXPWR2: ATX Power Source Connector

 The connector provides +12V to the CPU power circuit. If the CPU power plug is 4-pin, please plug it into Pin 1-2-5-6 of ATXPWR2.

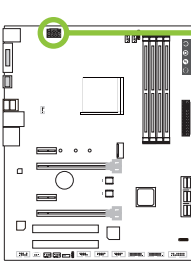



Pin	Assignment
1	+12V
2	+12V
3	+12V
4	+12V
5	Ground
6	Ground
7	Ground
8	Ground

Note

- » Before you power on the system, please make sure that both ATXPWR1 and ATXPWR2 connectors have been plugged-in.
- » Insufficient power supplied to the system may result in instability or the peripherals not functioning properly. Use of a PSU with a higher power output is recommended when configuring a system with more power-consuming devices.

PANEL1: Front Panel Header



This 16-pin header includes Power-on, Reset, HDD LED, Power LED, and speaker connection.

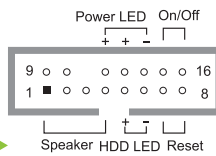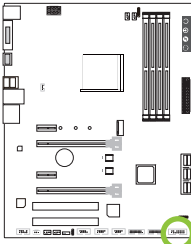

Pin	Assignment	Function	Pin	Assignment	Function
1	+5V	Speaker Connector	9	N/A	N/A
2	N/A		10	N/A	N/A
3	N/A		11	N/A	N/A
4	Speaker	Power LED	12	Power LED (+)	Power LED
5	HDD LED (+)		13	Power LED (+)	
6	HDD LED (-)	LED	14	Power LED (-)	Power-on button
7	Ground	Reset button	15	Power button	
8	Reset control		16	Ground	

SATA_1/SATA_2/SATA_3: Serial ATA 6.0 Gb/s Connectors


These connectors connect to SATA hard disk drives via SATA cables.

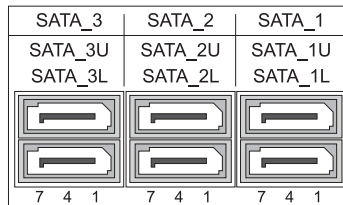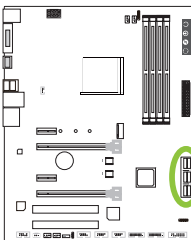

Pin	Assignment
1	Ground
2	TX+
3	TX-
4	Ground
5	RX-
6	RX+
7	Ground

JFRONT_USB3_1/2: Header for USB 3.1 Gen1 (5Gb/s) Ports at Front Panel (JFRONT_USB3_2 only for X370GT5)


This header allows user to add additional USB ports on the PC front panel, and also can be connected with a wide range of external peripherals.

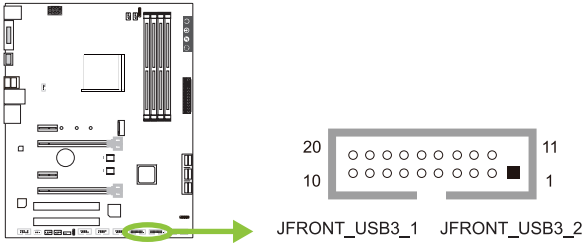

Pin	Assignment	Pin	Assignment
1	VBUS0	11	D2+
2	SSRX1-	12	D2-
3	SSRX1+	13	Ground
4	Ground	14	SSTX2+
5	SSTX1-	15	SSTX2-
6	SSTX1+	16	Ground
7	Ground	17	SSRX2+
8	D1-	18	SSRX2-
9	D1+	19	VBUS1
10	ID	20	Key

F_USB1/2: Header for USB 2.0 Ports at Front Panel


This header allows user to add additional USB ports on the PC front panel, and also can be connected with a wide range of external peripherals.

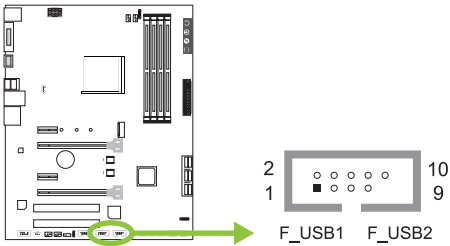

Pin	Assignment
1	+5V (fused)
2	+5V (fused)
3	USB-
4	USB-
5	USB+
6	USB+
7	Ground
8	Ground
9	Key
10	NC

JSPDIFOUT1: Digital Audio-out Connector


The connector is for connecting the S/PDIF output bracket.

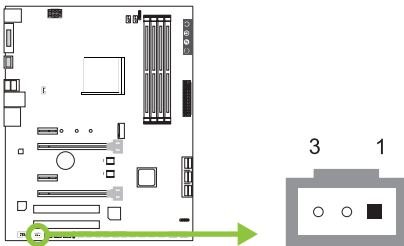

Pin	Assignment
1	+5V
2	SPDIF_OUT
3	Ground

F_AUDIO1: Front Panel Audio Header

This header allows user to connect the chassis-mount front panel audio I/O which supports HD and AC'97 audio standards.

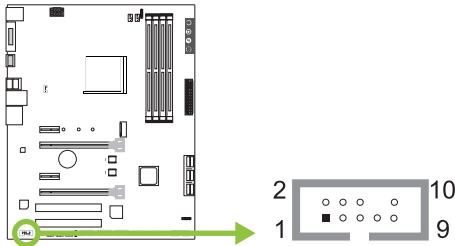


HD Audio		AC'97	
Pin	Assignment	Pin	Assignment
1	Mic Left in	1	Mic In
2	Ground	2	Ground
3	Mic Right in	3	Mic Power
4	GPIO	4	Audio Power
5	Right line in	5	RT Line Out
6	Jack Sense	6	RT Line Out
7	Front Sense	7	Reserved
8	Key	8	Key
9	Left line in	9	LFT Line Out
10	Jack Sense	10	LFT Line Out

Note

- » It is recommended that you connect a high-definition front panel audio module to this connector to avail of the motherboard's high definition audio capability.
- » Please try to disable the "Front Panel Jack Detection" if you want to use an AC'97 front audio output cable. The function can be found via O.S. Audio Utility.

J_COM1: Serial Port Connector



The motherboard has a serial port header for connecting RS-232 Port.

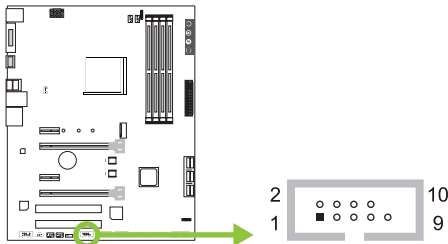

Pin	Assignment
1	Carrier detect
2	Received data
3	Transmitted data
4	Data terminal ready
5	Signal ground
6	Data set ready
7	Request to send
8	Clear to send
9	Ring indicator
10	Key

5050_RGBLED1/2: RGB LED Device (5050 SMD) Header

This header provides 12V power and RGB control pins for RGB LED Device (5050 SMD).

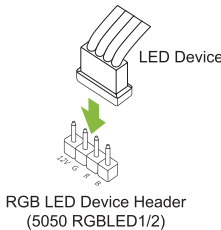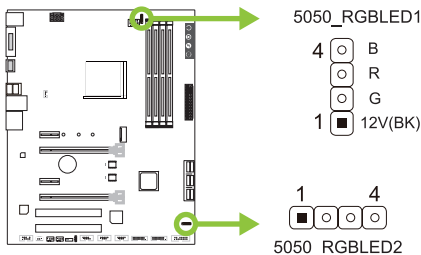


Pin	Cable Color	Assignment
1	12V (Black)	VCC12
2	G (Green)	LED_GREEN
3	R (Red)	LED_RED
4	B (Blue)	LED_BLUE

Note

- » Ensure proper pin connecting to your LED device, wrong connection may damage your LED device or motherboard.

2.8 Buttons & LEDs

Touch Buttons

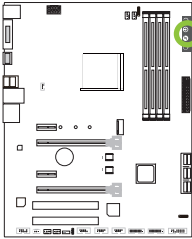

ECO Mode:

Enabled ECO mode, it allows you save energy by slightly reducing system performance.

Sport Mode:

Enabled Sport mode, it allows you to maximize system performance but may use more energy.

Reset:

Touch this button to reboot the system.

Power:


Touch this button to turn-on/off the system.

Note

» *ECO/SPORT mode buttons will only be available when running RACING GT Utility in Windows environment.*

LEDs

Below LEDs are controlled by RACING GT program. Please refer to Chapter 3.3 for more detail software setting.

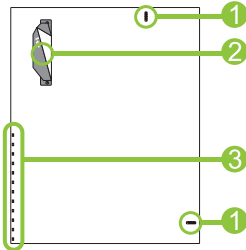

1. RGB LED Header
2. MOSFET Heatsink LED
3. on-board LEDs (x12)

Chapter 3: UEFI BIOS & Software

3.1 UEFI BIOS Setup

- The BIOS Setup program can be used to view and change the BIOS settings for the computer. The BIOS Setup program is accessed by pressing the key after the Power-On Self-Test (POST) memory test begins and before the operating system boot begins.
- For further information of setting up the UEFI BIOS, please refer to the UEFI BIOS Manual on our website.

3.2 BIOS Update

The BIOS can be updated using either of the following utilities:

- **BIOSTAR BIO-Flasher:** Using this utility, the BIOS can be updated from a file on a hard disk, a USB drive (a flash drive or a USB hard drive), or a CD-ROM.
- **BIOSTAR BIOS Update Utility:** It enables automated updating while in the Windows environment. Using this utility, the BIOS can be updated from a file on a hard disk, a USB drive (a flash drive or a USB hard drive), or a CD-ROM, or from the file location on the Web.

BIOSTAR BIO-Flasher


Note

- » This utility only allows storage device with FAT32/16 format and single partition.
- » Shutting down or resetting the system while updating the BIOS will lead to system boot failure.


Updating BIOS with BIOSTAR BIO-Flasher

1. Go to the website to download the latest BIOS file for the motherboard.
2. Then, copy and save the BIOS file into a USB flash (pen) drive. (Only supported FAT/FAT32 format)
3. Insert the USB pen drive that contains the BIOS file to the USB port.
4. Power on or reset the computer and then press <F12> during the POST process.


5. After entering the POST screen, the BIO-FLASHER utility pops out. Choose <fs0> to search for the BIOS file.

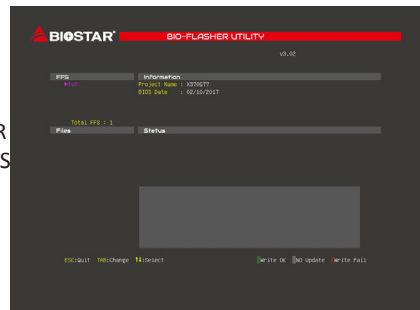

6. Select the proper BIOS file, and a message asking if you are sure to flash the BIOS file. Click “Yes” to start updating BIOS.

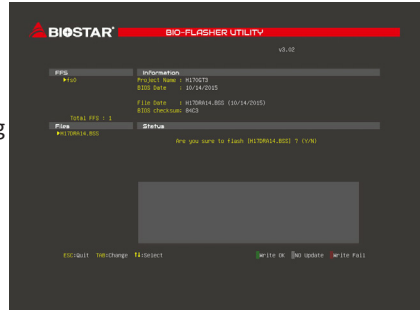

7. A dialog pops out after BIOS flash is completed, asking you to restart the system. Press the <Y> key to restart system.

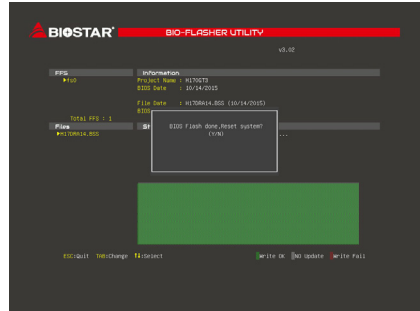

8. While the system boots up and the full screen logo shows up, press key to enter BIOS setup.

After entering the BIOS setup, please go to the <Save & Exit>, using the <Restore Defaults> function to load Optimized Defaults, and select <Save Changes and Reset> to restart the computer. Then the BIOS Update is completed.


BIOS Update Utility (through the Internet)

1. Installing BIOS Update Utility from the DVD Driver.
2. Please make sure the system is connected to the internet before using this function.


3. Launch BIOS Update Utility and click the “Online Update” button on the main screen.




4. An open dialog will show up to request your agreement to start the BIOS update. Click “Yes” to start the online update procedure.

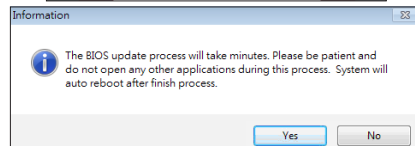


5. If there is a new BIOS version, the utility will ask you to download it. Click “Yes” to proceed.

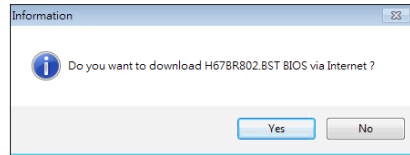

6. After the download is completed, you will be asked to program (update) the BIOS or not. Click “Yes” to proceed.

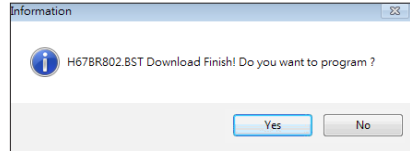

7. After the updating process is finished, you will be asked you to reboot the system. Click “OK” to reboot.

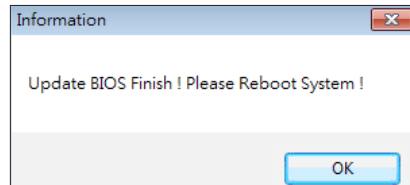

8. While the system boots up and the full screen logo shows up, press key to enter BIOS setup.

After entering the BIOS setup, please go to the <Save & Exit>, using the <Restore Defaults> function to load Optimized Defaults, and select <Save Changes> and <Reset> to restart the computer. Then, the BIOS Update is completed.


BIOS Update Utility (through a BIOS file)

1. Installing BIOS Update Utility from the DVD Driver.
2. Download the proper BIOS from <http://www.biostar.com.tw/>


3. Launch BIOS Update Utility and click the “Update BIOS” button on the main screen.




4. A warning message will show up to request your agreement to start the BIOS update. Click “OK” to start the update procedure.

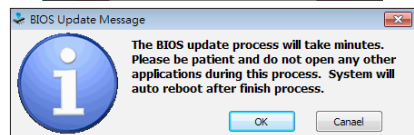

5. Choose the location for your BIOS file in the system. Please select the proper BIOS file, and then click on “Open”. It will take several minutes, please be patient.

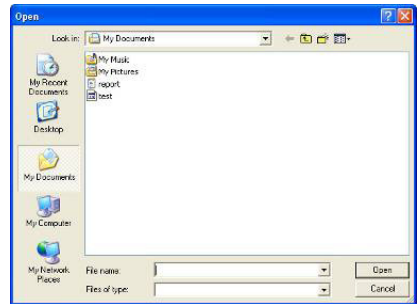


6. After the BIOS Update process is finished, click on “OK” to reboot the system.

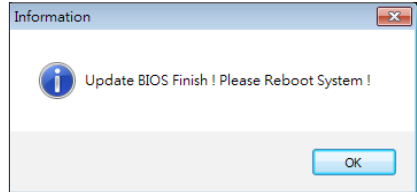

7. While the system boots up and the full screen logo shows up, press key to enter BIOS setup. After entering the BIOS setup, please go to the <Save & Exit>, using the <Restore Defaults> function to load Optimized Defaults, and select <Save Changes and Reset> to restart the computer. Then, the BIOS Update is completed.

Backup BIOS

Click the Backup BIOS button on the main screen for the backup of BIOS, and select a proper location for your backup BIOS file in the system, and click “Save”.

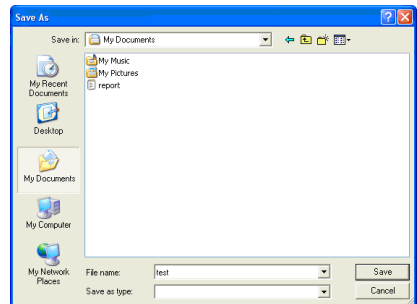

3.3 Software

Installing Software

1. Insert the Setup DVD to the optical drive. The driver installation program would appear if the Auto-run function has been enabled.
2. Select Software Installation, and then click on the respective software title.
3. Follow the on-screen instructions to complete the installation.

Launching Software

After the installation process is completed, you will see the software icon showing on the desktop. Double-click the icon to launch it.

Note

- » All the information and content about following software are subject to be changed without notice. For better performance, the software is being continuously updated.
- » The information and pictures described below are for your reference only. The actual information and settings on board may be slightly different from this manual.

BIOScreen Utility

This utility allows you to personalize your boot logo easily. You can choose BMP as your boot logo so as to customize your computer.




Please follow the step-by-step instructions below to update boot logo:

- Load Image: Choose the picture as the boot logo.
- Transform: Transform the picture for BIOS and preview the result.
- Update Bios: Write the picture to BIOS Memory to complete the update.

eHot-Line

eHot-Line is a convenient utility that helps you to contact with our Tech-Support system. This utility will collect the system information which is useful for analyzing the problem you may have encountered, and then send these information to our tech-support department to help you fix the problem.

* represents important information that you must provide. Without this information, you may not be able to send out the mail.

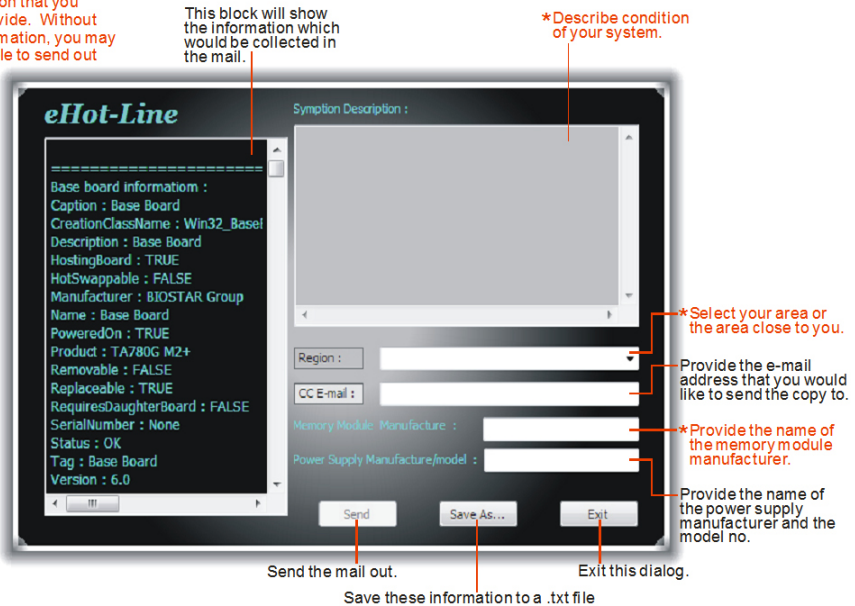

This block will show the information which would be collected in the mail.

* Describe condition of your system.

* Select your area or the area close to you.

Provide the e-mail address that you would like to send the copy to.

* Provide the name of the memory module manufacturer.

Provide the name of the power supply manufacturer and the model no.


Send the mail out.

Exit this dialog.

Save these information to a .txt file

After filling up this information, click “Send” to send the mail out. A warning dialog would appear asking for your confirmation; click “Send” to confirm or “Do Not Send” to cancel.

If you want to save this information to a .txt file, click “Save As...” and then you will see a saving dialog appears asking you to enter file name.

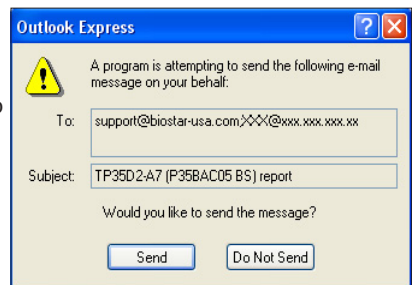

RACING GT

RACING GT is an easy-to-use program that integrates several BIOSTAR utilities and allows users to configure these utilities simultaneously and seamlessly.

System Information

This System Information tab provides you an overview of the basic system information.



The screenshot shows the RACING GT System Information window. The sidebar on the left contains the following options: Smart Ear, Vivid LED DJ, and H/W Monitor. The main content area is divided into four sections, each with a clock icon and a title bar:

- 1. Clocks:** Displays Core Speed: 4007.99 MHz, Multiplier: x 40.0, and Bus Speed: 100.00 MHz.
- 2. Motherboard:** Displays Model: Z170BT5, BIOS: RMI BIOS, BIOS Date: 11/05/15, BIOS File Name: Z178P805.B55, and Power Mode: Normal Mode.
- 3. Processor:** Displays Name: Intel(R) Core(TM) i7-6700K CPU, Specification: Intel(R) Core(TM) i7-6700K CPU @ 4.00GHz, Instructions: MMX, SSE, SSE2, SSE3, SSE3, SSE4, SSE4.2, EM64T, Code Name: Skylake, Technology: 14 nm, Voltage: 1.221V, Package: Socket LGA 1151, Family: 6, Ext. Family: 6, Model: E, Ext. Model: SE, Stepping: B, Revision: R0 /50, L1-D Cache: 4 x 32 KBytes, L1-I Cache: 4 x 32 KBytes, L2 Cache: 4 x 256 KBytes, and L3 Cache: 8192 KBytes.
- 4. Memory:** (The content for this section is not visible in the screenshot).

1. **Clocks:** Shows core speed, multiplier and bus speed.
2. **Motherboard:** Shows motherboard information.
3. **Processor:** Shows CPU information.
4. **Memory:** Shows memory information.

SmartEAR

Smart EAR allows you to control system volume and adjust impedance setting (Low/High Gain) to optimize your headphone performance. You can easily enjoy high-quality and awesome sound.

Requirements:

1. A chassis with front audio output jacks
2. An earphone or a headphone
3. Windows 7(64bit) / 10(64bit) operation system

Installation Guide:

1. Make sure the front audio cable of the chassis connected to the front audio header of the motherboard properly.
2. Install the RACING GT program from the driver DVD.
3. Connect the earphone or headphone to the front audio jack of the chassis or audio line-out port of rear I/Os.

» If you want to use an AC'97 front audio output cable, please disable the "Front Panel Jack Detection" setting. This setting can be found via O.S. Audio Utility.



1. Volume Control Knob: The volume can be finely adjusted by turning the knob either clockwise or anti-clockwise to increase or decrease system volume accordingly.

2. Mute: To disable system sound.

3. High/Low Gain Switch: Keep the gain switch to low for low impedance headphone and set to high for high impedance headphone.

Vivid LED DJ

Vivid LED DJ can adjust your color scheme of on-board LEDs, MOSFET Heatsink LED and RGB LED Device.



1. Normal Mode: It balances energy consumption and system performance.

2. Default: All the settings are back to default.

3. ECO Mode: It saves energy by slightly reducing system performance.

4. Sport Mode: It provides the highest level of system performance.

» *ECO & Sport onboard buttons and LED lights will be available when running RACING GT program in Windows environment.*

» *The color schemes of Normal, ECO & Sport mode can be adjusted by below setting items.*

5. LED Type: Select the LED lighting blocks.

- **ALL :** All LED illuminations.

- **SYSTEM :** System LED illumination. (MOSFET Heatsink LED, on board LED)

- **HEADER 1 :** The header 1 LED illumination. (RGB LED Device)

- **HEADER 2 :** The header 2 LED illumination. (RGB LED Device)

» *If you select two or more LED types, you can only select one color and one sparkling mode.*

6. Auto: LEDs will automatically change the color.

7. Permanent: LEDs are constantly lit.

8. Breath: LEDs gradually flash on and off.

9. Color Palette: Allows to you choose specific color of the LEDs.

10. Shine & Music: LEDs will flash according the music played on your system.

» *Please make sure your speaker or earphone is properly connected to audio jack before using RACING GT program.*

11. Shine: LEDs flash at a specific frequency.

12. Light/Dark: Allows you to adjust the LED brightness.

H/W Monitor

The HW Monitor tab allows you to monitor hardware voltage, fan speed, and temperature.




1. **Temperature:** Shows the current CPU and system temperature.
2. **Fan:** Shows the current fans' speed.
3. **Voltage:** Shows the current voltages of CPU and memory.
4. **CPU Fan/System Fan:** Chooses your setting fan.
5. **Calibration:** Calibrates fan speed.
6. **Disable:** Disables smart fan function.
7. **Auto:** Enables smart fan function.

Chapter 4: Useful help

4.1 Driver Installation

After you installed your operating system, please insert the Fully Setup Driver DVD into your optical drive and install the driver for better system performance.

You will see the following window after you insert the DVD

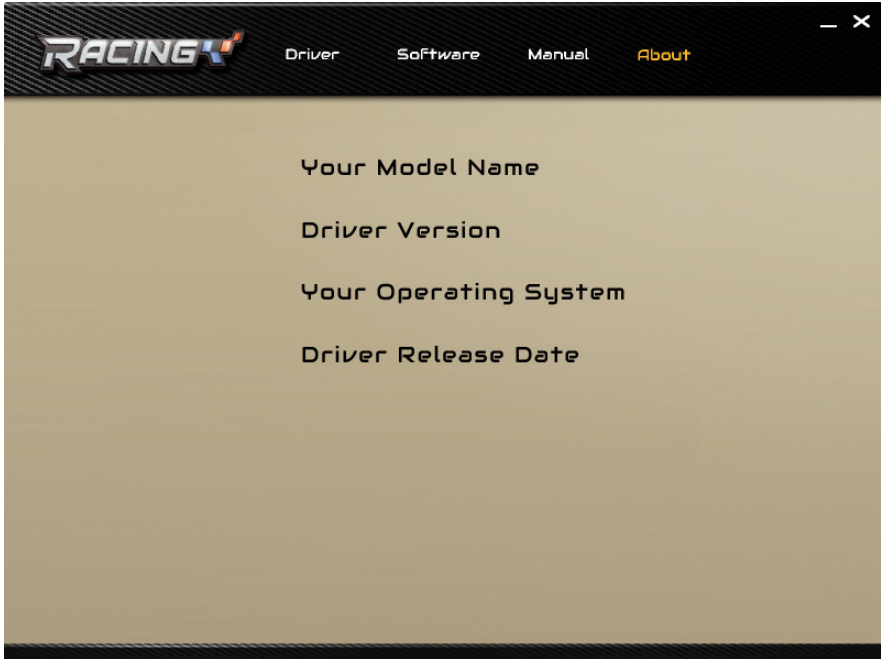

The setup guide will auto detect your motherboard and operating system.

A. Driver Installation

To install the driver, please click on the Driver icon. The setup guide will list the compatible driver for your motherboard and operating system. Click on each device driver to launch the installation program.

B. Software Installation

To install the software, please click on the Software icon. The setup guide will list the software available for your system, click on each software title to launch the installation program.

C. Manual

Aside from the paperback manual, we also provide manual in the Driver DVD. Click on the Manual icon to browse for available manual.

Note

- » *If this window didn't show up after you insert the Driver DVD, please use file browser to locate and execute the file SETUP.EXE under your optical drive.*
- » *You will need Acrobat Reader to open the manual file. Please download the latest version of Acrobat Reader software from <http://get.adobe.com/reader/>*

4.2 AMI BIOS Beep Code

Boot Block Beep Codes

Number of Beeps	Description
Continuing	Memory sizing error or Memory module not found

POST BIOS Beep Codes

Number of Beeps	Description
1	Success booting.
8	Display memory error (system video adapter)

4.3 Troubleshooting

Probable	Solution
1. There is no power in the system. Power LED does not shine; the fan of the power supply does not work. 2. Indicator light on keyboard does not shine.	1. Make sure power cable is securely plugged in. 2. Replace cable. 3. Contact technical support.
System is inoperative. Keyboard lights are on, power indicator lights are lit, and hard drives are running.	Using even pressure on both ends of the DIMM, press down firmly until the module snaps into place.
System does not boot from a hard disk drive, but can be booted from optical drive.	1. Check cable running from disk to disk controller board. Make sure both ends are securely plugged in; check the drive type in the standard CMOS setup. 2. Backing up the hard drive is extremely important. All hard disks are capable of breaking down at any time.
System only boots from an optical drive. Hard disks can be read, applications can be used, but system fails to boot from a hard disk.	1. Back up data and applications files. 2. Reformat the hard drive. Re-install applications and data using backup disks.
Screen message shows "Invalid Configuration" or "CMOS Failure."	Review system's equipment. Make sure correct information is in setup.
System cannot boot after user installs a second hard drive.	1. Set master/slave jumpers correctly. 2. Run SETUP program and select correct drive types. Call the drive manufacturers for compatibility with other drives.

CPU Overheated

If the system shutdown automatically after power on system for seconds, that means the CPU protection function has been activated.

When the CPU is over heated, the motherboard will shutdown automatically to avoid a damage of the CPU, and the system may not power on again.

In this case, please double check:

1. The CPU cooler surface is placed evenly with the CPU surface.
2. CPU fan is rotated normally.
3. CPU fan speed is fulfilling with the CPU speed.

After confirmed, please follow steps below to relief the CPU protection function.


1. Remove the power cord from power supply for seconds.
2. Wait for seconds.
3. Plug in the power cord and boot up the system.

Or you can:

1. Clear the CMOS data. (See “Close CMOS Header: JCMOS1” section)
2. Wait for seconds.
3. Power on the system again.

4.4 RAID Functions


RAID Definitions

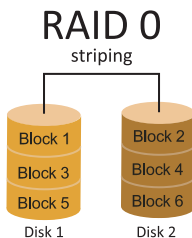

In a RAID 0 system data are split up in blocks that get written across all the drives in the array. By using multiple disks (at least 2) at the same time, this offers superior I/O performance. This performance can be enhanced further by using multiple controllers, ideally one controller per disk.

Features and Benefits


- Drives: Minimum 2, and maximum is up to 6 or 8. Depending on the platform.
- Uses: Intended for non-critical data requiring high data throughput, or any environment that does not require fault tolerance.
- Benefits: provides increased data throughput, especially for large files. No capacity loss penalty for parity.
- Drawbacks: Does not deliver any fault tolerance. If any drive in the array fails, all data is lost.
- Fault Tolerance: No.
- Total Capacity: (Minimal. HDD Capacity) x (Connected HDDs Amount)

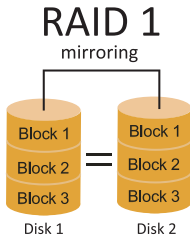

Data are stored twice by writing them to both the data disk (or set of data disks) and a mirror disk (or set of disks) . If a disk fails, the controller uses either the data drive or the mirror drive for data recovery and continues operation. You need at least 2 disks for a RAID 1 array.

Features and Benefits

- Drives: Minimum 2, and maximum is 2.
- Uses: RAID 1 is ideal for small databases or any other application that requires fault tolerance and minimal capacity.
- Benefits: Provides 100% data redundancy. Should one drive fail, the controller switches to the other drive.
- Drawbacks: Requires 2 drives for the storage space of one drive. Performance is impaired during drive rebuilds.
- Fault Tolerance: Yes.

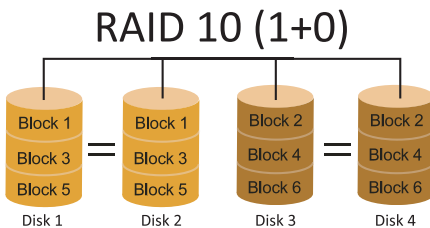

RAID 10 combines the advantages (and disadvantages) of RAID 0 and RAID 1 in one single system. It provides security by mirroring all data on a secondary set of disks (disk 3 and 4 in the drawing below) while using striping across each set of disks to speed up data transfers.

Features and Benefits

- Drives: Minimum 4, and maximum is 6 or 8, depending on the platform.
- Benefits: Optimizes for both fault tolerance and performance, allowing for automatic redundancy. May be simultaneously used with other RAID levels in an array, and allows for spare disks.
- Drawbacks: Requires twice the available disk space for data redundancy, the same as RAID level 1.
- Fault Tolerance: Yes.

APPENDIX I: Specifications in Other Languages

Arabic

المواصفات	
قاعدة وحدة المعالجة المركزية	الماخذ AM4 دعم AMD® سلسلة APU Ryzen ,APU Ryzen CPU * يرجى الرجوع إلى الموقع www.biostar.com.tw لقائمة دعم المعالج CPU.
مجموعة الشرائح	B350 AMD® (B350GT5) X370 AMD® (X370GT5) تدعم قناة مزدوجة دي. دي. ار. DDR4 1866 / 2133 / 2400 / 2667 / 2933(OC) / 3200(OC) 4x دي. دي. ار. DDR4 فتحات الذاكرة المزدوجة DIMM، تتحمل كحد أقصى 64 جيجابايت ذاكرة كل فتحة مزدوجة DIMM تتحمل دون ECC 16/8/4 جيجابايت دي. دي. ار. DDR4 * * يرجى الرجوع إلى الموقع www.biostar.com.tw لقائمة دعم الذاكرة.
الذاكرة	
التخزين	B350GT5: وصلة 4x ساتا III (6Gb/s): تدعم AHCI & 10/ 1/ 0RAID وصلة 2x 1 (32Gb/s)/M.2 SATA & PCI-E SSD X370GT5: وصلة 6x ساتا III (6Gb/s): تدعم AHCI & 10/ 1/ 0RAID وصلة 2x 1 (32Gb/s)/M.2 SATA & PCI-E SSD
	* (32Gb/s)/M.2 : يعتمد عرض النطاق الترددي على وحدة المعالجة المركزية ، Ryzen هو 32 جيجابايت / ثانية ؛ APU هو 16GB / ثانية
شبكة محلية LAN	Realtek RTL 8118AS / 1000 / 100 / 10 / 1000 ميجابايت / الثانية ، تحديد تلقائي ، النصف / القدرة القصوى المزدوجة
الترميز الصوتي	ALC892 / 7.1 قنوات عالية الدقة
ناقل متسلسل عام USB	B350GT5: منافذ 1 x ناقل متسلسل عام Gen2 USB3.1 (10Gb/s) TYPE-C (1) في الداخل والخارج الخلفية) منافذ 1 x ناقل متسلسل عام Gen2 USB3.1 (10Gb/s) TYPE-A (1) في الداخل والخارج الخلفية) منافذ 1 x ناقل متسلسل عام Gen1 USB3.1 (5Gb/s) (4) في الداخل والخارج الخلفية و 2 من خلال الموزع الداخلي) منافذ 4 x ناقل متسلسل عام USB 2.0 (4) الرووس عبر الداخلية) X370GT5: منافذ 1 x ناقل متسلسل عام Gen2 USB3.1 (10Gb/s) TYPE-C (1) في الداخل والخارج الخلفية) منافذ 1 x ناقل متسلسل عام Gen2 USB3.1 (10Gb/s) TYPE-A (1) في الداخل والخارج الخلفية) منافذ 8 x ناقل متسلسل عام Gen1 USB3.1 (5Gb/s) (4) في الداخل والخارج الخلفية و 4 من خلال الموزع الداخلي) منافذ 4 x ناقل متسلسل عام USB 2.0 (4) الرووس عبر الداخلية)
فتحات التوسع	2 x فتحة منفذ الملحقات الإضافية PCI 2 x فتحة منفذ الملحقات الإضافية PCI 2.0 x 1 1 x فتحة منفذ الملحقات الإضافية PCI 2.0 x 16 (x4)
الداخل والخارج الخلفية	1 x PS/2 لوحة المفاتيح للكمبيوتر/الفأرة فتحة توصيل عدد 1 واجهة مرئية رقمية DVI-D فتحة توصيل عدد 1 واجهة مرئية رقمية HDMI فتحة لتوصيل عدد 1 الشبكة المحلية LAN فتحة توصيل عدد 1 x ناقل متسلسل عام USB 3.1 Gen2 TYPE-C
الداخل والخارج الخلفية	B350GT5 : وصلة 4x ساتا III (6Gb/s) موزع 2 x ناقل متسلسل عام USB 2.0 (كل موزع يتحمل فتحتين ناقل متسلسل عام USB 2.0) موزع 1 x ناقل متسلسل عام USB3.1 Gen1 (5Gb/s) (كل موزع يتحمل فتحتين ناقل متسلسل عام USB3.1 Gen1) وصلة للطاقة 1 x 8 دبابيس وصلة للطاقة 1 x 24 دبابيس وصلة 2 x مروحة تبريد وحدة المعالجة المركزية وصلة 2 x مروحة تبريد المنظومة موزع 1 x اللوحة الأمامية موزع 1 x الصوت الأمامي موزع 1 x سيموس مباشر وصلة 1 x خارجية S/PDIF سوني فيليبس الواجهة الرقمية موزع 1 x فتحة تسلسلية موزع 2 x LED 5050 X370GT5: وصلة 6x ساتا III (6Gb/s) موزع 2 x ناقل متسلسل عام USB 2.0 (كل موزع يتحمل فتحتين ناقل متسلسل عام USB 2.0) موزع 2 x ناقل متسلسل عام USB3.1 Gen1 (5Gb/s) (كل موزع يتحمل فتحتين ناقل متسلسل عام USB3.1 Gen1) وصلة للطاقة 1 x 8 دبابيس وصلة للطاقة 1 x 24 دبابيس وصلة 2 x مروحة تبريد وحدة المعالجة المركزية وصلة 2 x مروحة تبريد المنظومة موزع 1 x اللوحة الأمامية موزع 1 x الصوت الأمامي موزع 1 x سيموس مباشر وصلة 1 x خارجية S/PDIF سوني فيليبس الواجهة الرقمية موزع 1 x فتحة تسلسلية موزع 2 x LED 5050
عامل الشكل	عامل شكل مدد التكنولوجيا المتقدمة ATX ، 305x 244 مم
أنظمة التشغيل المدعومة	ويندوز 7(64bit) / 10(64bit) بيوستار BIOSSTAR تحفظ بحق إضافة أو إزالة الدعم لأي نظام تشغيل مع أو بدون انظار.

German

Spezifikationen		
CPU-Unterstützung	Anschluss-AM4 für AMD® A-Serie APU, Ryzen APU / Ryzen CPU * Bitte konsultieren Sie www.biostar.com.tw für CPU-Unterstützungsliste	
Chipset	AMD® B350 (B350GT5) AMD® X370 (X370GT5)	
Festplattenspeicher	Unterstützt zweikanaliges DDR4 1866/2133/2400/2667/2933(OC)/3200(OC) 4 x DDR4 DIMM-SpeicherSlot, Max. Unterstützung bis zu 64 GB-Speicher Jedes DIMM unterstützt nicht-ECC 4/8/16 GB DDR4-Module * DDR4 - 2667 nur für Ryzen CPU. * Bitte konsultieren Sie www.biostar.com.tw für Speicherunterstützung Liste.	
Arbeitsspeicher	B350GT5: 4x SATA III 6Gb-Verbindung : Unterstützt AHCI & RAID 0,1,10 1x M.2 (32Gb/s) : Unterstützt PCI-E & SATA SSD	X370GT5: 6x SATA III 6Gb-Verbindung : Unterstützt AHCI & RAID 0,1,10 1x M.2 (32Gb/s) : Unterstützt PCI-E & SATA SSD
	* M.2 (32Gb/s): Die Bandbreite ist abhängig von CPU, Ryzen ist 32Gb/s ; APU ist 16Gb/s.	
LAN	Realtek RTL 8118AS 10/ 100/ 1000 Mb Auto-Negotiation, Halb- / Voll-Duplex-fähig	
Audio-Codec	ALC892 7.1 Kanäle, HD-Audio	
USB	B350GT5: 1x USB 3.1 Gen2 (10Gb/s) TYPE-C-Port & 1x USB 3.1 Gen2 (10Gb/s) TYPE-A-Port (2 hintere I/Os) 6x USB 3.1 Gen1 (5Gb/s)-Port (4 hintere I/Os und 2 via interne Header) 4x USB 2.0-Port (4 via interne Header)	X370GT5: 1x USB 3.1 Gen2 (10Gb/s) TYPE-C-Port & 1x USB 3.1 Gen2 (10Gb/s) TYPE-A-Port (2 hintere I/Os) 8x USB 3.1 Gen1 (5Gb/s)-Port (4 hintere I/Os und 4 via interne Header) 4x USB 2.0-Port (4 via interne Header)
	Erweiterungsanschlüsse 2x PCI Slot 2x PCIe 2.0 x1-Slot 1x PCIe 2.0 x16-Slot (x4) 1x PCIe 3.0 x16-Slot (Bei Verwendung einer APU beträgt die Bandbreite x8-Geschwindigkeit)	
Hintere I/Os	1x PS/2-Keyboard / Maus 1x DVI-D-Port 1x HDMI-Port 1x LAN-Port	1x USB 3.1 Gen2 (10Gb/s) TYPE-C 1x USB 3.1 Gen2 (10Gb/s) TYPE-A 4x USB 3.1 Gen1 (5Gb/s)-Port 6x Audio Jack
Interne I/Os	B350GT5: 4x SATA III 6.0Gb/s-Verbindung 2x USB 2.0-Header (jeder Header unterstützt 2 USB 2.0-Ports) 1x USB 3.1 Gen1 (5Gb/s)-Header (jeder Header unterstützt 2 USB 3.1 Gen1-Ports) 1x 8-Pin-Stromverbindung 1x 24-Pin-Stromverbindung 2x CPU-Ventilatorverbindung 2x System-Ventilatorverbindung 1x Header für Frontpanel 1x Header für Frontaudio 1x Header für klares CMOS 1x S/PDIF-Auswurfsverbindung 1x Serieller Port-Header 2x Header 5050 LED	X370GT5: 6x SATA III 6.0Gb/s-Verbindung 2x USB 2.0-Header (jeder Header unterstützt 2 USB 2.0-Ports) 2x USB 3.1 Gen1 (5Gb/s)-Header (jeder Header unterstützt 2 USB 3.1 Gen1-Ports) 1x 8-Pin-Stromverbindung 1x 24-Pin-Stromverbindung 2x CPU-Ventilatorverbindung 2x System-Ventilatorverbindung 1x Header für Frontpanel 1x Header für Frontaudio 1x Header für klares CMOS 1x S/PDIF-Auswurfsverbindung 1x Serieller Port-Header 2x Header 5050 LED
	Formfaktor	ATX Formfaktor, 305 mm x 244 mm
OS-Unterstützung	Windows 7(64bit) / 10(64bit) Biostar reserves the right to add or remove support for any OS with or without notice	

Russian

Спецификации			
Поддержка центрального процессора	Сокет AM4 для процессоров AMD® серии A - APU, Ryzen APU / Ryzen CPU * Перечень поддержки центрального процессора смотрите на www.biostar.com.tw .		
Набор микросхем	AMD® B350 (B350GT5) AMD® X370 (X370GT5)		
Память	Поддерживает двухканальный DDR4 1866/2133/2400/2667/2933(OC)/3200(OC) 4 гнезда платы памяти DDR4 DIMM, максимальная память до 64 Гб Каждый модуль DIMM поддерживает модуль не-ECC 4/8/16 Гб DDR4 * DDR4 - 2667 только для Ryzen CPU. * Перечень поддержки памяти смотрите на www.biostar.com.tw .		
Накопитель	<table border="0"> <tr> <td style="vertical-align: top;"> B350GT5: Соединитель 4x SATA III 6 Гб/с : Поддерживает AHCI & RAID 0,1,10 1x M.2 (32 Гб/с) : Поддерживает PCI-E & SATA SSD * M.2 (32 Гб/с): Полоса пропускания зависит от CPU, Ryzen составляет 32 Гб/с ; APU составляет 16 Гб/с. </td> <td style="vertical-align: top;"> X370GT5: Соединитель 6x SATA III 6 Гб/с : Поддерживает AHCI & RAID 0,1,10 1x M.2 (32 Гб/с) : Поддерживает PCI-E & SATA SSD </td> </tr> </table>	B350GT5: Соединитель 4x SATA III 6 Гб/с : Поддерживает AHCI & RAID 0,1,10 1x M.2 (32 Гб/с) : Поддерживает PCI-E & SATA SSD * M.2 (32 Гб/с): Полоса пропускания зависит от CPU, Ryzen составляет 32 Гб/с ; APU составляет 16 Гб/с.	X370GT5: Соединитель 6x SATA III 6 Гб/с : Поддерживает AHCI & RAID 0,1,10 1x M.2 (32 Гб/с) : Поддерживает PCI-E & SATA SSD
B350GT5: Соединитель 4x SATA III 6 Гб/с : Поддерживает AHCI & RAID 0,1,10 1x M.2 (32 Гб/с) : Поддерживает PCI-E & SATA SSD * M.2 (32 Гб/с): Полоса пропускания зависит от CPU, Ryzen составляет 32 Гб/с ; APU составляет 16 Гб/с.	X370GT5: Соединитель 6x SATA III 6 Гб/с : Поддерживает AHCI & RAID 0,1,10 1x M.2 (32 Гб/с) : Поддерживает PCI-E & SATA SSD		
Локальная сеть	Realtek RTL 8118AS Автосогласование 10/ 100/ 1000 Мб/с, работает в полно/полудуплексном режиме		
Аудиокодек	ALC892 Каналы 7.1, высококачественное аудио		
USB	<table border="0"> <tr> <td style="vertical-align: top;"> B350GT5: 1 порта USB 3.1 Gen2 (10Gb/s) TYPE-C & 1 порта USB 3.1 Gen2 (10Gb/s) TYPE-A (2 сзади ввода-вывода) 6 портов USB 3.1 Gen1 (5Gb/s) - (4 сзади ввода-вывода и 2 через внутренние контакты) 4 портов USB 2.0 (4 через внутренние контакты) </td> <td style="vertical-align: top;"> X370GT5: 1 порта USB 3.1 Gen2 (10Gb/s) TYPE-C & 1 порта USB 3.1 Gen2 (10Gb/s) TYPE-A (2 сзади ввода-вывода) 8 портов USB 3.1 Gen1 (5Gb/s) - (4 сзади ввода-вывода и 4 через внутренние контакты) 4 портов USB 2.0 (4 через внутренние контакты) </td> </tr> </table>	B350GT5: 1 порта USB 3.1 Gen2 (10Gb/s) TYPE-C & 1 порта USB 3.1 Gen2 (10Gb/s) TYPE-A (2 сзади ввода-вывода) 6 портов USB 3.1 Gen1 (5Gb/s) - (4 сзади ввода-вывода и 2 через внутренние контакты) 4 портов USB 2.0 (4 через внутренние контакты)	X370GT5: 1 порта USB 3.1 Gen2 (10Gb/s) TYPE-C & 1 порта USB 3.1 Gen2 (10Gb/s) TYPE-A (2 сзади ввода-вывода) 8 портов USB 3.1 Gen1 (5Gb/s) - (4 сзади ввода-вывода и 4 через внутренние контакты) 4 портов USB 2.0 (4 через внутренние контакты)
B350GT5: 1 порта USB 3.1 Gen2 (10Gb/s) TYPE-C & 1 порта USB 3.1 Gen2 (10Gb/s) TYPE-A (2 сзади ввода-вывода) 6 портов USB 3.1 Gen1 (5Gb/s) - (4 сзади ввода-вывода и 2 через внутренние контакты) 4 портов USB 2.0 (4 через внутренние контакты)	X370GT5: 1 порта USB 3.1 Gen2 (10Gb/s) TYPE-C & 1 порта USB 3.1 Gen2 (10Gb/s) TYPE-A (2 сзади ввода-вывода) 8 портов USB 3.1 Gen1 (5Gb/s) - (4 сзади ввода-вывода и 4 через внутренние контакты) 4 портов USB 2.0 (4 через внутренние контакты)		
Гнезда расшир.	2x PCI гнездо 2x гнезда PCIe 2.0 x1 1x PCIe 2.0 x16 гнездо (x4) 1x PCIe 3.0 x16 гнездо (При использовании APU пропускная способность равна скорости x8)		
Задняя плата ввода-вывода	<table border="0"> <tr> <td style="vertical-align: top;"> 1 клавиатура / мышь PS/2 1 порт DVI-D 1 порт HDMI 1 порт локальной сети </td> <td style="vertical-align: top;"> 1 порта USB 3.1 Gen2 (10Gb/s) TYPE-C 1 порта USB 3.1 Gen2 (10Gb/s) TYPE-A 4 порта USB 3.1 Gen1 (5Gb/s) 6 гнезд для подключения наушников </td> </tr> </table>	1 клавиатура / мышь PS/2 1 порт DVI-D 1 порт HDMI 1 порт локальной сети	1 порта USB 3.1 Gen2 (10Gb/s) TYPE-C 1 порта USB 3.1 Gen2 (10Gb/s) TYPE-A 4 порта USB 3.1 Gen1 (5Gb/s) 6 гнезд для подключения наушников
1 клавиатура / мышь PS/2 1 порт DVI-D 1 порт HDMI 1 порт локальной сети	1 порта USB 3.1 Gen2 (10Gb/s) TYPE-C 1 порта USB 3.1 Gen2 (10Gb/s) TYPE-A 4 порта USB 3.1 Gen1 (5Gb/s) 6 гнезд для подключения наушников		
Внутр. Плата ввода-вывода	<table border="0"> <tr> <td style="vertical-align: top;"> B350GT5: Соединитель 4x SATA III 6Гб/с 2 контакта USB 2.0 (каждый контакт поддерживает 2 порта USB 2.0) 1 контакта USB 3.1 Gen1 (5Gb/s) - (каждый контакт поддерживает 2 порта USB 3.1 Gen1) 1 8-выводный разъем питания 1 24-выводный разъем питания 2 разъем вентилятора ЦП 2 разъема вентилятора системы 1 контакт передней панели 1 контакт передней аудиопанели 1 контакт микросхемы Clear CMOS 1 соединитель S/PDIF-Out 1 контакт последовательного порта 2 контакт 5050 LED </td> <td style="vertical-align: top;"> X370GT5: Соединитель 6x SATA III 6Гб/с 2 контакта USB 2.0 (каждый контакт поддерживает 2 порта USB 2.0) 2 контакта USB 3.1 Gen1 (5Gb/s) - (каждый контакт поддерживает 2 порта USB 3.1 Gen1) 1 8-выводный разъем питания 1 24-выводный разъем питания 2 разъем вентилятора ЦП 2 разъема вентилятора системы 1 контакт передней панели 1 контакт передней аудиопанели 1 контакт микросхемы Clear CMOS 1 соединитель S/PDIF-Out 1 контакт последовательного порта 2 контакт 5050 LED </td> </tr> </table>	B350GT5: Соединитель 4x SATA III 6Гб/с 2 контакта USB 2.0 (каждый контакт поддерживает 2 порта USB 2.0) 1 контакта USB 3.1 Gen1 (5Gb/s) - (каждый контакт поддерживает 2 порта USB 3.1 Gen1) 1 8-выводный разъем питания 1 24-выводный разъем питания 2 разъем вентилятора ЦП 2 разъема вентилятора системы 1 контакт передней панели 1 контакт передней аудиопанели 1 контакт микросхемы Clear CMOS 1 соединитель S/PDIF-Out 1 контакт последовательного порта 2 контакт 5050 LED	X370GT5: Соединитель 6x SATA III 6Гб/с 2 контакта USB 2.0 (каждый контакт поддерживает 2 порта USB 2.0) 2 контакта USB 3.1 Gen1 (5Gb/s) - (каждый контакт поддерживает 2 порта USB 3.1 Gen1) 1 8-выводный разъем питания 1 24-выводный разъем питания 2 разъем вентилятора ЦП 2 разъема вентилятора системы 1 контакт передней панели 1 контакт передней аудиопанели 1 контакт микросхемы Clear CMOS 1 соединитель S/PDIF-Out 1 контакт последовательного порта 2 контакт 5050 LED
B350GT5: Соединитель 4x SATA III 6Гб/с 2 контакта USB 2.0 (каждый контакт поддерживает 2 порта USB 2.0) 1 контакта USB 3.1 Gen1 (5Gb/s) - (каждый контакт поддерживает 2 порта USB 3.1 Gen1) 1 8-выводный разъем питания 1 24-выводный разъем питания 2 разъем вентилятора ЦП 2 разъема вентилятора системы 1 контакт передней панели 1 контакт передней аудиопанели 1 контакт микросхемы Clear CMOS 1 соединитель S/PDIF-Out 1 контакт последовательного порта 2 контакт 5050 LED	X370GT5: Соединитель 6x SATA III 6Гб/с 2 контакта USB 2.0 (каждый контакт поддерживает 2 порта USB 2.0) 2 контакта USB 3.1 Gen1 (5Gb/s) - (каждый контакт поддерживает 2 порта USB 3.1 Gen1) 1 8-выводный разъем питания 1 24-выводный разъем питания 2 разъем вентилятора ЦП 2 разъема вентилятора системы 1 контакт передней панели 1 контакт передней аудиопанели 1 контакт микросхемы Clear CMOS 1 соединитель S/PDIF-Out 1 контакт последовательного порта 2 контакт 5050 LED		
Конструктив	Форм-фактор ATX, 305 мм x 244 мм		
Поддержка ОС	Windows 7(64bit) / 10(64bit) Biostar оставляет за собой право добавлять или удалять поддержку любой ОС, с уведомлением или без.		

Spanish

Especificaciones		
Compatibilidad con el procesador	Ranura AM4 Soporta AMD® Serie A APU, Ryzen APU / Ryzen CPU *Por favor consultar con www.biostar.com.tw para la lista de compatibilidad con el procesador.	
Tipo de Placa	AMD® B350 (B350GT5) AMD® X370 (X370GT5)	
Memoria	Soporta DDR4 1866/2133/2400/2667/2933(OC)/3200(OC) Doble Canal 4x DDR4 DIMM Ranura de memoria Soporta hasta 64 GB Memoria Cada DIMM soporta un modulo non-ECC 4/8/16 GB DDR4 * DDR4 - 2667 sólo para CPU Ryzen. *Por favor consultar con www.biostar.com.tw para la lista de compatibilidad con el memoria.	
Almacenamiento de información	B350GT5: Conector 4x SATA III (6Gb/s) : Soporta AHCI & RAID 0,1,10 1x M.2 (32Gb/s) : Soporta PCI-E & SATA SSD * M.2 (32Gb/s): El ancho de banda depende de la CPU, Ryzen es 32Gb/s ; APU es 16Gb/s.	X370GT5: Conector 6x SATA III (6Gb/s) : Soporta AHCI & RAID 0,1,10 1x M.2 (32Gb/s) : Soporta PCI-E & SATA SSD
LAN	Realtek RTL 8118AS 10/ 100/ 1000 Mb/s auto negociación, capacidad dúplex Mitad/Completo	
Códec Audio	ALC892 Canales Audio de Alta Definición 7.1	
USB	B350GT5: Ranura 1x USB 3.1 Gen2 (10Gb/s) TYPE-C & Ranura 1x USB 3.1 Gen2 (10Gb/s) TYPE-A (2 en las entrada/salidas posteriores) Ranura 6x USB 3.1 Gen1 (5Gb/s) - (4 en las entradas/salidas posteriores y 2 por los distribuidores internos) Ranura 4x USB 2.0 (4 por los distribuidores internos)	X370GT5: Ranura 1x USB 3.1 Gen2 (10Gb/s) TYPE-C & Ranura 1x USB 3.1 Gen2 (10Gb/s) TYPE-A (2 en las entrada/salidas posteriores) Ranura 8x USB 3.1 Gen1 (5Gb/s) - (4 en las entradas/salidas posteriores y 4 por los distribuidores internos) Ranura 4x USB 2.0 (4 por los distribuidores internos)
Ranuras de Extinción	Ranura 2x PCI Ranura 2x PCIe 2.0 x1 Ranura 1x PCIe 2.0 x16 (x4) Ranura 1x PCIe 3.0 x16 (Cuando se usa APU, el ancho de banda es x8 velocidad)	
Panel trasero de E/S	Ratón / Teclado 1x PS/2 Ranura 1x DVI-D Ranura 1x HDMI Ranura 1x LAN	Ranura 1x USB 3.1 Gen2 (10Gb/s) TYPE-C Ranura 1x USB 3.1 Gen2 (10Gb/s) TYPE-A Ranura 4x USB 3.1 Gen1 (5Gb/s) Socket audio 6x
Conectores en placa	B350GT5: Conector 4x SATA III 6Gb's Distribuidor 2x USB 2.0 (cada distribuidor soporta 2 ranuras USB 2.0) Distribuidor 1x USB 3.1 Gen1 (5Gb/s) -(cada distribuidor soporta 2 ranuras USB 3.1 Gen1) Conector con 8 patillas x1 Conector con 24 patillas x1 Conector Ventilador procesador x2 Conector Ventilador Sistema x2 Distribuidor Panel Frontal x1 Distribuidor Audio Frontal x1 Distribuidor CMOS Directo x1 Conector Externo S/PDIF x1 Distribuidor Ranura Serie x1 Distribuidor 5050 LED x2	X370GT5: Conector 6x SATA III 6Gb's Distribuidor 2x USB 2.0 (cada distribuidor soporta 2 ranuras USB 2.0) Distribuidor 2x USB 3.1 Gen1 (5Gb/s) -(cada distribuidor soporta 2 ranuras USB 3.1 Gen1) Conector con 8 patillas x1 Conector con 24 patillas x1 Conector Ventilador procesador x2 Conector Ventilador Sistema x2 Distribuidor Panel Frontal x1 Distribuidor Audio Frontal x1 Distribuidor CMOS Directo x1 Conector Externo S/PDIF x1 Distribuidor Ranura Serie x1 Distribuidor 5050 LED x2
Factor de Forma	Factor de Forma ATX, 305 mm x 244 mm	
Soporte OS	Windows 7(64bit) / 10(64bit) Biostar reserva su derecho de añadir o retirar el soporte para cada OS con o sin notificación.	

Thai

คุณสมบัติ		
ซีพียู	ซ็อกเก็ต AM4 สนับสนุน AMD® A-series APU, Ryzen APU / Ryzen CPU * เข้าชมได้ที่ www.biostar.com.tw สำหรับรายการซีพียูที่สนับสนุน	
ชิพเซ็ต	AMD® B350 (B350GT5) AMD® X370 (X370GT5)	
หน่วยความจำ	สนับสนุน Dual Channel DDR4 1866/2133/2400/2667/2933(OC)/3200(OC) รองรับหน่วยความจำ 4 สล็อต DDR4 DIMM สูงสุดถึง 64 GB ทุก DIMM สนับสนุนโมดูล non-ECC 4/8/16 GB DDR4 *DDR4 - 2667 เฉพาะสำหรับ Ryzen CPU * เข้าชมได้ที่ www.biostar.com.tw สำหรับรายการหน่วยความจำที่สนับสนุน	
สต่อเร็ว	B350GT5: 4x SATA III พอร์ตเชื่อมต่อ (6Gb/s) : สนับสนุน AHCI & RAID 0,1,10 1x M.2 (32Gb/s) : สนับสนุน PCI-E & SATA SSD * M.2 (32Gb/s) : แบบดัดจริตขึ้นอยู่กับซีพียู Ryzen เป็น 32Gb/s ; APU เป็น 16Gb/s	X370GT5: 6x SATA III พอร์ตเชื่อมต่อ (6Gb/s) : สนับสนุน AHCI & RAID 0,1,10 1x M.2 (32Gb/s) : สนับสนุน PCI-E & SATA SSD
แลน	Realtek RTL 8118AS 10/ 100/ 1000 Mb/s การเจรจาอัตโนมัติ, ความสามารถในการเพ็ล็กซ์ Half / Full	
ออดิโอ โคเดก	ALC892 7.1 Channels, High Definition Audio	
ยูเอสบี	B350GT5: 1x USB 3.1 Gen2 (10Gb/s) Type-Cพอร์ต์ & 1x USB 3.1 Gen2 (10Gb/s) Type-Aพอร์ต์(2 พอร์ต์ด้านหลัง I/O) 6x USB 3.1 Gen1 (5Gb/s) พอร์ต์ (4 พอร์ต์ด้านหลัง I/O และ 2 พอร์ต์ ผ่านพอร์ต์เชื่อมต่อด้านหลังใน) 4x USB 2.0 พอร์ต์ (4 พอร์ต์ ผ่านพอร์ต์เชื่อมต่อภายใน)	X370GT5: 1x USB 3.1 Gen2 (10Gb/s) Type-Cพอร์ต์ & 1x USB 3.1 Gen2 (10Gb/s) Type-Aพอร์ต์(2 พอร์ต์ด้านหลัง I/O) 8x USB 3.1 Gen1 (5Gb/s) พอร์ต์ (4 พอร์ต์ด้านหลัง I/O และ 4 พอร์ต์ ผ่านพอร์ต์เชื่อมต่อด้านหลังใน) 4x USB 2.0 พอร์ต์ (4 พอร์ต์ ผ่านพอร์ต์เชื่อมต่อภายใน)
สล็อตขยายเพิ่มเติม	2x PCI สล็อต 2x PCIe 2.0 x1 สล็อต 1x PCIe 2.0 x16 สล็อต (x4) 1x PCIe 3.0 x16 สล็อต (เมื่อใช้ APU แบบดัดจริตคือความเร็ว x8)	
พอร์ต์ I/O ด้านหลัง	1x PS/2 คีย์บอร์ด / เมาส์ 1x DVI-D พอร์ต์ 1x HDMI พอร์ต์ 1x LAN พอร์ต์	1x USB 3.1 Gen2 (10Gb/s) Type-Cพอร์ต์ 1x USB 3.1 Gen2 (10Gb/s) Type-Aพอร์ต์ 4x USB 3.1 Gen1 (5Gb/s) พอร์ต์ 6x Audio Jack
พอร์ต์ I/O ด้านใน	B350GT5: 4x SATA III 6Gb/s พอร์ต์เชื่อมต่อ 2x USB 2.0 พอร์ต์เชื่อมต่อ (หัวเชื่อมต่อทุกตัวรองรับ 2 พอร์ต์ USB 2.0) 1x USB 3.1 Gen1 (5Gb/s) พอร์ต์เชื่อมต่อ (หัวเชื่อมต่อทุกตัวรองรับ 2 พอร์ต์ USB 3.1 Gen1) 1x 8-Pin Power พอร์ต์เชื่อมต่อ 1x 24-Pin Power พอร์ต์เชื่อมต่อ 2x พอร์ต์เชื่อมต่อ CPU Fan 2x พอร์ต์เชื่อมต่อระบบ Fan 1x พอร์ต์เชื่อมต่อแผงด้านหลังหน้า 1x พอร์ต์เชื่อมต่อออลดีโอด้านหลังหน้า 1x พอร์ต์ Clear CMOS 1x พอร์ต์เชื่อมต่อออก S/PDIF 1x พอร์ต์เชื่อมต่อ Serial Port 2x พอร์ต์ 5050 LED	X370GT5: 6x SATA III 6Gb/s พอร์ต์เชื่อมต่อ 2x USB 2.0 พอร์ต์เชื่อมต่อ (หัวเชื่อมต่อทุกตัวรองรับ 2 พอร์ต์ USB 2.0) 2x USB 3.1 Gen1 (5Gb/s) พอร์ต์เชื่อมต่อ (หัวเชื่อมต่อทุกตัวรองรับ 2 พอร์ต์ USB 3.1 Gen1) 1x 8-Pin Power พอร์ต์เชื่อมต่อ 1x 24-Pin Power พอร์ต์เชื่อมต่อ 2x พอร์ต์เชื่อมต่อ CPU Fan 2x พอร์ต์เชื่อมต่อระบบ Fan 1x พอร์ต์เชื่อมต่อแผงด้านหลังหน้า 1x พอร์ต์เชื่อมต่อออลดีโอด้านหลังหน้า 1x พอร์ต์ Clear CMOS 1x พอร์ต์เชื่อมต่อออก S/PDIF 1x พอร์ต์เชื่อมต่อ Serial Port 2x พอร์ต์ 5050 LED
รูปแบบจากโรงงาน	ขนาด ATX จากโรงงาน, 244 มม. x 305 มม.	
สนับสนุน OS	Windows 7(64bit) / 10(64bit) Biostar ขอสงวนสิทธิ์ในการเพิ่มหรือถอดการสนับสนุนสำหรับระบบปฏิบัติการ OS ต่างๆ โดยไม่ต่องงให้ทราบล่วงหน้า	



FCC条款

依照FCC条款第15部分的规定，本装置已经通过测试并且符合Class B级数字装置的限制。此条款限制了在安装过程中可能造成的有害射频干扰并提供了合理的防范措施。本装置在使用时会产生无线射频辐射，如果没有依照本手册的指示安装和使用，可能会与无线通讯装置产生干扰。然而，并不保证在特定的安装下不会发生任何干扰。

如果关闭和重新开启本设备后，仍确定本装置造成接收广播或电视的干扰，用户可以使用以下列表中的一种或多种方法来减少干扰：

- 重新安装或调整接收天线。
- 增加本设备与接收设备之间的距离。
- 连接设备连接到不同的插座以便于两个设备使用不同的回路。
- 咨询经销商或富有经验的无线电工程师，以获得更多资讯。

本用户手册内容的变更，恕不另行通知，制造商没有解释的义务。

本用户手册的所有内容若有任何错误，制造商没有义务为其承担任何责任。所有商标和产品名称均有其各自所有权。

未经过书面许可，不得以任何形式（部分或全部）复制此手册信息。

免责声明

本手册内容系BIOSTAR®知识产权，版权归BIOSTAR®所有。我们本着对用户负责的态度，精心地编写该手册，但不保证本手册的内容完全准确无误。BIOSTAR®有权在不知会用户的前提下对产品不断地进行改良、升级及对手册内容进行修正，实际状况请以产品实物为准。本手册为纯技术文档，无任何暗示及影射第三方之内容，且不承担排版错误导致的用户理解歧义。本手册中所涉及的第三方注册商标所有权归其制造商或品牌所有人。



CE符合性简短声明

我们声明此产品符合现行标准，并满足2004/108/CE、2006/95/CE 和1999/05/CE指令规定的所有基本要求。

防静电操作规则

静电可能严重损坏您的设备，在处理主板以及其它的系统设备的时候要特别注意，避免和主板上的系统组件的不必要接触，保证在抗静电的环境下工作，避免静电放电可能对主板造成损坏，当在您的机箱中插入或者移除设备时，请保证电源处于断开状态，厂商对于不遵照本操作规则或者不遵守安全规范而对主板造成的损坏不负责。



警告
主板易受静电损坏
请遵守操作规则



目录

第一章: 主板介绍	3
1.1 前言	3
1.2 包装清单	3
1.3 主板特性	4
1.4 后置面板接口	5
1.5 主板布局图	6
第二章: 硬件安装	7
2.1 中央处理器(CPU)	7
2.2 散热片	8
2.3 风扇接头	10
2.4 系统内存	10
2.5 扩展槽	12
2.6 跳线设置	13
2.7 接口和插槽	14
2.8 智能开关和LED灯	18
第三章: UEFI BIOS和软件	19
3.1 UEFI BIOS设置	19
3.2 刷新BIOS	19
3.3 软件	23
第四章: 帮助信息	30
4.1 驱动程序安装注意事项	30
4.2 AMI BIOS 哔声代码	31
4.3 问题解答	31
4.4 RAID 功能	32
附录I : 产品中有毒有害物质或元素的名称及含量	34

第一章: 主板介绍

1.1 前言

感谢您选购我们的产品。在开始安装主板前，请仔细阅读以下安全指导说明：

- 选择清洁稳定的工作环境。
- 操作前请确保计算机断开电源。
- 从防静电袋取出主板之前，先轻触安全触地器或使用触地手腕带去除静电以确保安全。
- 避免触摸主板上的零件。手持电路板的边缘，不要弯曲或按压电路板。
- 安装之后，确认没有任何小零件置于机箱中，一些小的零件可能引起电流短路并可能损坏设备。
- 确保计算机远离危险区域，如：高温、潮湿、靠近水源的地方。
- 计算机的工作温度应保持在0-45°C之间
- 为避免受伤，请注意以下幾點：
主板或連接器上尖銳的針腳
机箱上的粗糙边缘和尖角
破损的线缆可能引起短路

1.2 包装清单

- Serial ATA数据线 x4
- ATX机箱后置I/O面板 x1
- 用户手册 x1
- 驱动光盘 x1 (包括安装驱动)


注意

» 此清单可能因销售区域或主板型号不同而异，相关标配详情请咨询当地经销商。

1.3 主板特性

规格		
CPU支援	Socket AM4 支持 AMD® A-系列 APU, Ryzen APU / Ryzen CPU 请访问 www.biostar.com.tw 获取CPU的支持列表。	
芯片组	AMD® B350 (B350GT5) AMD® X370 (X370GT5)	
内存	支持双通道DDR4 1866/2133/2400/2667/2933(OC)/3200(OC) 4个DDR4 DIMM插槽, 最大内存容量为64GB 每个DIMM支持非ECC 4/ 8/ 16 GB DDR4内存模组 * DDR4 - 2667仅限于Ryzen CPU。 * 请访问 www.biostar.com.tw 获取内存的支持列表。	
存储器	B350GT5: 4个SATA III接口 (6Gb/s): 支持 AHCI & RAID 0 · 1 · 10 1x M.2 (32Gb/s): 支持 PCI-E & SATA SSD	X370GT5: 6个SATA III接口 (6Gb/s): 支持 AHCI & RAID 0 · 1 · 10 1x M.2 (32Gb/s): 支持 PCI-E & SATA SSD
	* M.2 (32Gb/s): 带宽取决于CPU · Ryzen为32Gb/s; APU为16Gb/s。	
网络	Realtek RTL 8118AS 10/ 100/ 1000 Mb/s自适应传输模式 · 半双工/全双工工作模式	
音效	ALC892 8声道音频输出 · 支持高清音频	
USB	B350GT5: 1个USB 3.1 Gen2 (10Gb/s) Type-C 端口 & 1 个USB 3.1 Gen2 (10Gb/s) Type-A 端口(背板2 个端口) 6个USB 3.1 Gen1 (5Gb/s) 端口(背板4个端口 · 板载接头支持2个端口) 4个USB 2.0端口(板载接头支持4个端口)	X370GT5: 1个USB 3.1 Gen2 (10Gb/s) Type-C 端口 & 1 个USB 3.1 Gen2 (10Gb/s) Type-A 端口(背板2 个端口) 8个USB 3.1 Gen1 (5Gb/s) 端口(背板4个端口 · 板载接头支持4个端口) 4个USB 2.0端口(板载接头支持4个端口)
	扩展槽 2个PCI 插槽 2个PCIe 2.0 x1插槽 1个PCIe 2.0 x16插槽 (x4) 1个PCIe 3.0 x16插槽 (当使用APU时, 带宽为 x8模式)	
背板接口	1个PS/2键盘/鼠标接口 1个DVI-D端口 1个HDMI端口 1个LAN端口	1个USB 3.1 Gen2 (10Gb/s) Type-C 端口 1个USB 3.1 Gen2 (10Gb/s) Type-A 端口 4个USB 3.1 Gen1 (5Gb/s)端口 6个音频插孔
板载接口	B350GT5: 4个SATA III接口 (6Gb/s) 2个USB2.0接头(每个接头支持2个USB2.0端口) 1个USB 3.1 Gen1 (5Gb/s)接头(每个接头支持2 个USB3.1 Gen1端口) 1个电源接口(8针) 1个电源接口(24针) 2个CPU风扇接头 2个系统风扇接头 1个前置面板接头 1个前置音频接头 1个清空CMOS数据接头 1个S/PDIF输出接头 1个串行端口接头 2个5050 LED接头	X370GT5: 6个SATA III接口 (6Gb/s) 2个USB2.0接头(每个接头支持2个USB2.0端口) 2个USB 3.1 Gen1 (5Gb/s)接头(每个接头支持2 个USB3.1 Gen1端口) 1个电源接口(8针) 1个电源接口(24针) 2个CPU风扇接头 2个系统风扇接头 1个前置面板接头 1个前置音频接头 1个清空CMOS数据接头 1个S/PDIF输出接头 1个串行端口接头 2个5050 LED接头
主板尺寸	ATX Form Factor · 305 mm x 244 mm	
操作系统支持	Windows 7(64bit) / 10(64bit) * 如有增加或减少任何OS支持, Biostar保留不预先通知的权利。	


1.4 后置面板接口

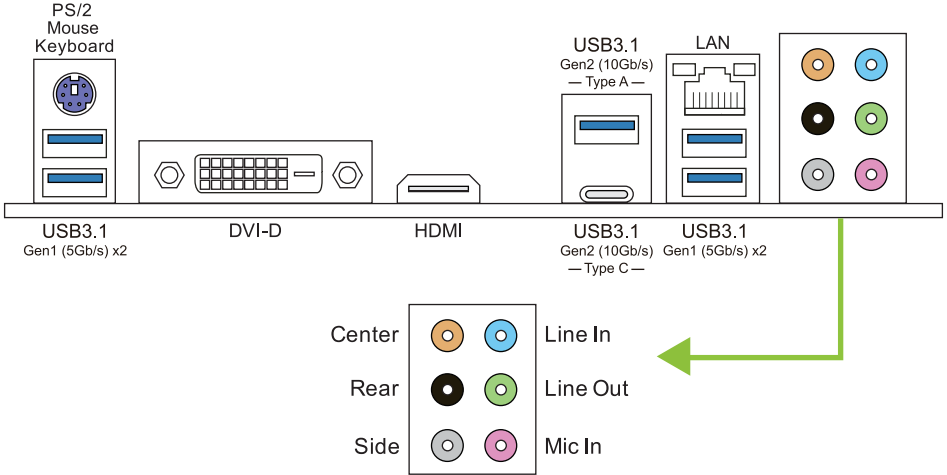

注意

- » 带集成显卡的AMD系列处理器才支持DVI-D / HDMI输出端口。
- » 由于音频芯片支持高保真音频规格，各音频插座的功能由软件定义，上面所列出的各音频插孔的输入/输出功能表示其默认设置。当连接外部麦克风到音频接口时，请使用Line In (蓝色) 和 Mic In (粉红色) 插孔。
- » 最高分辨率：
DVI-D: 1920 x 1200 @60Hz
HDMI: 4096 x 2160 @24Hz 或 3840 x 2160@30Hz
- » Athlon 处理器不支持HDMI端口信号。
- » 当使用前置HD音频插孔并插入耳机/麦克风时，后置声音将自动禁用。

1.5 主板布局图

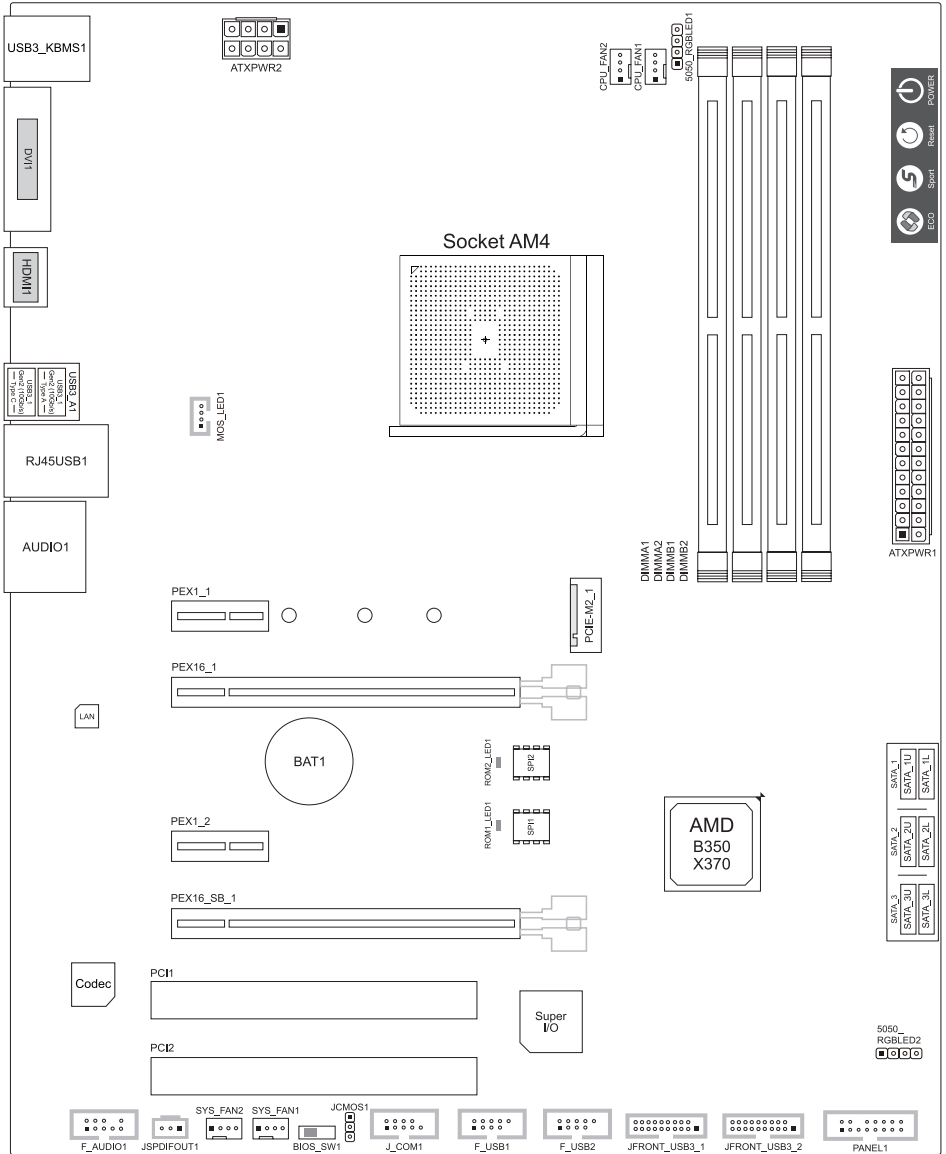


注意

» ■ 标示为针脚1


第二章: 硬件安装

2.1 中央处理器(CPU)


步骤1: 找到主板上的CPU插槽。

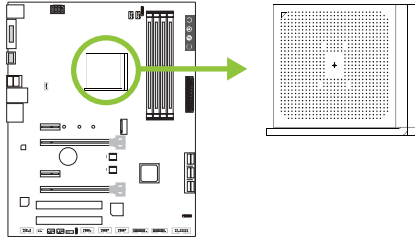


步骤2: 将固定拉杆从插槽处水平拉起至90度。

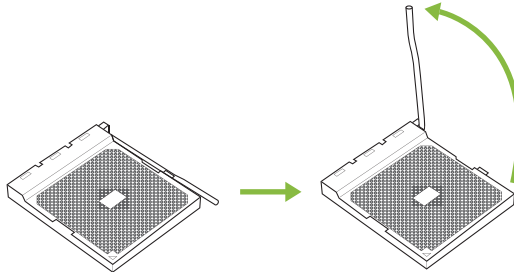

步骤3: 找到插槽上的白色三角，CPU上的金点应指向此白色三角，CPU必须按正确的方向放入。

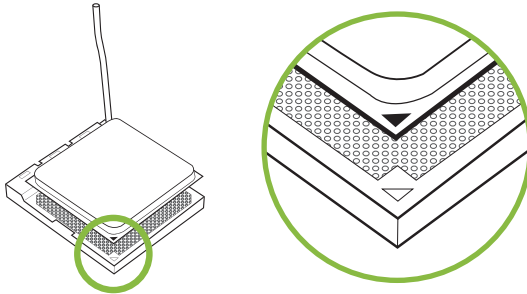

步骤4: 固定CPU，将拉杆闭合。

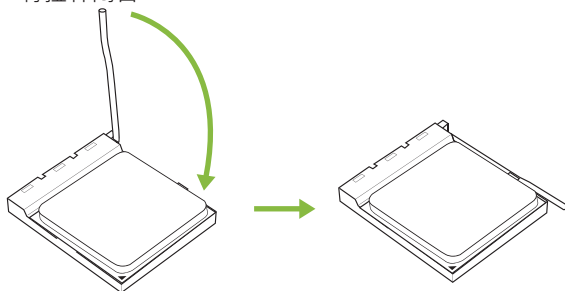


注意

» 请于拔除CPU插槽之前，关闭电源。


2.2 散热片

<类型A>

步骤 1: 将散热片和风扇组件放置在支架上。散热片夹对准插座固定凸耳，再将弹簧夹扣到固定凸耳上。

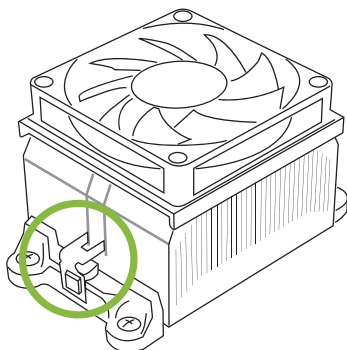


步骤2: 将另一边的固定夹向下压，扣住支架上的塑胶凸耳。然后固定，使风扇和散热片扣住支架底座。

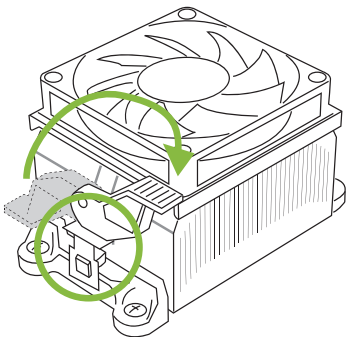


<类型B>

步骤 1: 取下主板上的散热片和风扇组件支架, 并保留散热风扇的铁背板于主板下方。

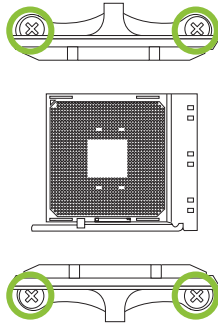

步骤 2: 将散热片和风扇组件放置于CPU上方, 调整方向使风扇电缆最靠近CPU风扇连接器, 参照示意图之顺序将螺丝锁入, 完成散热片风扇的安装。


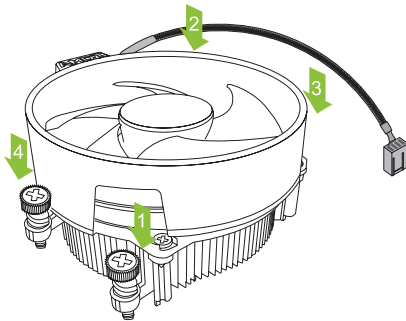
**注意**

- » 请务必连接CPU风扇接口。
- » 请参照CPU散热片的安装手册获取正确的安装信息。

2.3 风扇接头



此风扇接头支持电脑内置的冷却风扇，风扇引线和插头可能因制造商而异。

 CPU_FAN1/2: CPU 风扇接头

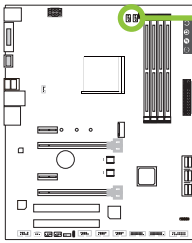

针	定义
1	接地
2	+12V
3	FAN RPM rate sense
4	Smart Fan Control (By Fan)

 SYS_FAN1/2: 系统风扇接头

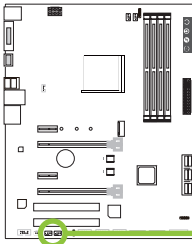


针	定义
1	接地
2	+12V
3	FAN RPM rate sense
4	Smart Fan Control (By Fan)

注意


» CPU_FAN1/2·SYS_FAN1/2支持4针脚和3针脚接口；接线时请注意红线是正极需接到第二个针脚，黑线接地需接到GND针脚。

2.4 系统内存


DDR4内存模组

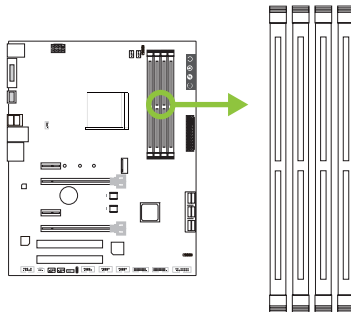

步骤1: 向外推开固定夹，打开DIMM插槽。将DIMM按顺序放在插槽上，DIMM上的切口须与插槽凹口匹配。

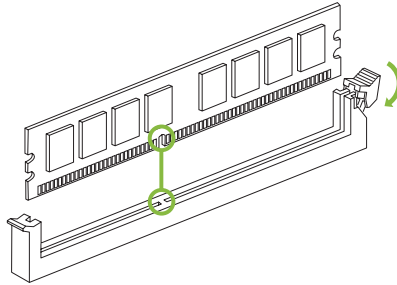

步骤2: 垂直插入DIMM并固定好，直到固定夹跳回原位，DIMM就位。

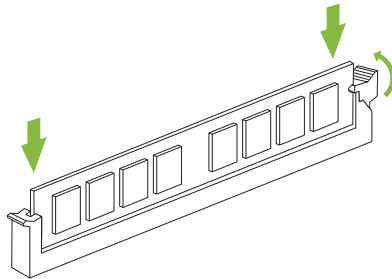

注意

» 如果DIMM未顺利插入，请勿强行按压。将DIMM拔出，再重插一次。

内存容量

DIMM插槽位置	模组	总内存
DIMMA1	4GB/8GB/16GB	最大为 64GB.
DIMMA2	4GB/8GB/16GB	
DIMMB1	4GB/8GB/16GB	
DIMMB2	4GB/8GB/16GB	

双通道内存安装

为激活主板双通道功能，使用内存模组必须符合以下要求：成对安装相同密度的内存模组。如下表所示

双通道状态	DIMMA1	DIMMA2	DIMMB1	DIMMB2
Enabled	○	X	○	X
Enabled	X	○	X	○
Enabled	○	○	○	○

(“○”表示内存已安装，“X”表示内存未安装。)

注意

» 当安装多个内存模块时，我们建议使用相同品牌和容量的内存安装于主板上。


Ryzen - DDR最高频率支持表

最高频率	DIMMA1	DIMMA2	DIMMB1	DIMMB2
DDR4-2667	--	SR	--	--
DDR4-2667	--	DR	--	--
DDR4-2667	--	SR	--	SR
DDR4-2400	--	DR	--	DR
DDR4-2133	SR	SR	SR	SR
DDR4-1866	DR	DR	DR	DR

注意

- » SR - Single-rank DIMM, 1R x4 or 1R x8。
- » DR - Dual-rank DIMMs, 2R x4 or 2R x8。
- » 为了更好的DDR4模块兼容性，请按照上述列表安装您的DDR4模块。

2.5 扩展槽

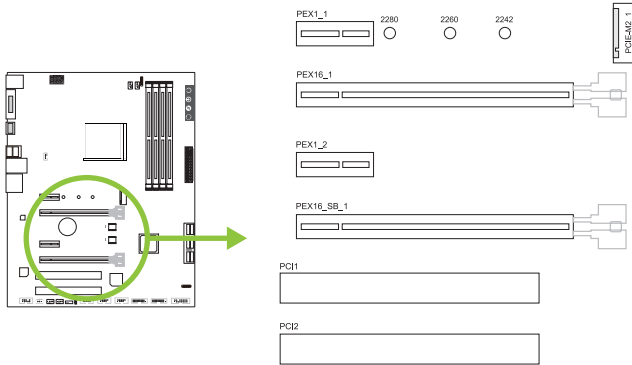

PCI1/ PCI2: 外围设备互联插槽

- PCI插槽支持用于PC的扩展卡包括：网卡、声卡、调制解调器、电视调谐器扩展卡和其他符合PCI标准的扩展卡。

PEX16_1: PCI-Express Gen3 x16 插槽 (x16 模式)

(当使用APU时，带宽为x8模式)

- 符合PCI-Express 3.0规范。
- 同步单向最大理论带宽为16GB/s，总带宽为32GB/s。

PEX16_SB_1: PCI-Express Gen2 x16 插槽 (x4 模式)

- 符合PCI-Express 2.0规范。
- 同步单向最大理论带宽为2GB/s，总带宽为4GB/s。

PEX1_1/1_2: PCI-Express Gen2 x1 插槽

- 符合PCI-Express 2.0规范。
- 同步单向最大理论带宽为500MB/s，总带宽为1GB/s。

PCI-E-M2_1: M.2 (Key M) 插槽

(带宽取决于CPU，Ryzen为32Gb/s；APU为16Gb/s)

- M.2插槽支持M.2 Type 2242/2260/2280 SSD模块。安装M.2模块前请将六角柱放到正确的位置。
- 支持M.2 SATA III (6.0 Gb/s)模块与M.2 PCI Express Gen3 x4模块(32 Gb/s)。

安装扩展卡

请参照以下步骤安装扩展卡：

- 安装扩展卡前请阅读扩展卡的相关指示说明。
- 打开电脑机箱后盖，移除螺丝和插槽支架。
- 将扩展卡按照正确的方向插入插槽，直到扩展卡完全就位。
- 用螺丝将扩展卡的金属支架固定到机箱后置面板。
- 还原电脑机箱后盖。
- 开机。如有必要，可为扩展卡更改BIOS设置。
- 安装扩展卡的驱动。

2.6 跳线设置

下图展示如何设置跳线。当跳帽放置在针脚上时，跳线为闭合(close)状态。否则跳线为断开(open)状态。

Pin 打开



Pin 闭合




Pin 1-2 闭合



JCMOS1: 清空CMOS 跳线

用户可清空CMOS数据并恢复BIOS安全设置，请按照以下步骤操作以免损坏主板。

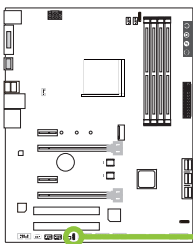

Pin 1-2 闭合: 正常操作(默认)




Pin 2-3 闭合: 清空CMOS数据

清空CMOS数据过程:

1. 断开AC电源。
2. 将跳线设置成2-3接脚闭合。
3. 等待5秒钟。
4. 将跳线设置成1-2接脚闭合。
5. 接通AC电源。
6. 开机然后按下 键进入BIOS设置。

BIOS_SW1: 双BIOS切换开关

此开关让你从双BIOS (ROM1/ROM2) 中选择其一作为开机之用。

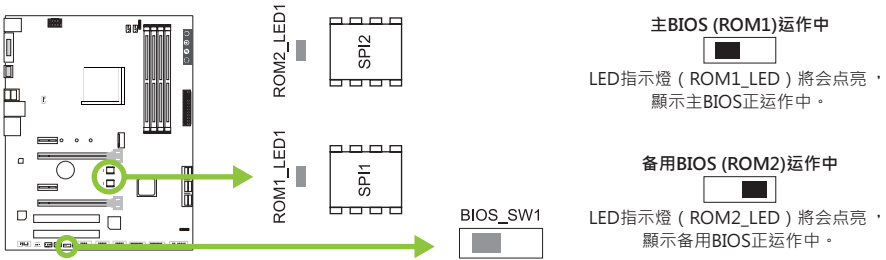


注意

- » 当你的系统开机时，不要使用此开关。
- » 在刷新BIOS之前，请确保该开关设置为你想要刷新的BIOS ROM。

2.7 接口和插槽

ATXPWR1: ATX电源接口



为了更好的兼容性，我们建议使用标准的ATX24-pin电源供应此接口的电源。

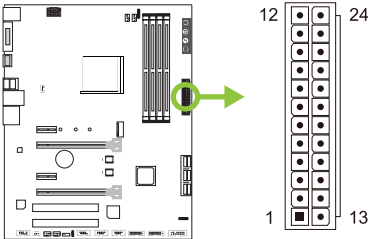

针	定义	针	定义
13	+3.3V	1	+3.3V
14	-12V	2	+3.3V
15	接地	3	接地
16	PS_ON	4	+5V
17	接地	5	接地
18	接地	6	+5V
19	接地	7	接地
20	NC	8	PW_OK
21	+5V	9	唤醒电压+5V
22	+5V	10	+12V
23	+5V	11	+12V
24	接地	12	+3.3V

ATXPWR2: ATX电源接口

 此接口给CPU电路提供+12V电压。若CPU电源插头为4针脚，请将其插入ATXPWR2的1-2-5-6针脚。

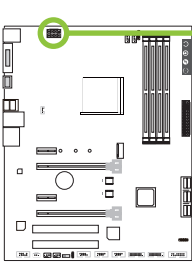



针	定义
1	+12V
2	+12V
3	+12V
4	+12V
5	接地
6	接地
7	接地
8	接地

注意

- » 开机前，请确保ATXPWR1和ATXPWR2接口都已插上电源。
- » 电压不足可能导致系统不稳或者外围设备不能正常运行。当配置使用大功率设备的系统时，建议您使用带有大功率输出的电源。

PANEL1: 前置面板接头



此16针脚接口包含开机，重启，硬盘指示灯，电源指示灯和扬声器接口。

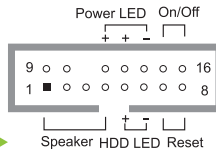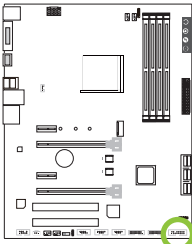

针	定义	功能	针	定义	功能
1	+5V	扬声器接口	9	N/A	N/A
2	N/A		10	N/A	
3	N/A		11	N/A	
4	扬声器		12	Power LED (+)	电源指示灯
5	HDD LED (+)	硬盘指示灯	13	Power LED (+)	
6	HDD LED (-)			14	Power LED (-)
7	接地	重启按钮	15	电源按钮	开机按钮
8	Reset control		16	接地	

SATA_1/SATA_2/SATA_3: 串行ATA 6.0 Gb/s 接口


此接口通过SATA数据线连接SATA硬盘。

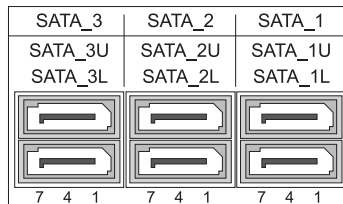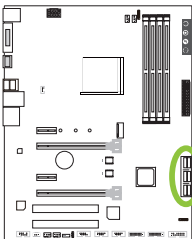

针	定义
1	接地
2	TX+
3	TX-
4	接地
5	RX-
6	RX+
7	接地

JFRONT_USB3_1/2: 前置面板USB 3.1 Gen1 (5Gb/s)接头 (JFRONT_USB3_2仅X370GT5支持)


PC前置面板支持附加的USB数据线，也可连接即插即用外围设备。

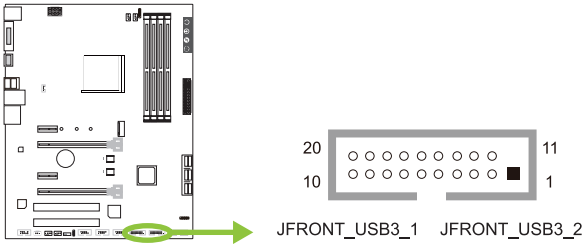

针	定义	针	定义
1	VBUS0	11	D2+
2	SSRX1-	12	D2-
3	SSRX1+	13	接地
4	接地	14	SSTX2+
5	SSTX1-	15	SSTX2-
6	SSTX1+	16	接地
7	接地	17	SSRX2+
8	D1-	18	SSRX2-
9	D1+	19	VBUS1
10	ID	20	Key

F_USB1/2: 前置面板USB 2.0接头


PC前置面板支持附加的USB数据线，也可连接即插即用外围设备。

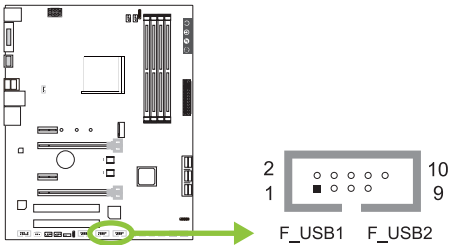

针	定义
1	+5V (fused)
2	+5V (fused)
3	USB-
4	USB-
5	USB+
6	USB+
7	接地
8	接地
9	Key
10	NC

JSPDIFOUT1: 数字音频输出接口


此接口连接PCI支架SPDIF输出接头。

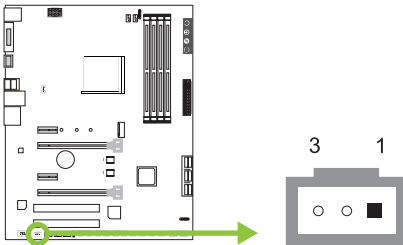

针	定义
1	+5V
2	SPDIF_OUT
3	接地

F_AUDIO1: 前置面板音频接头

此接头可连接音频输出数据线，支持HD(高清)音频和AC' 97。

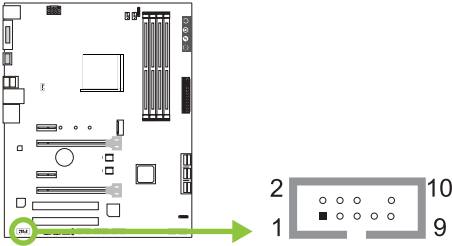


HD Audio		AC' 97	
针	定义	针	定义
1	Mic Left in	1	Mic In
2	接地	2	接地
3	Mic Right in	3	Mic Power
4	GPIO	4	Audio Power
5	Right line in	5	RT Line Out
6	Jack Sense	6	RT Line Out
7	Front Sense	7	Reserved
8	Key	8	Key
9	Left line in	9	LFT Line Out
10	Jack Sense	10	LFT Line Out

注意

- » 建议您连接前置高清音频插孔，享用主板高清音频功能。
- » 如果要连接AC' 97前置音频输出数据线，请关闭“前置面板插孔检测功能”。此功能在系统音频工具中可见。

J_COM1: 串行端口



此主板有一个串行端口可接出RS-232接头。

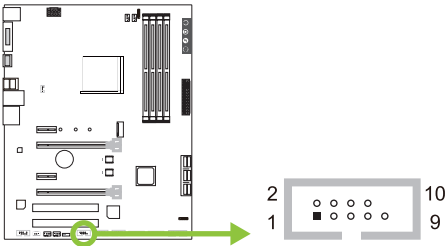

Pin	Assignment
1	Carrier detect
2	Received data
3	Transmitted data
4	Data terminal ready
5	Signal ground
6	Data set ready
7	Request to send
8	Clear to send
9	Ring indicator
10	Key

5050_RGBLED1/2: RGB LED装置 (5050 SMD) 接头

此接头提供12V电源与RGB控制讯号，可连接RGB LED装置 (5050 SMD)。

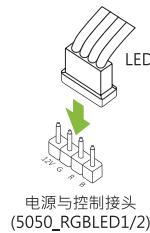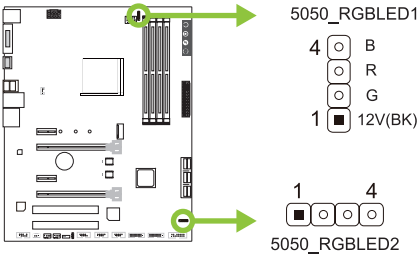


针	电缆颜色	定义
1	12V (黑色)	VCC12
2	G (绿色)	LED_GREEN
3	R (红色)	LED_RED
4	B (蓝色)	LED_BLUE

注意

- » 确保正确将针脚连接到LED装置，错误的连接可能会损坏您的LED装置或主板。

2.8 智能开关和LED灯

触控按钮

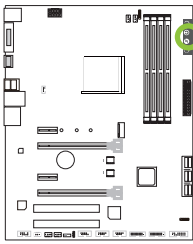

ECO模式：

启动ECO模式，会在可能情况下稍微地降低系统性能，以节省能源。

SPORT模式：

启动SPORT模式，会以最大限度提高系统性能，但可能使用较多的能源。

Reset：

轻触此按钮以重启系统。

Power：


轻触此按钮以开启或关闭系统。

注意

» ECO/SPORT 模式按钮仅限于Windows环境下运行RACING GT软件时才可以使用。

LED灯

下面的LED灯由RACING GT软件控制。请参考3.3章节的软件设置。

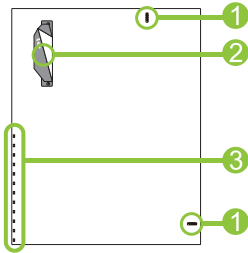

1. RGB LED 接头
2. MOSFET散热片LED灯
3. 板载LED灯(x5)

第三章: UEFI BIOS和软件

3.1 UEFI BIOS设置

- BIOS设置程序可用于查看和更改计算机的BIOS设置。开机自检时，按键可进入BIOS设置程序。
- 更多相关UEFI BIOS设置信息，请参考网站上的UEFI BIOS手册。

3.2 刷新BIOS

以下任意一种工具都可以刷新BIOS:

- BIOSTAR BIO-Flasher: 使用此工具，BIOS可通过硬盘上的文件刷新，USB驱动刷新，或者CD-ROM刷新。
- BIOSTAR BIOS刷新工具: 能够在Windows环境下自动刷新。使用此工具，BIOS可通过硬盘上的文件刷新，USB驱动刷新，CD-ROM刷新或者从网站上的文件地址刷新。

BIOSTAR BIO-Flasher


注意

- » 此工具仅允许可使用FAT32/16格式化或单个分区的存储设备。
- » 刷新BIOS时如关机或重启系统将导致系统引导失败。


使用BIOSTAR BIO-Flasher刷新BIOS

1. 进入网站下载与主板相匹配的最新BIOS文件。
2. 然后保存BIOS文件到U-盘。(仅支持FAT/FAT32格式)
3. 插入包含BIOS文件的U-盘到USB接口
4. 开机或重启后，在自检过程中按<F12>键。


5. 进入自检后，屏幕会弹出BIO-FLASHER工具。选择<fs0>搜索BIOS文件。

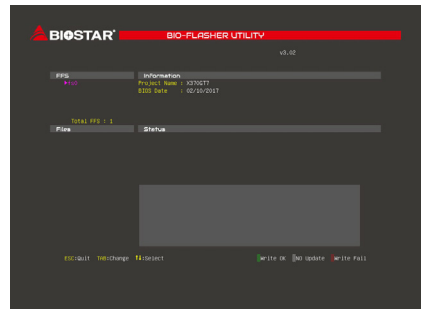

6. 选择合适的BIOS文件，并按“ Yes” 执行BIOS刷新程序。

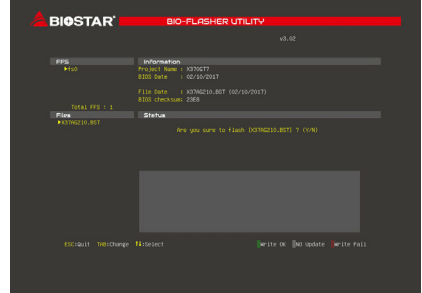

7. BIOS刷新后会弹出是否重启系统的对话框。按<Y>重启系统

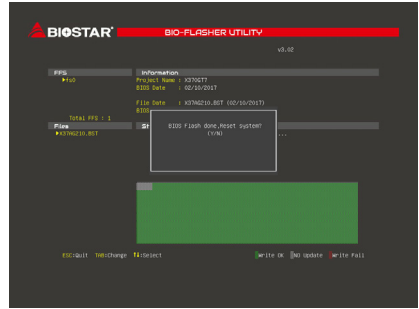

8. 系统引导并出现相关标识信息时，按键进入BIOS设置。选择<Save & Exit>，使用<Restore Defaults>功能加载系统默认值，然后选择<Save Changes and Reset>来重启系统，完成BIOS刷新。


BIOS刷新工具（通过网络）

1. 用DVD驱动安装BIOS Update Utility。
2. 使用此功能时，请确保电脑联网。


3. 打开BIOS刷新工具，然后点击“Online Update”按钮。




4. 屏幕弹出是否执行刷新BIOS程序的对话框，点击“ Yes”开始刷新BIOS。

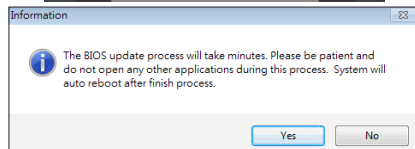


5. 如果BIOS有新版本，屏幕会弹出提示您下载最新版本的对话框。点击“ Yes”下载。

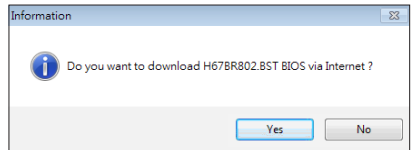

6. 完成下载后，屏幕弹出提示您刷新BIOS的对话框，点击“ Yes”开始刷新。

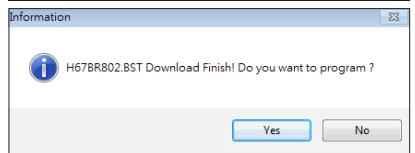

7. 刷新程序结束后，屏幕弹出提示您重启系统的对话框。点击“OK”重启系统。

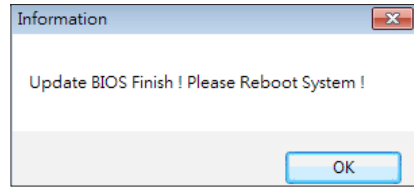

8. 系统引导并出现相关标识信息时，按键进入BIOS设置。选择<Save & Exit>，使用<Restore Defaults>功能加载系统默认值，然后选择<Save Changes and Reset>来重启系统，完成BIOS刷新。


BIOS刷新工具（通过BIOS文件）

1. 用DVD驱动安装BIOS刷新工具。
2. 从我们的网站www.biostar.com.tw 下载合适的BIOS。

3. 在主页面上打开BIOS Updat Utility，然后点击“Update BIOS”按钮。




4. 屏幕弹出是否执行刷新BIOS程序的对话框，点击“OK”开始刷新BIOS。

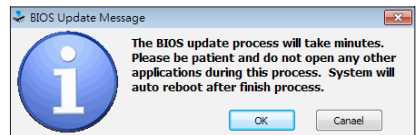

5. 选择BIOS文件的存放目录。然后选择合适的BIOS文件，点击“Open”。
刷新BIOS要花几分钟时间，请耐心等待。




6. BIOS刷新过程结束后，点击“OK”重启系统。

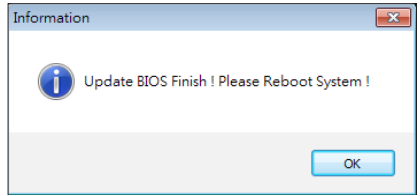

7. 系统引导并出现相关标识信息时，按键进入BIOS设置。
选择<Save & Exit>，使用<Restore Defaults>功能加载系统默认值，然后选择<Save Changes and Reset>来重启系统，完成BIOS刷新。

BIOS备份

点击BIOS备份按钮，选择存储备份文件的合适目录，然后点击“Save”。

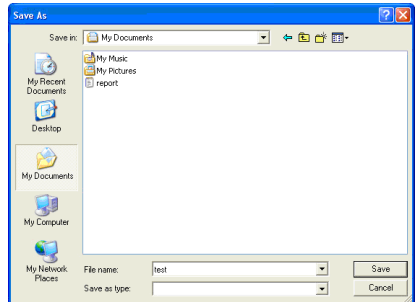

3.3 软件

安装软件

1. 将光盘放入光驱，若Autorun功能已激活，驱动安装程序将会出现。
2. 选择Software Installation，然后单击各软件图标。
3. 根据屏幕上的指令完成安装。

启动软件

安装程序完成后，桌面上将出现软件图标。请双击图标启动软件工具。

注意

- » 所有软件的相关信息和内容若有变更，恕不另行通知。为使系统性能更佳，软件会不断升级。
- » 下面的图片和信息仅供参考，此主板的实际信息和设置可能与手册稍有差异。

BIOScreen 工具

此实用工具可以将开机画面个性化。您可以选择BMP格式来自定义计算机开机画面。



请参照以下步骤来更新开机画面：

- 加载画面(Load Image)：选择图片作为开机画面。
- 转换(Transform)：转换图片并预览。
- 更新BIOS(Update Bios)：将图片写入BIOS内存，然后完成更新。

eHot-Line

eHot-Line是有助于您联系技术支持系统的便捷工具。此工具将收集系统信息，当您遇到问题时，可提供有利分析，并发送这些信息至我们的技术支持部门，从而帮助解决此问题。

* represents important information that you must provide. Without this information, you may not be able to send out the mail.

This block will show the information which would be collected in the mail.

* Describe condition of your system.

Annotations for the eHot-Line interface:

- Region: [Dropdown menu]
- CC E-mail: [Text input field]
- Memory Module Manufacture: [Text input field]
- Power Supply Manufacture/model: [Text input field]
- Buttons: Send, Save As..., Exit

* Select your area or the area close to you.

Provide the e-mail address that you would like to send the copy to.

* Provide the name of the memory module manufacturer.

Provide the name of the power supply manufacturer and the model no.


Send the mail out.

Exit this dialog.

Save these information to a .txt file

填好表格信息后，点击“Send”发送邮件。将出现一个确认信息对话框；点击“Send”确认发送，点击“Do Not Send”则取消操作。

如您想保存此信息到文本文件里，点击“Save As...”，出现一个保存对话框，输入文件名即可。

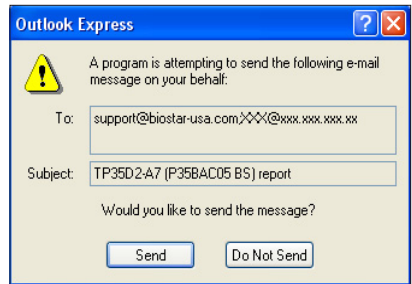

RACING GT Utility

RACING GT 软件集成几个映泰的实用程序並十分易于使用，允许用户同时无缝地配置这些实用程序。

系统信息

提供您的基本系统信息的概述。



1. 时钟频率：显示核心频率，倍频和总线速度。
2. 主板：显示主板信息。
3. 处理器：显示处理器信息。
4. 内存：显示内存信息。

耳放调控

耳放调控允许您控制系统音量，调整阻抗设置（低/高增益），以优化您的耳机性能。讓您可以轻松享受高品质的声音。

设置需求：

1. 带有前置音频输出插孔的机箱。
2. 耳机或头戴式耳机。
3. Windows 7(64bit) / 10(64bit) 操作系统。

安装指南：

1. 确保机箱前置音频线正确连接至主板上的前置音频接头。
 2. 从驱动DVD上安装RACING GT软件。
 3. 将耳机或头戴式耳机连接至机箱前置或后部的音频输出接口，並启用RACING软件。
- » 如果您想使用AC' 97前置音频输出线，请禁用“前置面板插孔检测功能”。此功能在系统音频工具中可见。



1. 音量：可调节音量大小。
2. 静音：可切换到静音状态。
3. 增益开关：使用低阻抗耳机时调至低（LO），使用高阻抗耳机时调至高（HI）。

炫彩LED

炫彩LED可调整板载LED灯、MOSFET散热片LED灯以及RGB LED装置的配色方案。



1. 普通模式 (Normal) : 自动平衡系统性能与电源消耗。
2. 默认设置: 所有设置都恢复为默认。
3. 节能模式 (ECO) : 稍微地降低系统性能以节省能源。
4. 高性能模式 (Sport) : 以最大限度地提高系统性能。
 - » ECO及Sport板载按钮以及LED灯仅限于Windows环境下运行RACING GT软件时才可以使用的。
 - » Normal、ECO和Sport模式的配色方案可以通过下面的设置项目进行调整。
5. LED分区调控: 选择LED开启区块。
 - 烈火战车: 所有区块的LED灯全亮。
 - 系统: 显示烈火战车区块LED灯。(MOSFET 散热片LED灯、板载LED灯)
 - LED接头1: 显示LED接头 1 区块LED灯。(RGB LED 装置)
 - LED接头2: 显示LED接头 2 区块LED灯。(RGB LED 装置)
- » 选择2种以上的LED分区调控时, LED颜色与闪灯模式设定,则只限一种设定模式。
6. 色彩循环: LED将自动更改颜色。
7. 常亮: LED灯持续点亮。
8. 动态: LED灯慢慢地点亮和熄灭。
9. 调色板: 允许您自订LED灯的颜色。
10. 音乐闪烁: LED灯会跟随你播放的音乐做闪烁。
 - » 使用RACING GT程序之前, 请确保您的扬声器或耳机正确连接到音频插孔。
11. 闪烁: LED灯会以一个特定的频率闪烁。
12. 亮/暗: 您可以调节LED的亮度。

硬件监测

允许您监控硬件电压、风扇转速和温度。



1. 温度信息：显示当前CPU和系统温度。
2. 风扇转速：显示当前风扇速度。
3. 电压信息：显示CPU和内存的当前电压。
4. CPU风扇/系统风扇：选择你的设置风扇。
5. 校准：校准风扇转速。
6. 关闭：关闭智能风扇功能。
7. 自动：启用智能风扇功能。

第四章:帮助信息

4.1 驱动程序安装注意事项

为获得更好的系统性能，在操作系统安装完成后，请插入您的系统驱动到光驱并安装。插入DVD后，将出现如下所示窗口。



此设置向导将自动检测您的主板和操作系统。

A. 驱动程序安装

安装驱动程序，请点击驱动器图标。设置向导将列出主板兼容驱动和操作系统。点击各设备驱动程序，以开始安装进程。

B. 软件安装

安装软件，请点击软件图标。设置向导将列出系统可用软件，点击各软件名称，以开始安装进程。

C. 使用手册

除了书本形式的手册，我们也提供光盘形式的使用指南。点击Manual图标，浏览可用相关使用指南。

注意

- » 在插入驱动之后，如此窗口未出现，请用文件浏览器查找并执行SETUP.EXE文件。
- » 若需要Acrobat Reader打开manual文件。请从网站<http://get.adobe.com/reader/>下载最新版本的Acrobat Reader软件。

4.2 AMI BIOS 哔声代码

引导模块哔声代码

哔声次数	含义
持续哔声	持续哔声

BIOS 开机自检哔声代码

哔声次数	含义
1	系统引导成功
8	显存错误(系统视频适配器)

4.3 问题解答

问题	解决方法
1. 系统没有电，电源指示灯不亮，电源风扇不转动。 2. 键盘上的指示灯不亮。	1. 确定电源线是否接好。 2. 更换线材。 3. 联系技术支持。
系统不起作用。键盘指示灯亮，电源指示灯亮，硬盘正常运作。	用力按压内存两端，确保内存安置于插槽中。
系统不能从硬盘启动，能从光盘启动。	1. 检查硬盘与主板的连线，确定各连线是否确实接好，检查标准CMOS设置中的驱动类型。 2. 硬盘随时都有可能坏掉，所以备份硬盘数据是很重要的。
系统只能从光盘启动。硬盘能被读，应用程序能被使用，但是不能从硬盘启动。	1. 备份数据和应用程序。 2. 重新格式化硬盘。用后备盘重新安装应用程序和数据。
屏幕提示“Invalid Configuration”或“CMOS Failure”。 再次检查系统设备，确定设定是否正确安装了第二个硬盘	再次检查系统设备，确定设定是否正确
安装了第二个硬盘后，系统不能启动。	1. 正确设置主/从硬盘跳线。 2. 运行安装程序，选择正确的驱动类型。 与驱动器厂商联系，寻求驱动兼容性的技术支持。

CPU过热保护系统

在开启系统数秒后如有自动关机的现象，这说明CPU保护功能已被激活。CPU过热时，防止损坏CPU，主机将自动关机，系统则无法重启。

此种情况下，请仔细检查。

1. CPU 散热器平放在CPU表面。
2. CPU风扇能正常旋转。
3. CPU风扇旋转速度与CPU运行速度相符。

确认后，请按以下步骤缓解CPU保护功能。


1. 切断电源数秒。
2. 等待几秒钟。
3. 插上电源开启系统。

或是：

1. 清除CMOS数据。(查看“Close CMOS Header: JCMOS1”部分)
2. 等待几秒钟。
3. 重启系统。

4.4 RAID 功能


RAID 定义

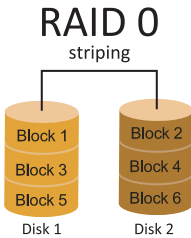

创建带区集，在同一时间内向多块磁盘写入数据，通过把数据分成多个数据块 (Block) 并行写入/读出多个磁盘以提高访问磁盘的速度分散到所有的硬盘中同时进行读写，在整个磁盘阵列建立过程中，以系统环境为基础，指数的大小决定了每块磁盘的容量。此技术可减少整个磁盘的存取时间和提供高速带宽。

性能及优点


- 驱动器: 最少2块硬盘，最长达6块或8块，取决于平台。
- Uses: 使用RAID 0来提高磁盘的性能和吞吐量，但没有冗余或错误修复能力。
- 优点: 增加磁盘的容量。
- 缺点: 整个系统是非常不可靠的，如果出现故障，无法进行任何补救，整个数据都会丢失。
- 容错: 否。

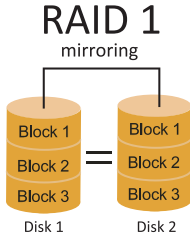

每次读写实际上是在磁盘阵列系统中(RAID 1)·通过2个磁盘驱动器并行完成的。RAID 1或镜像模式能够自动对数据进行备份·通过将一块硬盘中的数据完整复制到另外一块硬盘实现数据的冗余。假如由于硬盘的损坏·导致驱动失败·或是容量过大·RAID1可以提供一份数据备份。RAID 技术可以应用于高效方案·或者可以作为自动备份形式·代替冗长的·高价的且不稳定的备份形式。

性能及优点

- 驱动器: 最少2块硬盘·最多2块。
- 使用: RAID 1是理想的小型数据库储备器或应用在有容错能力和小容量方面。
- 优点: 提供100%的数据冗余。即使一个磁盘控制器出现问题·系统仍然可以使用另外一个磁盘控制器继续工作。
- 缺点: 2个驱动器替代一个驱动器储存的空间·在驱动重建期间系统的性能有所下降。
- 容错: 是。

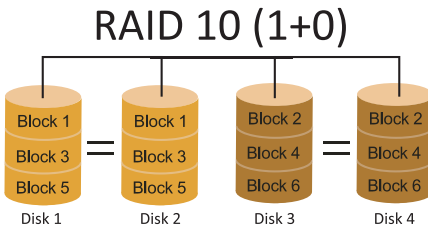

RAID 10模式是对RAID 0/ RAID 1两种不同模式的结合·可以同时支持带区集和镜像·这样既可以提升速度又可以加强数据的安全性。

性能及优点

- 驱动器: 最少4块硬盘·最多6或8块。
- 优点: 容量和性能的优化允许冗余的自动化。在一个阵列·可以同时使用其它的RAID·并允许剩余的磁盘。
- 缺点: 数据冗余需要两倍可用磁盘空间·与RAID1相同。
- 容错: 是。

» 附录I：产品中有毒有害物质或元素的名称及含量

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
PCB板	○	○	○	○	○	○
结构件	○	○	○	○	○	○
芯片及其它主动零件	X	○	○	○	○	○
连接器	X	○	○	○	○	○
被动电子元器件	X	○	○	○	○	○
焊接金属	○	○	○	○	○	○
线材	○	○	○	○	○	○
助焊剂·散热膏·标签及其它耗材	○	○	○	○	○	○

○：表示该有毒有害物质在该部件所有均质材料中的含量在SJ/T11363-2006标准规定的限量要求以下。

X：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363-2006标准规定的限量要求。

备注：在芯片及其它主动零件、连接器、被动电子元器件Pb栏位中有打X，表示Pb在该部件的某一均质材料中的含量超出SJ/T11363-2006标准规定的限量要求，但均符合欧盟ROHS指令豁免条款。