

M7VIW

FCC Statement and Copyright

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. There is no guarantee that interference will not occur in a particular installation.

The vendor makes no representations or warranties with respect to the contents here of and specially disclaims any implied warranties of merchantability or fitness for any purpose. Further the vendor reserves the right to revise this publication and to make changes to the contents here of without obligation to notify any party beforehand.

Duplication of this publication, in part or in whole is not allowed without first obtaining the vendor's approval in writing.

The content of this user's is subject to be changed without notice and we will not be responsible for any mistakes found in this user's manual. All the brand and product names are trademarks of their respective companies.

Contents

ENGLISH.....	3
M7VIW Features.....	3
Package contents	4
Layout of M7VIW.....	5
CPU Installation.....	6
DDR DIMM Modules: DDR1-2	7
SDR DIMM Modules: SDR1-2.....	7
Jumpers, Headers, Connectors & Slots	9
 ESPAÑOL	 16
Características del M7VIW.....	16
Contenidos del Paquete.....	17
Disposición del M7VIW	18
Instalación del CPU	19
Módulos DDR DIMM: DDR1-2	20
Módulos SDR DIMM: SDR1-2.....	20
Conectores, Cabezales, Puentes y Ranuras.....	22
 FRANÇAIS	 29
Caractéristiques de M7VIW	29
Contenu de l'Emballage	30
 WARPSPEDER	 31
Introduction.....	31
System Requirement.....	32
Installation.....	32
Usage.....	33
 TROUBLE SHOOTING.....	 42
SOLUCIÓN DE PROBLEMAS	43

Motherboard Description

English

M7VIW Features

CPU

- Single Socket-A for AMD Athlon/ Duron Family processor.
- Running at 200/ 266 MHz Front Side Bus frequency.

Chipset

- North Bridge: VIA KT266/ A.
- South Bridge: VT8235.

Main Memory

- Supports up to 2 DDR devices.
- Supports up to 2 SDR devices.
- Supports 200/ 266 MHz (without ECC) DDR devices.
- Supports 100/ 133 MHz (without ECC) SDR devices.
- The largest memory capacity for DDR devices is up to 2GB.
- The largest memory capacity for SDR devices is up to 2GB.

Slots

- Five 32-bit PCI bus master slots.
- One CNR slot (Type B only).
- One AGP 4X slot.

On Board IDE

- Supports PIO Mode 4, Master Mode and Ultra DMA 33/ 66/ 100/ 133 Bus Master Mode.

LAN Chip - VT6103 (Optional)

- Dual Speed - 100/10 Mbps.
- Half and Full Duplex.
- Auto Negotiation: 10/ 100, Full/ Half Duplex.

Audio

- AC97 2.2 compatible.
- Supports 2-Channel AC97 Codec.
- PC99 compliant.

Motherboard Description

On Board Peripherals

- Supports 360K, 720K, 1.2MB, 1.44MB and 2.88MB floppy disk drivers.
- Supports 2 serial ports.
- Supports 1 parallel port.(SPP/EPP/ECP mode)
- Supports PS/2 mouse and PS/2 keyboard.
- Supports 2 rear USB2.0 ports and 4 front USB2.0 ports.

BIOS

- AWARD legal Bios.
- Supports APM1.2.
- Supports ACPI.
- Supports USB 2.0 Function.

Operating System

- Offers the highest performance for MS-DOS, Windows NT, Windows 98SE, Windows 2000, Windows Me, Windows XP and LINUX.

Dimensions


- ATX Form Factor: 30.5 cm X 20.0cm (W X L)

Package contents

- HDD Cable X 1
- FDD Cable X 1
- Fully Setup Driver CD X 1
- User's Manual X1
- USB Cable X 2 (Optional)
- Rear I/O Panel for ATX Case X 1 (Optional)
- SPDIF Out Cable X1 (Optional)


Motherboard Description

Layout of M7VIW

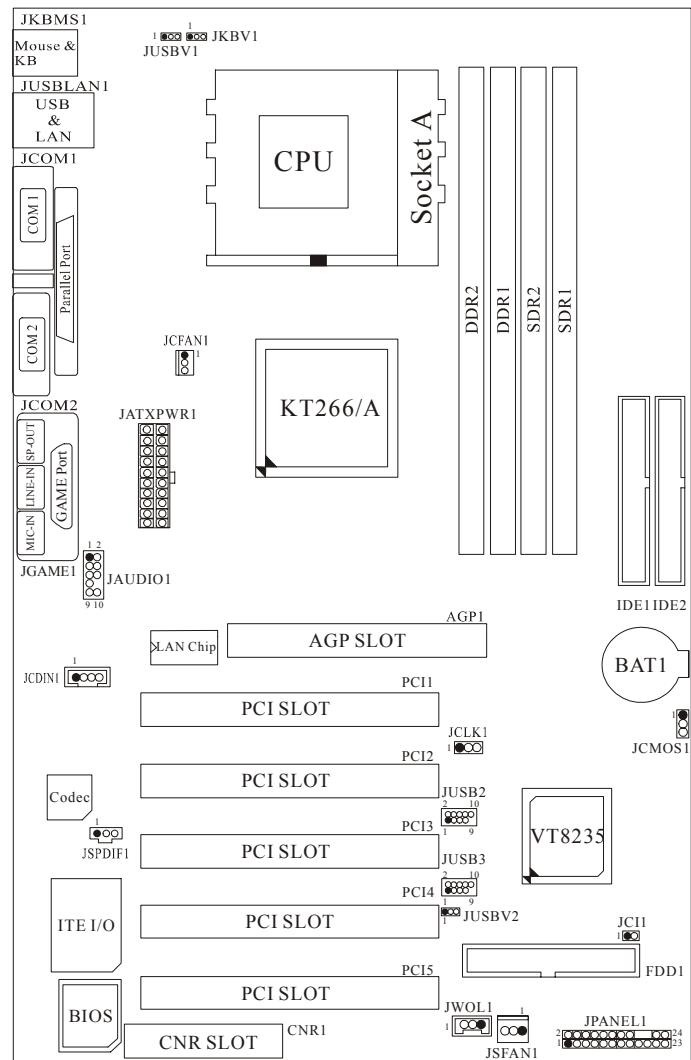


Motherboard Description

CPU Installation

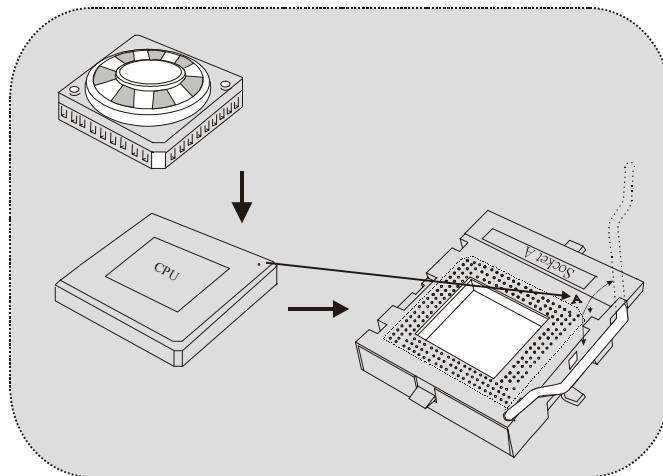

1. Pull the lever sideways away from the socket then raise the lever up to 90-degree angle.
2. Locate Pin A in the socket and lock for the white dot or cut edge in the CPU. Match Pin A with the white dot/cut edge then insert the CPU.
3. Press the lever down. Then Put the fan on the CPU and buckle it and put the fan's power port into the JCFAN1, then to complete the installation.

CPU/ System Fan Headers: JCFAN1/ JSFAN1

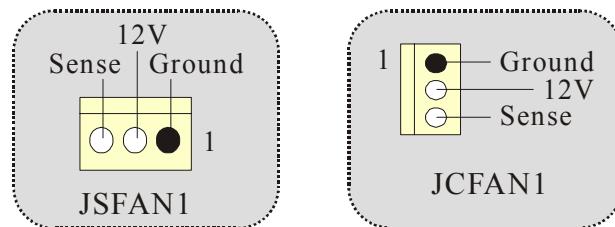

Motherboard Description

DDR DIMM Modules: DDR1-2

DRAM Access Time: 2.5V Unbuffered/ Registered DDR 200 MHz (PC1600)/ DDR 266 MHz (PC2100) Type required.
DRAM Type: 64MB/ 128MB/ 256MB/ 512MB/ 1GB DIMM Module (184 pin)

DIMM Socket Location	DDR Module	Total Memory Size (MB)
DDR 1	64MB/128MB/256MB/512MB/1GB *1	Max is 2GB
DDR 2	64MB/128MB/256MB/512MB/1GB *1	

- The list shown above for DRAM configuration is only for reference.

SDR DIMM Modules: SDR1-2

DRAM Access Time: 3.3V Unbuffered SDR 100 MHz (PC100)/ SDR 133 MHz (PC133) Type required.
DRAM Type: 64MB/ 128MB/ 256MB/ 512MB/ 1GB DIMM Module (168 pin)

DIMM Socket Location	SDR Module	Total Memory Size (MB)
SDR 1	64MB/128MB/256MB/512MB/1GB *1	Max is 2GB
SDR 2	64MB/128MB/256MB/512MB/1GB *1	

- The list shown above for DRAM configuration is only for reference.

● When you use DDR SDRAM, the memory voltage will automatically set to 2.5V.

● When you use SDRAM, the memory voltage will automatically set to 3.3V.

For the above settings, you can only use one kind of memory on this motherboard. It is forbidden to insert both kind of memory simultaneously. You must insert only DDR or SDRAM.

Motherboard Description


How to install a DIMM Module

DDR DIMM Module

1. The DIMM socket has a "Plastic Safety Tab", and the DIMM memory module has an "Asymmetrical notch", so the DIMM memory module can only fit into the slot in one direction.

2. Push the tabs out. Insert the DIMM memory modules into the socket at a 90-degree angle, then push down vertically so that it will fit into the place.

3. The Mounting Holes and plastic tabs should fit over the edge and hold the DIMM memory modules in place.

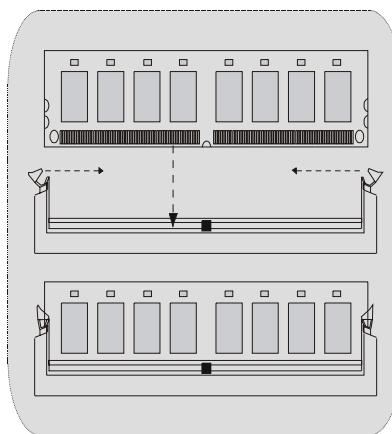


SDRAM DIMM Module

1. The DIMM socket has a "Plastic Safety Tab", and the DIMM memory module has an "Asymmetrical notch", so the DIMM memory module can only fit into the slot in one direction.

2. Push the tabs out. Insert the DIMM memory modules into the socket at a 90-degree angle, then push down vertically so that it will fit into the place.

3. The Mounting Holes and plastic tabs should fit over the edge and hold the DIMM memory modules in place.

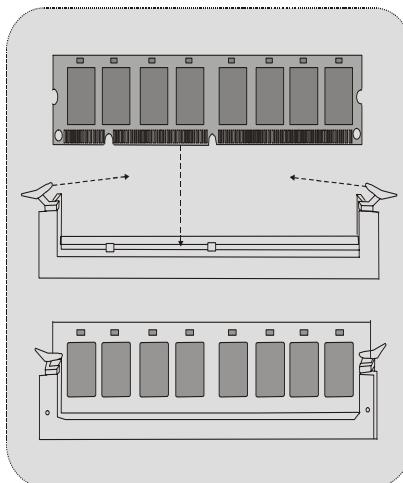

Motherboard Description

Jumpers, Headers, Connectors & Slots

Hard Disk Connectors: IDE1/ IDE2

The motherboard has a 32-bit Enhanced PCI IDE Controller that provides PIO Mode 0~4, Bus Master, and Ultra DMA 33/ 66/ 100/ 133 functionality. It has two HDD connectors IDE1 (primary), IDE2 (secondary) and IDE3. The IDE connectors can connect a master and a slave drive, so you can connect up to four hard disk drives. The first hard drive should always be connected to IDE1.

Floppy Disk Connector: FDD1

The motherboard provides a standard floppy disk connector that supports 360K, 720K, 1.2M, 1.44M and 2.88M floppy disk types. This connector supports the provided floppy drive ribbon cables.

Accelerated Graphics Port Slot: AGP1

Your monitor will attach directly to that video card. This motherboard supports video cards for PCI slots, but it is also equipped with an Accelerated Graphics Port (AGP). An AGP card will take advantage of AGP technology for improved video efficiency and performance, especially with 3D graphics.

Communication Network Riser Slot: CNR1


The CNR specification is an open Industry Standard Architecture, and it defines a hardware scalable riser card interface, which supports audio, network and modem only.

Peripheral Component Interconnect Slots: PCI1-5


This motherboard is equipped with 5 standard PCI slots. PCI stands for Peripheral Component Interconnect, and it is a bus standard for expansion cards, which has, supplanted the older ISA bus standard in most ports. This PCI slot is designated as 32 bits.

Motherboard Description


Power Connectors: JATXPWR1

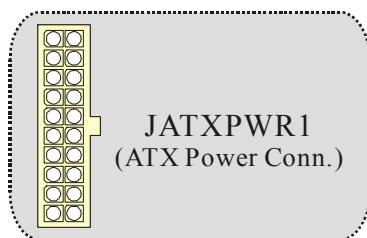


Wake On LAN Header: JWOL1

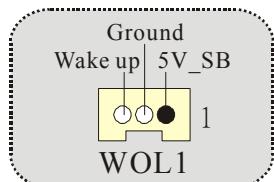

Front USB Header: JUSB2/3

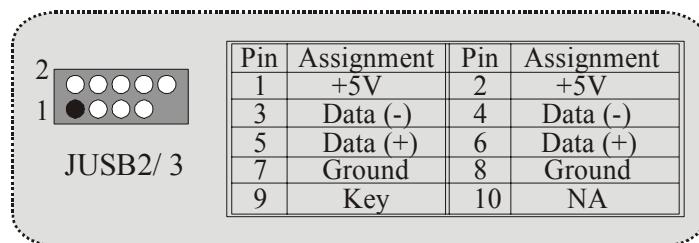


5V/ 5VSB Selection for USB/KB: JUSBV1/JUSBV2/ JKBV1

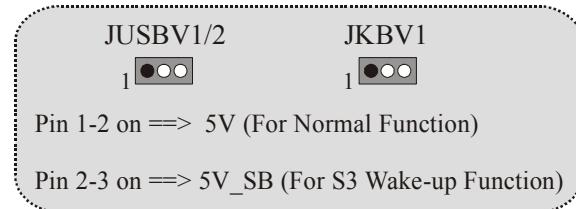


Motherboard Description

Front Panel Connector:JPANEL1

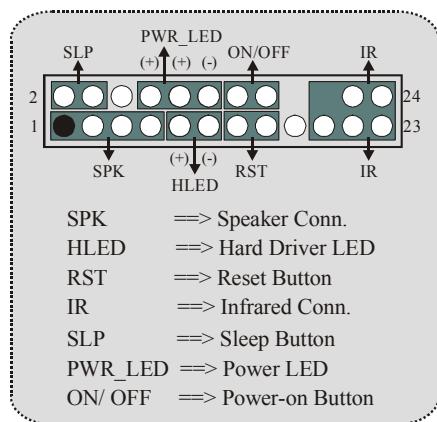


CPU Clock Selection: JCLK1

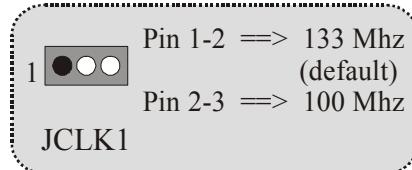




Audio Subsystem: JAUDIO1/ JCDIN1

- JAUDIO1 with 10 pins only support Codec 2CH, VIA VT1612A

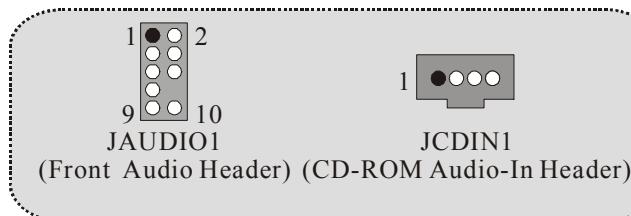


Motherboard Description

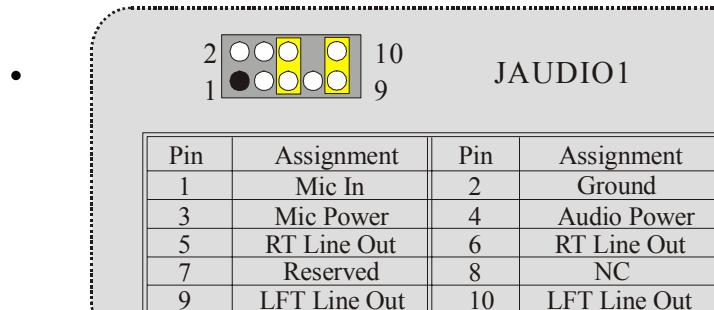


  Front Panel Audio Connector/ Jumper Block	
Jumpers Setting	Configuration
 Pin 5 and 6 Pin 9 and 10	Audio line out signals are routed to the back panel audio line out connector.
 No jumpers installed	Audio line out and mic in signals are available for front panel audio connectors.

- JAUDIO1 with 14 pins only support Codec 6CH, CMI9739A/9760 (Optional)**

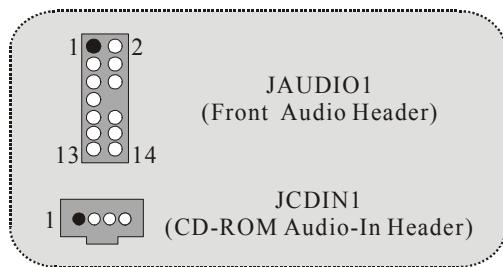

Motherboard Description

 

Pin	Assignment	Pin	Assignment
1	Mic In	2	Ground
3	Mic Power	4	Audio Power
5	RT Line Out	6	RT Line Out
7	Reserved	8	NC
9	LFT Line Out	10	LFT Line Out
11	RT Line In	12	RT Line In
13	LFT Line In	14	LFT Line In

Front Panel Audio Connector/Jumper Block

Jumper Setting	Configuration
 Pin 5 and 6 Pin 9 and 10 Pin11 and 12 Pin13 and 14	Audio line out signals are routed to the back panel audio line out connector.
 No jumpers installed	Audio line out and mic in signals are available for front panel audio connectors.

Motherboard Description

Digital Audio Output Connector: JSPDIF1

JSPDIF1	Pin	Assignment
	1	VCC5
	2	SPDIF_OUT
	3	GND

Clear CMOS Jumper: JCMOS1


JCMOS1	Assignment
 1 Pin 1-2 on	Normal Operation (default)
 1 Pin 2-3 on	Clear CMOS Data

Case Open Connector: JCI1

JCI1	Assignment
 1 No jumper installed	Normal Operation (default)
 1 Pin 1-2 on	Case Open

Motherboard Description

Back Panel Connectors

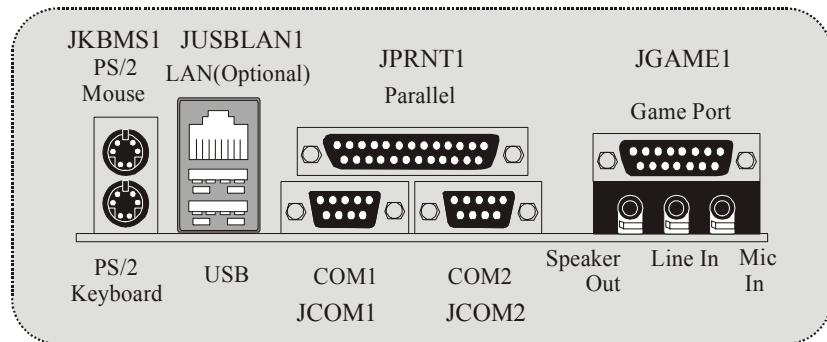

Motherboard Description

Español

Características del M7VIW

CPU

- Single Socket-A para procesadores de la familia AMD Athlon/ Duron.
- Corriendo a 200/ 266 MHz Front Side Bus.

Chipset

- North Bridge: VIA KT266/ A.
- South Bridge: VT8235.

Memoria Principal

- Soporta hasta 2 dispositivos DDR.
- Soporta hasta 2 dispositivos SDR.
- Soporta dispositivos DDR 200/ 266 MHz (sin ECC).
- Soporta dispositivos SDR 100/ 133 MHz (sin ECC).
- Capacidad máxima para dispositivos DDR de hasta 2GB.
- Capacidad máxima para dispositivos SDR de hasta 2GB.

Ranuras

- Cinco ranuras 32-bit PCI bus master.
- Una ranura CNR (solamente Tipo B).
- Una ranura AGP 4X.

IDE Onboard

- Soporta Modo PIO 4, Modo Master y Ultra DMA 33/ 66/ 100/ 133 Modo Master Bus.

LAN Chip - VT6103 (Opcional)

- Doble Velocidad - 100/10 Mbps.
- Half y Full Duplex.
- Auto Negociación: 10/ 100, Full/ Half Duplex.

Audio

- AC97 2.2 compatible.
- Soporta 2-Canales AC97 Codec.
- PC99 compatible.

Periféricos Onboard

- Soporta disquetera de 360K, 720K, 1.2MB, 1.44MB y 2.88 MB.

Motherboard Description

- Soporta 2 puerto serie.
- Soporta 1 puerto paralelo. (modo SPP/EPP/ECP)
- Soporta ratón PS/2 y teclado PS/2.
- Soporta 2 puertos USB2.0 traseros y 4 puertos USB2.0 frontales.

BIOS

- AWARD legal Bios.
- Soporta APM1.2.
- Soporta ACPI.
- Soporta Función USB 2.0.

Sistemas Operativos

- Ofrece el má alto funcionamiento para MS-DOS, Windows NT, Windows 98SE, Windows 2000, Windows Me, Windows XP and LINUX.

Dimensiones


- Factor de Forma ATX: 30.5 cm X 20.0cm (W X L)

Contenidos del Paquete

- Cable HDD X 1
- Cable FDD X 1
- Completa Configuración del Driver CD X 1
- Manual del Usuario X1
- Cable USB X 2 (Opcional)
- Panel Trasero I/O para carcasa ATX X 1 (Opcional)
- Cable SPDIF Out X1 (Opcional)


Motherboard Description

Disposición del M7VIW

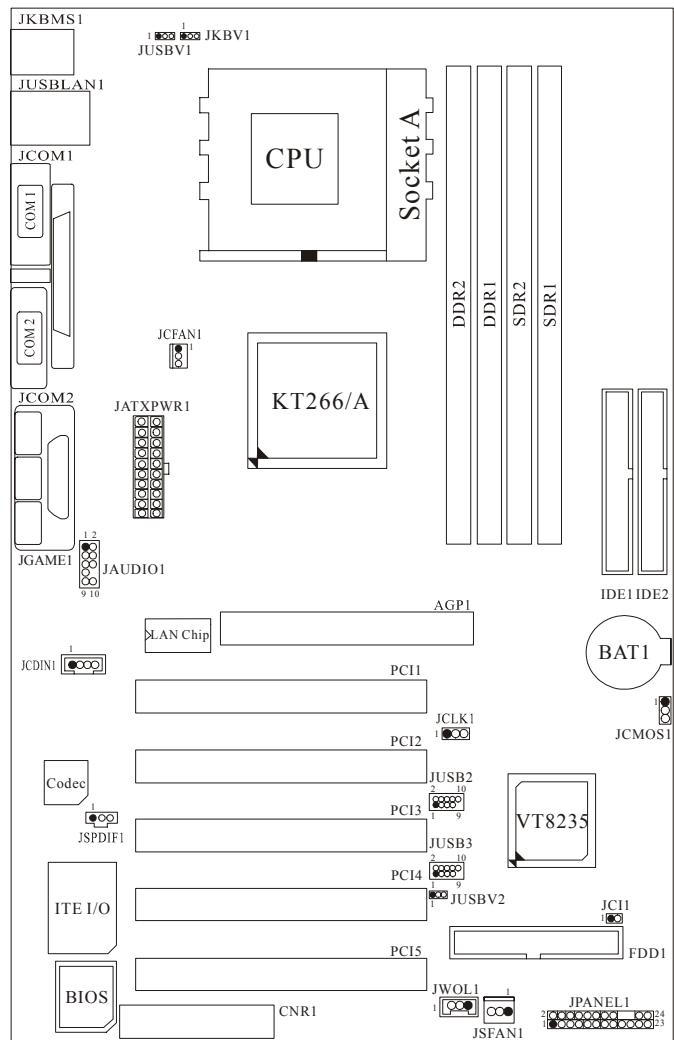


Motherboard Description

Instalación del CPU

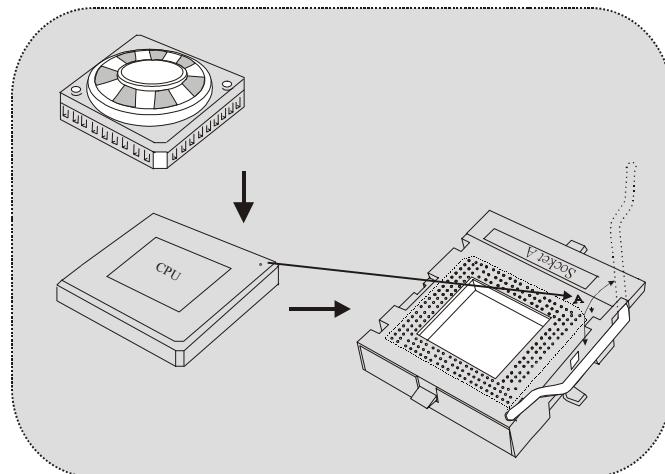

1. Tire de la palanca del lado del zócalo, luego levante la palanca hasta un ángulo de 90 grados.
2. Sitúe el contacto A del zócalo y busque el punto blanco o corte el borde en la CPU. Empareje el contacto A con el punto blanco/corte del borde, luego inserte la CPU.
3. Presione la palanca para abajo. Ponga el ventilador en la CPU y abróchelo. Luego ponga el puerto de corriente del ventilador en el JCFAN1. Y ya habrá completado su instalación.

CPU/ Cabezal del Sistema de Ventilación: JCFAN1/ JSFAN1

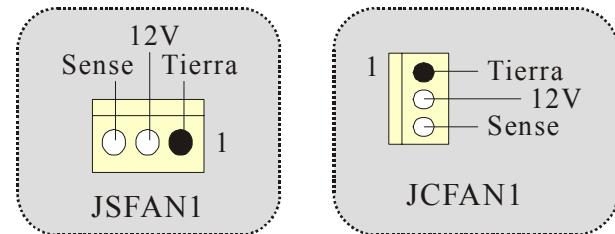

Motherboard Description

Módulos DDR DIMM: DDR1-2

DRAM Tiempo de Acceso: 2.5V Unbuffered/ Registered DDR 200 MHz (PC1600)/ DDR 266 MHz (PC2100) Tipo requerido.

DRAM Tipo: 64MB/ 128MB/ 256MB/ 512MB/ 1GB Módulo DIMM (184 contactos)

Localización del Socket DIMM	Módulo DDR	Total del Tamaño de Memoria (MB)
DDR 1	64MB/128MB/256MB/512MB/1GB *1	
DDR 2	64MB/128MB/256MB/512MB/1GB *1	Máxima 2GB

- La lista de arriba para la configuración DRAM es solamente para referencia.

Módulos SDR DIMM: SDR1-2

DRAM Tiempo de Acceso: 3.3V Unbuffered SDR 100 MHz (PC100)/ SDR 133 MHz (PC133) Tipo requerido.

DRAM Tipo: 64MB/ 128MB/ 256MB/ 512MB/ 1GB Módulo DIMM (168 contactos)

Localización del Socket DIMM	Módulo SDR	Total del Tamaño de Memoria (MB)
SDR 1	64MB/128MB/256MB/512MB/1GB *1	
SDR 2	64MB/128MB/256MB/512MB/1GB *1	Máxima 2GB

- La lista de arriba para la configuración DRAM es solamente para referencia.

● Cuando utilice DDR SDRAM, el voltaje de la memoria automáticamente se fijará a 2.5V.

● Cuando utilice SDRAM, el voltaje de la memoria automáticamente se fijará a 3.3V.


Motherboard Description

⚠ Para la configuración arriba mencionada, usted solamente puede utilizar un sólo tipo de memoria en ésta placa madre. Está prohibido insertar los dos tipos de memoria simultáneamente. Solamente puede insertar DDR o SDRAM.

Cómo instalar un Módulo DIMM


DDR DIMM Module

1. El zócalo DIMM tiene una lengüeta plástica de seguridad y el módulo de memoria DIMM tiene una muesca asimétrica, así el módulo de memoria DIMM puede caber solamente en la ranura de una sola dirección.
2. Tire la lengüeta hacia afuera. Inserte los módulos de memoria DIMM en el zócalo a los 90 grados, luego empuje hacia abajo verticalmente de modo que encaje en el lugar.
3. Los agujeros de montaje y las lengüetas plásticas deben caber por sobre el borde y sostenga los módulos de memoria DIMM en el lugar.

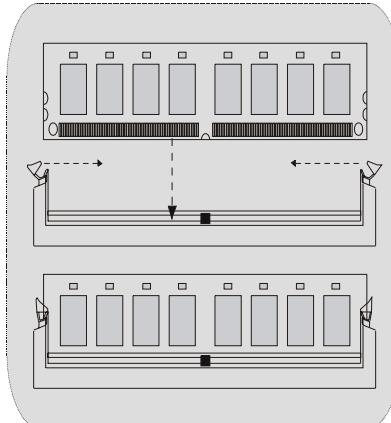

SDRAM DIMM Module

1. El zócalo DIMM tiene una lengüeta plástica de seguridad y el módulo de memoria DIMM tiene una muesca asimétrica, así el módulo de memoria DIMM puede caber solamente en la ranura de una sola dirección.
2. Tire la lengüeta hacia afuera. Inserte los módulos de memoria DIMM en el zócalo a los 90 grados, luego empuje hacia abajo verticalmente de modo que encaje en el lugar.
3. Los agujeros de montaje y las lengüetas plásticas deben caber por sobre el borde y sostenga los módulos de memoria DIMM en el lugar.

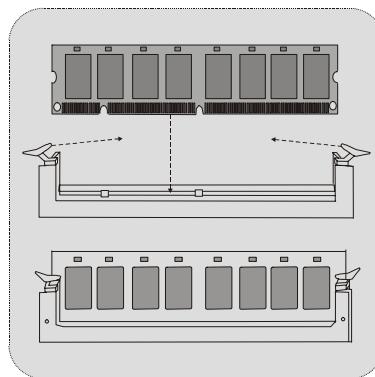

Motherboard Description

Conectores, Cabezales, Puentes y Ranuras

Conectores del Disco Duro: IDE1/ IDE2

La placa madre tiene un controlador de 32-bit PCI IDE que proporciona Modo PIO 0~4, Bus Master, y funcionalidad Ultra DMA / 33/ 66/ 100. Tiene dos conectores HDD IDE1 (primario) y IDE2 (secundario). El conector IDE puede conectar a un master y un drive esclavo, así puede conectar hasta cuatro discos rígidos. El primer disco duro debe estar siempre conectado al IDE1.

Conejor para Disquete: FDD1

La placa madre proporciona un conector estándar del disquete (FDC) que soporta 360K, 720K, 1.2M, 1.44M y 2.88M tipos de disquete. Éste conector utiliza los cables de cinta proporcionados por el disquete.

Banda de Suspensión de Comunicación y Red: AGP1

Su monitor se fijará directamente a la tarjeta de video. Ésta placa madre soporta tarjetas de video para ranuras PCI, y también está equipado con un Puerto Acelerado para Gráficos. Ésta tarjeta AGP tomará ventaja de la tecnología del AGP para el mejoramiento de la eficiencia y funcionamiento del video, especialmente con gráficos 3D.

Banda de Suspensión de Comunicación y Red: CNR1


La especificación CNR es una abierta Industria de Arquitectura Estándar, que define una tarjeta de interface escalable del hardware en el que soporta solamente modem.

Ranura de Interconexión del Componente Periférico: PCI1-5

Ésta placa madre está equipada con 5 ranuras estándar PCI. PCI es la sigla para Interconexión del Componente Periférico, y es un bus estándar para tarjetas de expansión en el que suplanta a la antigua bus estándar ISA, en su mayoría de las partes. Ésta ranura PCI está diseñado con 32 bits.


Motherboard Description

**Conecotor de Corriente:
JATXPWR1**

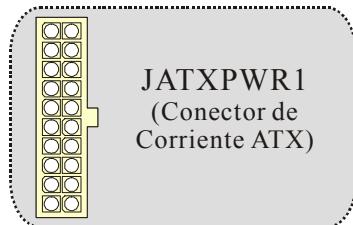

JATXPWR1
(Conecotor de
Corriente ATX)

Cabezal Wake On LAN: JWOL1

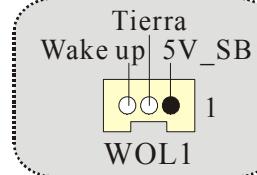

Cabezal Frontal USB: JUSB2/3



**5V/ 5VSB Selección para USB/KB: JUSBV1/JUSBV2/
JKBV1**

JUSBV1/2



JKBV1




Contacto 1-2 on ==> 5V (Para Función Normal)


Contacto 2-3 on ==> 5V_SB (Para Función S3 Wake-up)

Motherboard Description

Conecotor del Panel Frontal: JPANEL1

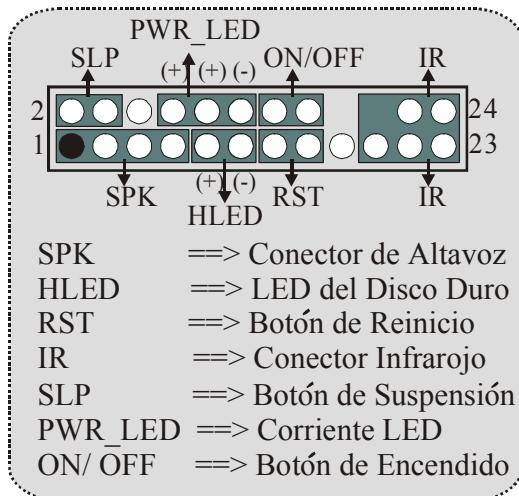


Selección de Reloj del CPU: JCLK1

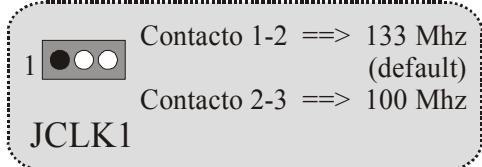


Subsistema de Audio: JAUDIO1/ JCDIN1

- JAUDIO1 con 10 contactos solamente soporta Codec 2Canales, VIA VT1612A (Opcional)

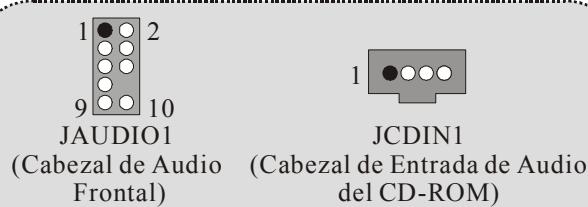



Motherboard Description

 

JAUDIO1

Contactos	Asignación	Contactos	Asignación
1	Entrada del MIC	2	Tierra
3	Corriente del MIC	4	Corriente de Audio
5	RT Salida de Línea	6	RT Salida de Línea
7	Reservado	8	Key
9	LFT Salida de Línea	10	LFT Salida de Línea

  
Conecotor del Panel Frontal de Audio/Jumper Block

<i>Jumper Setting</i>	<i>Configuración</i>
 Contacto 5 & 6 Contacto 9 & 10	La señal de salida de linea del Audio encamina al conector de la salida de linea del Audio ubicado en el panel trasero.
 No jumpers installed	La señal de salida de linea del Audio y la señal del entrada del mic estan disponibles desde el conector de Audio del panel frontal.

Motherboard Description

- JAUDIO1 con 14 contactos solamente soporta Codec 6CH, CMI9739A/9760 (Opcional)


-

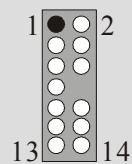

JAUDIO1
(Cabezal Frontal de Audio)



 JCDIN1
(Cabezal de Entrada de Audio
CD-ROM)





JAUDIO1

Contactos	Asignación	Contactos	Asignación
1	Entrada del MIC	2	Tierra
3	Corriente del MIC	4	Corriente de Audio
5	RT Salida de Línea	6	RT Salida de Línea
7	Reservado	8	Key
9	LFT Salida de Línea	10	LFT Salida de Línea
11	RT Entrada de Línea	12	RT Entrada de Línea
13	LFT Entrada de Línea	14	LFT Entrada de Línea

Motherboard Description

  Conecotor del Panel Frontal de Audio/ Jumper Block

<i>Jumper Setting</i>	<i>Configuración</i>
 1 3 5 7 9 11 13 2 4 6 8 10 12 14	Contacto 5 & 6 Contacto 9 & 10 Contacto 11 & 12 Contacto 13 & 14 La señal de salida de linea del Audio encamina al conector de la salida de linea del Audio ubicado en el panel trasero.
 1 3 5 7 9 11 13 2 4 6 8 10 12 14	No jumpers installed La señal de salida de linea del Audio y la señal del entrada del mic estan disponibles desde el conector de Audio del panel frontal.

Conecotor de Audio Digital: JSPDIF1

JSPDIF1	Pin	Assignment
	1	VCC5
	2	SPDIF_OUT
	3	GND

Puente de Borrar CMOS: JCMOS1


JCMOS1	Asignación
 1 Contacto 1-2 on	Operación Normal (default)
 1 Contacto 2-3 on	Borrar Datos CMOS

Motherboard Description

Conecotor de la Carcasa Abierta: JCI1

JCI1	Asignación
1 <input checked="" type="radio"/> Puente sin instalar	Operación Normal (default)
1 <input type="radio"/> Contacto 1-2 on	Carcasa Abierta

Conectores del Panel Trasero

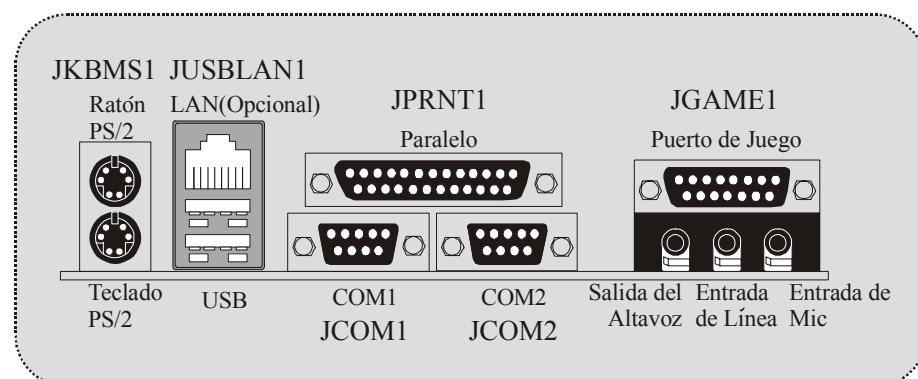

Motherboard Description

Français

Caractéristiques de M7VIW

CPU

- Socket A simple pour processeur de la Famille AMD Athlon/ Duron.
- Fonctionnant à la fréquence de Bus Frontal 200/ 266MHz.

Chipset

- North Bridge: VIA KT266/ A.
- South Bridge: VT8235.

Mémoire Principale

- Supporte jusqu'à 2 matériels DDR.
- Supporte jusqu'à 2 matériels SDR.
- Supporte des matériels DDR en 200/266MHz (sans ECC).
- Supporte des matériels SDR en 100/133MHz (sans ECC).
- La plus grande capacité mémoire pour les matériels DDR va jusqu'à 2Go.
- La plus grande capacité mémoire pour les matériels SDR va jusqu'à 2Go.

Slots

- Cinq slots de maîtrise de bus PCI 32 bits.
- Un slot CNR (Type B seulement).
- Un slot AGP 4X

IDE Interne

- Supporte PIO Mode 4, le Mode Maître et le Mode de Maîtrise de Bus Ultra DMA 33/66/100/133.

Chip LAN – VT6103 (Optionnel)

- Double Vitesse -100/10 Mbps
- Half et Full Duplex
- Négociation automatique : 10/100, Full/Half Duplex.

Audio

- Compatible AC97 2.2.
- Supporte le Codec AC97 2 Canaux.
- Conforme PC99.

Motherboard Description

Pérophériques Internes

- Supporte les lecteurs de disquettes 360K, 720K, 1.2Mo, 1.44Mo et 2.88Mo.
- Supporte 2 ports série.
- Supporte 1 port parallèle multi-mode. (mode SPP/EPP/ECP)
- Supporte souris PS/2 et clavier PS/2.
- Supporte des ports audio horizontaux.
- Supporte 1 port de jeu.
- Supporte 2 ports USB2.0 arrières et 4 ports USB2.0 avants.

BIOS

- AWARD legal Bios.
- Supporte APM1.2.
- Supporte ACPI
- Supporte la Fonction USB 2.0.

Système d'Exploitation

- Offre les meilleures performances pour MS-DOS, Windows NT, Windows 98SE, Windows 2000, Windows Me, Windows XP et LINUX.

Dimensions

- Facteur de Forme ATX: 21,0 cm X 30,5cm (l x L)

Contenu de l'Emballage

- Câble de Disque Dur X 1
- Câble de Lecteur de Disquette X 1
- CD de Pilote Complet X 1
- Manuel Utilisateur X 1
- Câbles USB X 2 (Optionnels)
- Panneau d'E/S Arrière pour Boîtier ATX X 1 (Optionnel)
- Câble de Sortie SPDIF X1 (Optionnel)

Motherboard Description

WarpSpeeder

Introduction

[WarpSpeeder™], a new powerful control utility, features three user-friendly



functions including Overclock Manager, Overvoltage Manager, and Hardware Monitor.

The following three sections detail the installation of FastTrak 376 drivers on a system that has Windows 98/Me already installed. If you're installing the FastTrak 376 drivers on a system during a Windows 98/Me installation, see "Installing Drivers During Windows 98/Me Installation" on page 10. With the Overclock Manager, users can easily adjust the frequency they prefer or they can get the best CPU performance with just one click. The Overvoltage Manager, on the other hand, helps to power up CPU core voltage and Memory voltage. The cool Hardware Monitor smartly indicates the temperatures, voltage and CPU fan speed as well as the chipset information. Also, in the About panel, you can get detail descriptions about BIOS model and chipsets. In addition, the frequency status of CPU, memory, AGP and PCI along with the CPU speed are synchronically shown on our main panel.

Moreover, to protect users' computer systems if the setting is not appropriate when testing and results in system fail or hang, [WarpSpeeder™] technology assures the system stability by automatically rebooting the computer and then restart to a speed that is either the original system speed or a suitable one.

Motherboard Description


System Requirement

OS Support: Windows 98 SE, Windows Me, Windows 2000, Windows XP

DirectX: DirectX 8.1 or above. (The Windows XP operating system includes DirectX 8.1. If you use Windows XP, you do not need to install DirectX 8.1.)

Installation


1. Execute the setup execution file, and then the following dialog will pop up. Please click "Next" button and follow the default procedure to install.

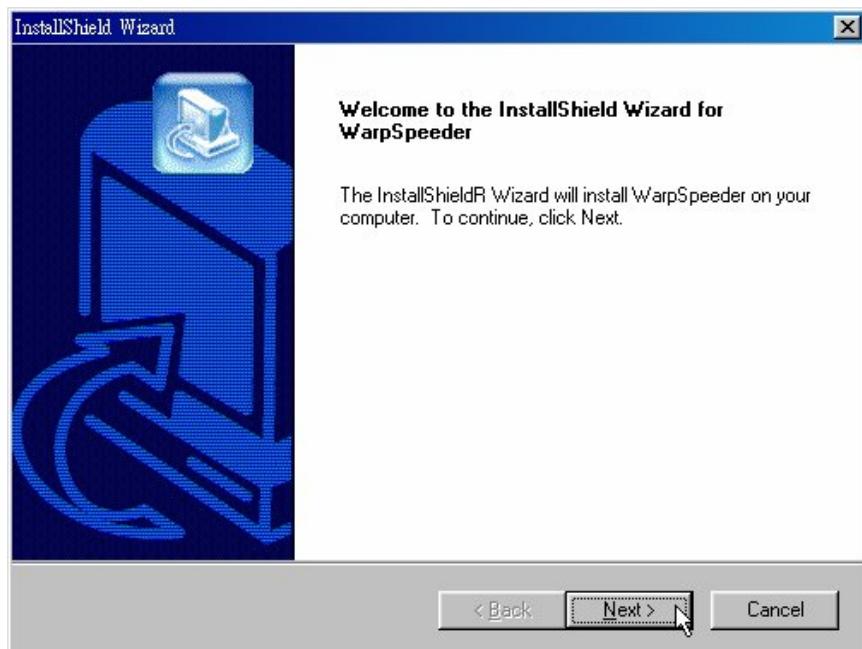

2. When you see the following dialog in setup procedure, it means setup is completed. If the "Launch the WarpSpeeder Tray Utility" checkbox is checked, the Tray Icon utility and [WarpSpeeder™] utility will be

Motherboard Description

automatically and immediately launched after you click “Finish” button.

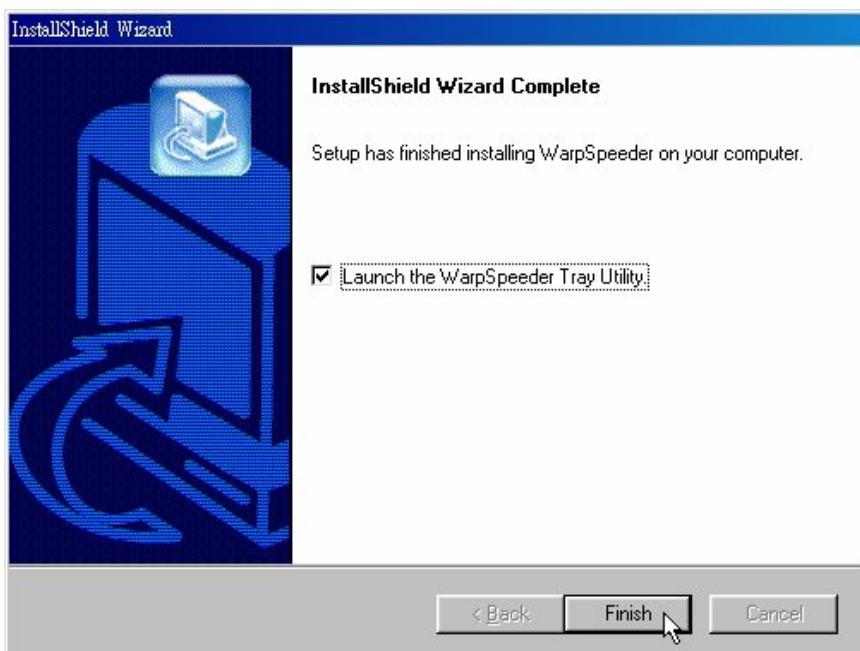

Usage

The following figures are just only for reference, the screen printed in this user manual will change according to your motherboard on hand.

[WarpSpeeder™] includes 1 tray icon and 5 panels:

1. Tray Icon:

Whenever the Tray Icon utility is launched, it will display a little tray icon on the right side of Windows Taskbar.

Motherboard Description



This utility is responsible for conveniently invoking [WarpSpeeder™] Utility. You can use the mouse by clicking the left button in order to invoke [WarpSpeeder™] directly from the little tray icon or you can right-click the little tray icon to pop up a popup menu as following figure. The “Launch Utility” item in the popup menu has the same function as mouse left-click on tray icon and “Exit” item will close Tray Icon utility if selected.



2. Main Panel

If you click the tray icon, [WarpSpeeder™] utility will be invoked. Please refer do the following figure; the utility's first window you will see is Main Panel.

Main Panel contains features as follows:

- a. Display the CPU Speed, CPU external clock, Memory clock, AGP clock, and PCI clock information.
- b. Contains About, Voltage, Overclock, and Hardware Monitor Buttons for invoking respective panels.
- c. With a user-friendly Status Animation, it can represent 3 overclock


Motherboard Description

percentage stages:

Duck walking => overclock percentage from 100% ~ 110 %

Duck running => overclock percentage from 110% ~ 120%

Duck burning => overclock percentage from 120% ~ above

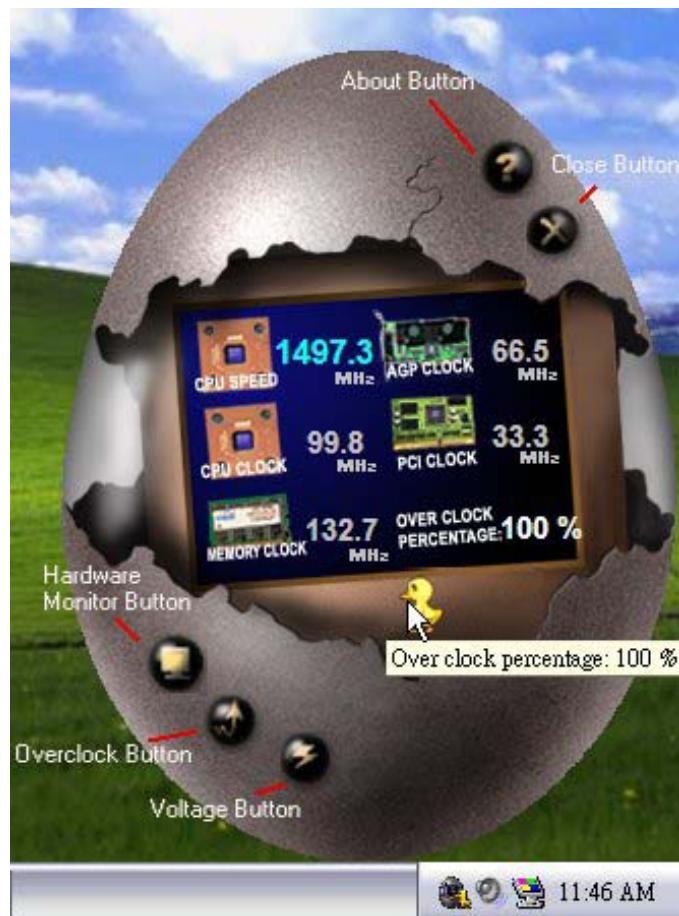

Motherboard Description

3. Voltage Panel

Click the Voltage button in Main Panel, the button will be highlighted and the Voltage Panel will slide out to up as the following figure.

In this panel, you can decide to increase CPU core voltage and Memory voltage or not. The default setting is "No". If you want to get the best performance of overclocking, we recommend you click the option "Yes".



Motherboard Description

4. Overclock Panel

Click the Overclock button in Main Panel, the button will be highlighted and the Overclock Panel will slide out to left as the following figure.




Overclock Panel contains the these features:

- a. “-3MHz button”, “-1MHz button”, “+1MHz button”, and “+3MHz button”: provide user the ability to do real-time overclock adjustment.

Warning: Manually overclock is potentially dangerous, especially when the overclocking percentage is over 110 %. We strongly recommend you verify every speed you overclock by click the Verify button. Or, you can just click Auto overclock button and let [WarpSpeeder™] automatically gets the best result for you.

Motherboard Description

- b. “Recovery Dialog button”: Pop up the following dialog. Let user select a restoring way if system need to do a fail-safe reboot.

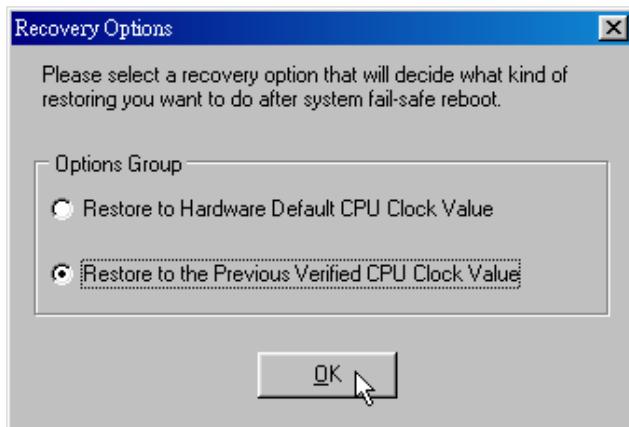

- c. “Auto-overclock button”: User can click this button and [WarpSpeeder™] will set the best and stable performance and frequency automatically. [WarpSpeeder™] utility will execute a series of testing until system fail. Then system will do fail-safe reboot by using Watchdog function. After reboot, the [WarpSpeeder™] utility will restore to the hardware default setting or load the verified best and stable frequency according to the Recovery Dialog’s setting.
d. “Verify button”: User can click this button and [WarpSpeeder™] will proceed a testing for current frequency. If the testing is ok, then the current frequency will be saved into system registry. If the testing fail, system will do a fail-safe rebooting. After reboot, the [WarpSpeeder™] utility will restore to the hardware default setting or load the verified best and stable frequency according to the Recovery Dialog’s setting.

Note: Because the testing programs, invoked in Auto-overclock and Verify, include DirectDraw, Direct3D and DirectShow tests, the DirectX 8.1 or newer runtime library is required. And please make sure your display card's color depth is High color (16 bit) or True color(24/32 bit) that is required for Direct3D rendering.

5. Hardware Monitor Panel

Click the Hardware Monitor button in Main Panel, the button will be highlighted

Motherboard Description

and the Hardware Monitor panel will slide out to left as the following figure.

In this panel, you can get the real-time status information of your system. The information will be refreshed every 1 second.




6. About Panel

Click the About button in Main Panel, the button will be highlighted and the About Panel will slide out to up as the following figure.

In this panel, you can get model name and detail information in hints of all the chipset that are related to overclocking. You can also get the mainboard's BIOS model and the Version number of [WarpSpeeder™] utility.

Motherboard Description

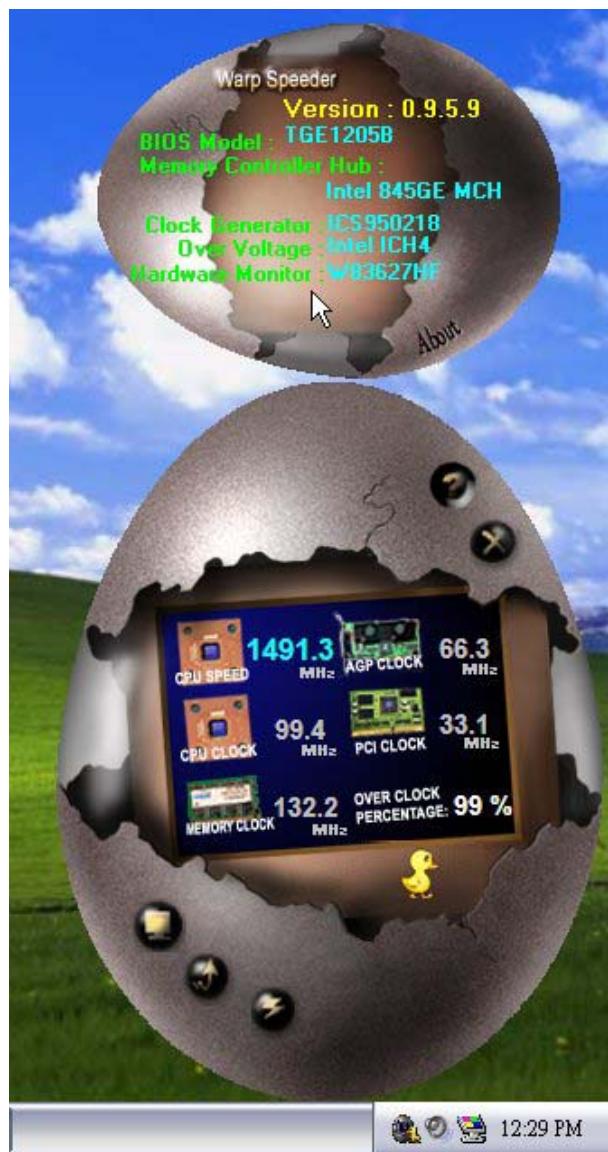

Motherboard Description

Note: Because the overclock, overvoltage, and hardware monitor features are controlled by several separate chipset, [WarpSpeeder™] divide these features to separate panels. If one chipset is not on board, the correlative button in Main panel will be disabled, but will not interfere other panels' functions. This property can make [WarpSpeeder™] utility more robust.

Motherboard Description

Trouble Shooting

PROBABLE	SOLUTION
No power to the system at all Power light don't illuminate, fan inside power supply does not turn on. Indicator light on keyboard does not turn on	* Make sure power cable is securely plugged in * Replace cable * Contact technical support
System inoperative. Keyboard lights are on, power indicator lights are lit, hard drive is spinning.	* Using even pressure on both ends of the DIMM, press down firmly until the module snaps into place.
System does not boot from hard disk drive, can be booted from CD-ROM drive.	* Check cable running from disk to disk controller board. Make sure both ends are securely plugged in; check the drive type in the standard CMOS setup. * Backing up the hard drive is extremely important. All hard disks are capable of breaking down at any time.
System only boots from CD-ROM. Hard disk can be read and applications can be used but booting from hard disk is impossible.	* Back up data and applications files. Reformat the hard drive. Re-install applications and data using backup disks.
Screen message says "Invalid Configuration" or "CMOS Failure."	* Review system's equipment . Make sure correct information is in setup.
Cannot boot system after installing second hard drive.	* Set master/slave jumpers correctly. * Run SETUP program and select correct drive types. Call drive manufacturers for compatibility with other drives.

Motherboard Description

Solución de Problemas

CAUSA PROBABLE	SOLUCIÓN
No hay corriente en el sistema. La luz de corriente no ilumina, ventilador dentro de la fuente de alimentación apagada. Indicador de luz del teclado apagado.	* Asegúrese que el cable de transmisión esté seguramente enchufado. * Reemplace el cable. * Contacte ayuda técnica.
Sistema inoperativo. Luz del teclado encendido, luz de indicador de corriente iluminado, disco rígido está girando.	* Presione los dos extremos del DIMM, presione para abajo firmemente hasta que el módulo encaje en el lugar.
Sistema no arranca desde el disco rígido, puede ser arrancado desde el CD-ROM drive.	* Controle el cable de ejecución desde el disco hasta el disco del controlador. Asegúrese de que ambos lados estén enchufados con seguridad; controle el tipo de disco en la configuración estándar CMOS. * Copiando el disco rígido es extremadamente importante. Todos los discos rígidos son capaces de dañarse en cualquier momento.
Sistema solamente arranca desde el CD-ROM. Disco rígido puede leer y aplicaciones pueden ser usados pero el arranque desde el disco rígido es imposible.	* Copie datos y documentos de aplicación. Vuelva a formatear el disco rígido. Vuelva a instalar las aplicaciones y datos usando el disco de copiado.
Mensaje de pantalla "Invalid Configuration" o "CMOS Failure."	* Revise el equipo del sistema. Asegúrese de que la información configurada sea correcta.
No puede arrancar después de instalar el segundo disco rígido.	* Fije correctamente el puente master/esclavo. * Ejecute el programa SETUP y seleccione el tipo de disco correcto. Llame a una manufacturación del disco para compatibilidad con otros discos.

Motherboard Description

03/26/2003