

FCC Information and Copyright

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. There is no guarantee that interference will not occur in a particular installation.

The vendor makes no representations or warranties with respect to the contents here and specially disclaims any implied warranties of merchantability or fitness for any purpose. Further the vendor reserves the right to revise this publication and to make changes to the contents here without obligation to notify any party beforehand.

Duplication of this publication, in part or in whole, is not allowed without first obtaining the vendor's approval in writing.

The content of this user's manual is subject to be changed without notice and we will not be responsible for any mistakes found in this user's manual. All the brand and product names are trademarks of their respective companies.

Table of Contents

Chapter 1: Introduction	1
1.1 Before You Start	1
1.2 Package Checklist	1
1.3 Motherboard Features	2
1.4 Rear Panel Connectors	3
1.5 Motherboard Layout	4
Chapter 2: Hardware Installation	5
2.1 Installing Central Processing Unit (CPU)	5
2.2 FAN Headers	7
2.3 Installing System Memory	8
2.4 Connectors and Slots	10
Chapter 3: Headers & Jumpers Setup	13
3.1 How to Setup Jumpers	14
3.2 Detail Settings	14
Chapter 4: RAID Functions	20
4.1 Operating System	20
4.2 Raid Arrays	20
4.3 How RAID Works	20
Chapter 5: T-Power BIOS & Software	24
5.1 T-Power BIOS	24
5.2 T-Power Software	32
Chapter 6: Useful Help	41
6.1 Driver Installation Note	42
6.2 Extra Information	43
6.3 AMI BIOS Beep Code	44
6.4 AMI BIOS Post Code	45
6.5 Troubleshooting	47
Appendix: SPEC In Other Languages	48
German	48
French	50
Italian	52
Spanish	54
Portuguese	56
Polish	58
Russian	60
Arabic	62
Japanese	64

CHAPTER 1: INTRODUCTION

1.1 BEFORE YOU START

Thank you for choosing our product. Before you start installing the motherboard, please make sure you follow the instructions below:

- Prepare a dry and stable working environment with sufficient lighting.
- Always disconnect the computer from power outlet before operation.
- Before you take the motherboard out from anti-static bag, ground yourself properly by touching any safely grounded appliance, or use grounded wrist strap to remove the static charge.
- Avoid touching the components on motherboard or the rear side of the board unless necessary. Hold the board on the edge, do not try to bend or flex the board.
- Do not leave any unfastened small parts inside the case after installation. Loose parts will cause short circuits which may damage the equipment.
- Keep the computer from dangerous area, such as heat source, humid air and water.
- The operating temperatures of the computer should be 0 to 45 degrees Celsius.

1.2 PACKAGE CHECKLIST

- ✚ HDD Cable X 1
- ✚ Serial ATA Cable X 6
- ✚ Serial ATA Power Cable X 6
- ✚ Rear I/O Panel for ATX Case X 1
- ✚ User's Manual X 1
- ✚ Fully Setup Driver CD X 1
- ✚ FDD Cable X 1 (optional)
- ✚ USB 2.0 Cable X1 (optional)
- ✚ S/PDIF out Cable X 1 (optional)
- ✚ SLI Bridge X 1
- ✚ CFX Bridge X1


Note: The package contents may be different due to area or your motherboard version.

1.3 MOTHERBOARD FEATURES


SPEC			
CPU	Socket 1156 Intel Core i7 / i5 processor	Supports Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture-64 / Extended Memory 64 Technology / Virtualization Technology / Hyper Threading	
Chipset	Intel P55		
Super I/O	IT8720 Provides the most commonly used legacy Super I/O functionality. Low Pin Count Interface	Environment Control initiatives, Hardware Monitor Controller Fan Speed Controller ITE's "Smart Guardian" function	
Main Memory	DIMM Slots x 4 Each DIMM supports 512MB / 1GB / 2GB / 4GB DDR3 Max Memory Capacity 16GB	Dual Channel Mode DDR3 memory module Supports DDR3 2000(OC) / 1866(OC) / 1600(OC) / 1333 / 1066 / 800 Registered DIMM and ECC DIMM is not supported	
IDE	JMB363	Ultra DMA 33 / 66 / 100 / 133 Bus Master Mode supports PIO Mode 0~4	
SATA II	P55	Data transfer rates up to 3 Gb/s. SATA Version 2.0 specification compliant. RAID 0 / 1 / 5 / 10 support	
eSATA	JMB363	Data transfer rates up to 3 Gb/s. SATA Version 2.0 specification compliant. Port-Multiplier/RAID 0,1 support	
LAN	Realtek RTL 8111DL x1 Intel 82578 PHY x1	10 / 100 Mb/s / 1Gb/s auto negotiation Half / Full duplex capability	
Sound Codec	ALC888S	7.1 channels audio out High Definition Audio	
IEEE 1394	LSI FW322	1394a	
Slots	PCI slot	x2	Supports PCI expansion cards
	PCI Express Gen2 x16 slot	x2	Supports PCI-E Gen2 x16 expansion cards
	PCI Express Gen2 x4 slot	x1	Supports PCI-E Gen2 x4 expansion card
	PCI Express Gen2 x1 slot	x1	Supports PCI-E Gen2 x1 expansion card
On Board Connector	Floppy Connector	x1	Each connector supports 2 Floppy devices
	IDE Connector	x1	Each connector supports 2 IDE devices
	SATA Connector	x6	Each connector supports 1 SATA device
	Front Panel Connector	x1	Supports front panel facilities

SPEC			
	Front Audio Connector	x1	Supports front panel audio function
	CD-in Connector	x1	Supports CD audio-in function
	S/PDIF out Connector	x1	Supports digital audio out function
	CPU Fan Header	x1	CPU Fan power supply (with Smart Fan function)
	System Fan Header	x2	System Fan Power supply
	Clear CMOS Header	x1	Restore CMOS data to factory default
	USB Connector	x3	Each connector supports 2 front panel USB ports
	IEEE 1394 Connector	x1	Connects to IEEE 1394 device
	Power Connector (24pin)	x1	Connects to Power supply
	Power Connector (8pin)	x1	Connects to Power supply
Back Panel I/O	PS/2 Keyboard	x1	Connects to PS/2 Keyboard
	LAN Port	x2	Connect to RJ-45 ethernet cable
	USB Port	x8	Connect to USB devices
	Audio Jack	x6	Provide Audio-In/Out and microphone connection
	eSATA Port	x2	Connect to SATA devices
	1394 Port	x1	Connects to IEEE 1394 device
	Optical +coaxial S/PDIF Out	x1	Provides digital audio out function
Board Size	244 (W) x 305 (L) mm		ATX
OS Support	Windows XP / Vista 32 / Vista 64		Biostar reserves the right to add or remove support for any OS with or without notice

1.4 REAR PANEL CONNECTORS

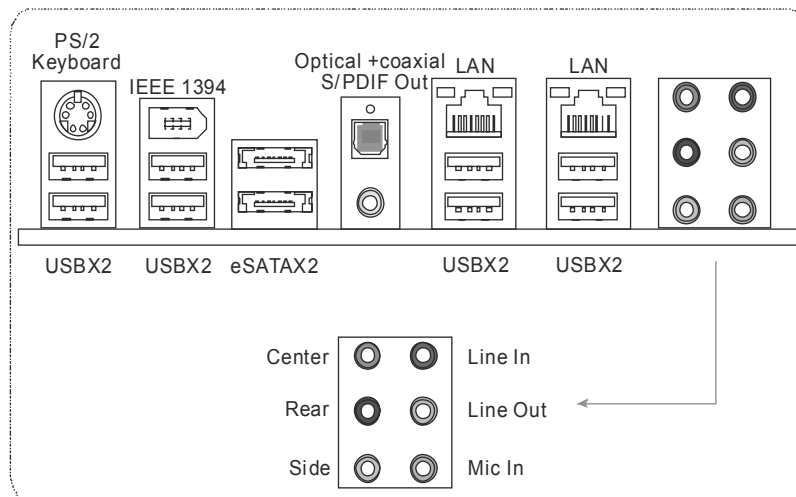


1.5 MOTHERBOARD LAYOUT

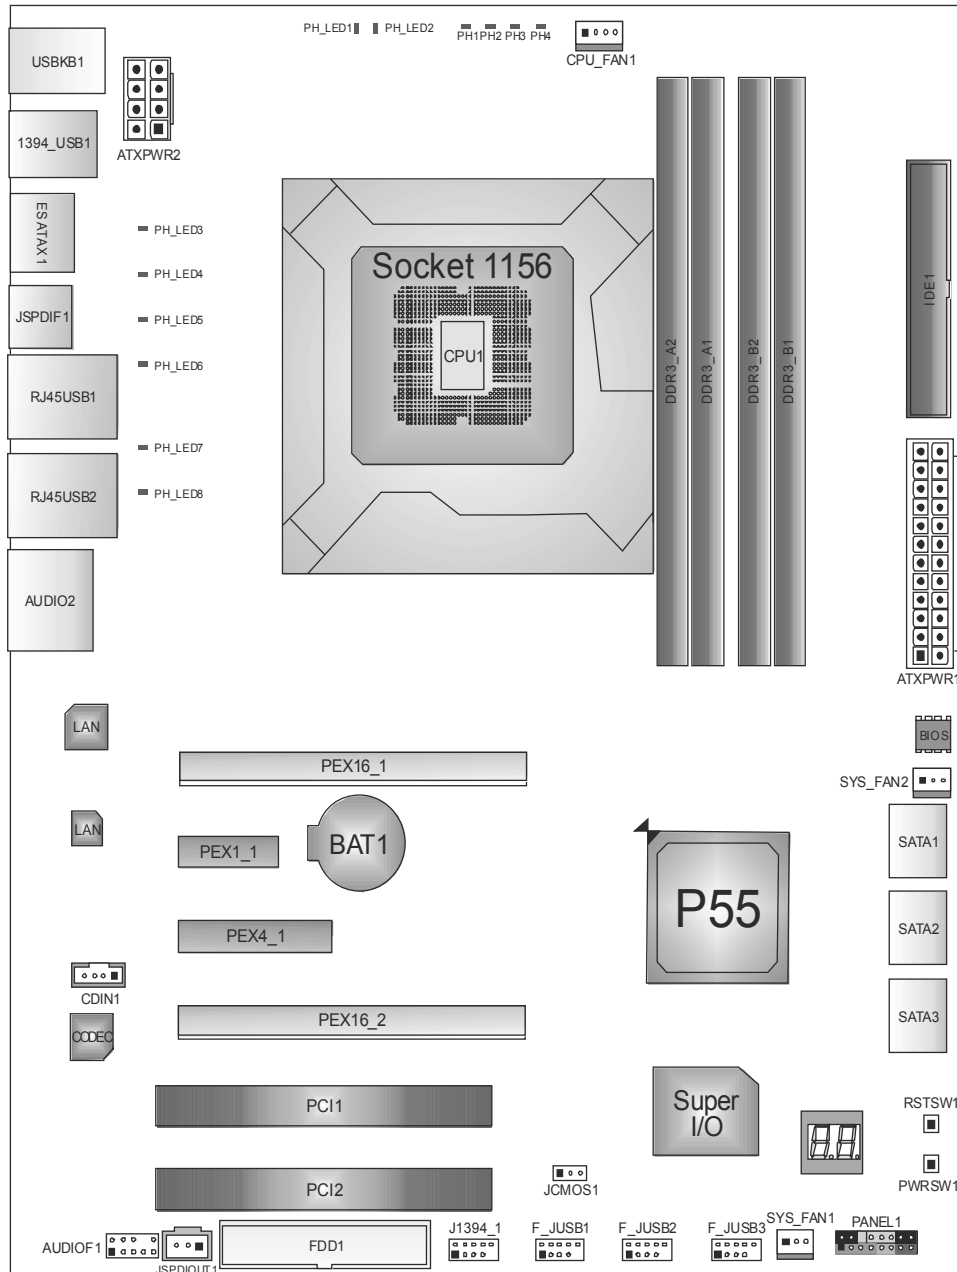

Note: ■ represents the 1st pin.


CHAPTER 2: HARDWARE INSTALLATION

2.1 INSTALLING CENTRAL PROCESSING UNIT (CPU)

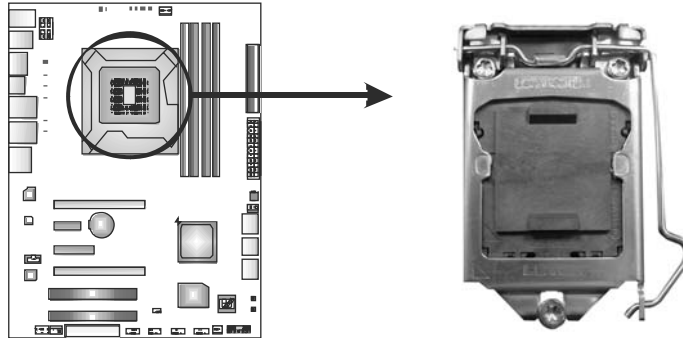


Remove Pin Cap before installation, and make good preservation for future use. When the CPU is removed, cover the Pin Cap on the empty socket to ensure pin legs won't be damaged.

Step 1: Pull the socket locking lever out from the socket and then raise the lever up.

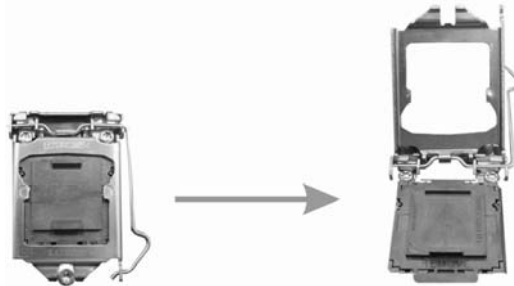


Step 2: Remove the Pin Cap.

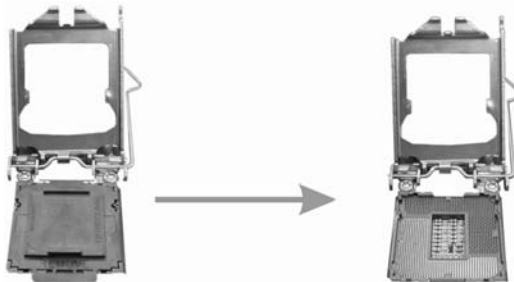

Motherboard Manual

Step 3: Look for the triangular cut edge on socket, and the golden dot on CPU should point forwards this triangular cut edge. The CPU will fit only in the correct orientation.

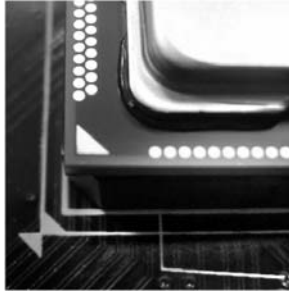

Step 4: Hold the CPU down firmly, and then lower the lever to locked position to complete the installation.




Step 5: Put the CPU Fan and heatsink assembly on the CPU and buckle it on the retention frame. Connect the CPU FAN power cable into the CPU_FAN1 to complete the installation.

2.2 FAN HEADERS



These fan headers support cooling-fans built in the computer. The fan cable and connector may be different according to the fan manufacturer. Connect the fan cable to the connector while matching the black wire to pin#1.

CPU_FAN1: CPU Fan Header

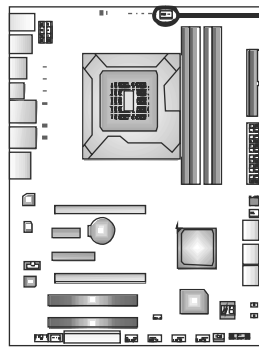

Pin	Assignment
1	Ground
2	+12V
3	FAN RPM rate sense
4	Smart Fan Control

SYS_FAN1/ SYS_FAN2: System Fan Headers

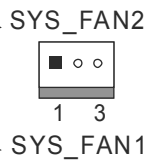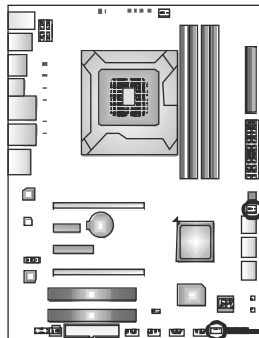


Pin	Assignment
1	Ground
2	+12V
3	FAN RPM rate sense

Note:


The SYS_FAN1/SYS_FAN2 support 3-pin head connectors, and the CPU_FAN1, 4-pin head connector. When connecting with wires onto connectors, please note that the red wire is the positive and should be connected to pin#2, and the black wire is Ground and should be connected to GND.

2.3 INSTALLING SYSTEM MEMORY


A. Memory Modules

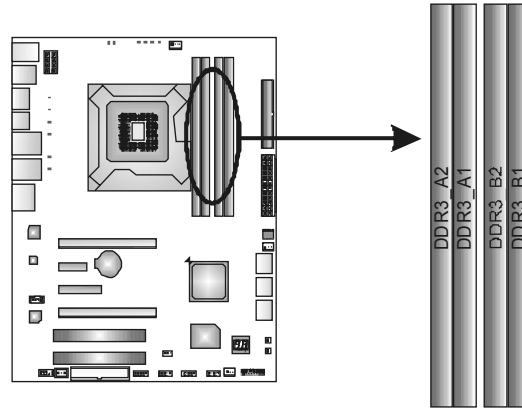

1. Unlock a DIMM slot by pressing the retaining clips outward. Align a DIMM on the slot such that the notch on the DIMM matches the break on the Slot.

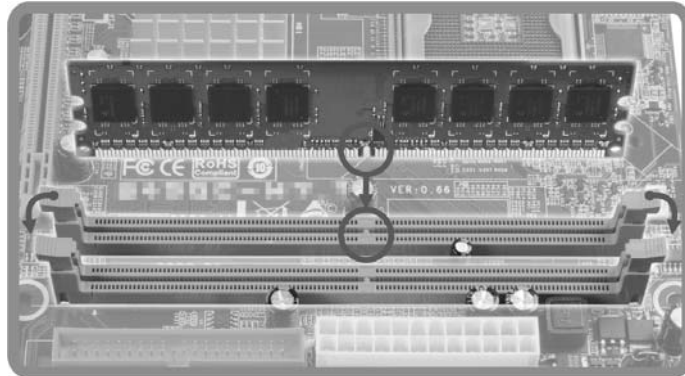

2. Insert the DIMM vertically and firmly into the slot until the retaining chip snap back in place and the DIMM is properly seated.

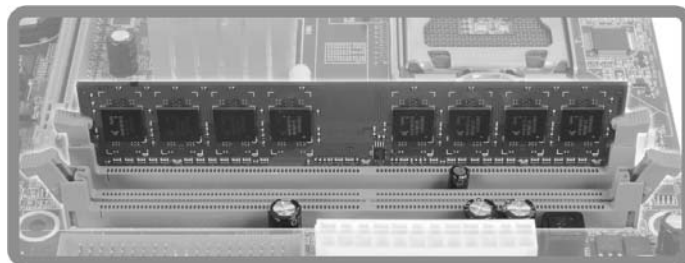

B. Memory Capacity

DIMM Socket Location	DDR3 Module	Total Memory Size
DDR3_A1	256MB/512MB/1GB/2GB / 4GB	Max is 16GB.
DDR3_A2	256MB/512MB/1GB/2GB / 4GB	
DDR3_B1	256MB/512MB/1GB/2GB / 4GB	
DDR3_B2	256MB/512MB/1GB/2GB / 4GB	

C. Dual Channel Memory installation

Please refer to the following requirements to activate Dual Channel function:

Install memory module of the same density in pairs, shown in the table.

Dual Channel Status	DDR3_A1	DDR3_B1	DDR3_A2	DDR3_B2
Enabled	O	O	X	X
Enabled	O	O	O	O

(O means memory installed, X means memory not installed.)

The DRAM bus width of the memory module must be the same (x8 or x16)


Note:

Memory module must be installed in DDR3-A1 or DDR3-B1 to boot the system.

2.4 CONNECTORS AND SLOTS

FDD1: Floppy Disk Connector


The motherboard provides a standard floppy disk connector that supports 360K, 720K, 1.2M, 1.44M and 2.88M floppy disk types. This connector supports the provided floppy drive ribbon cables.

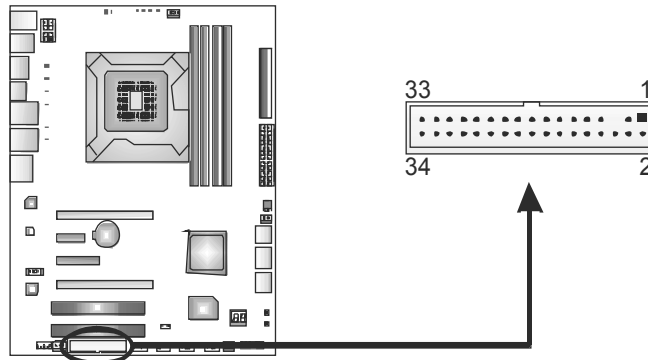

IDE1: IDE/ATAPI Connector


The motherboard has a 32-bit Enhanced PCI IDE Controller that provides PIO Mode 0~4, Bus Master, and Ultra DMA 33/66/100/133 functionality.

The IDE connector can connect a master and a slave drive, so you can connect up to two devices.

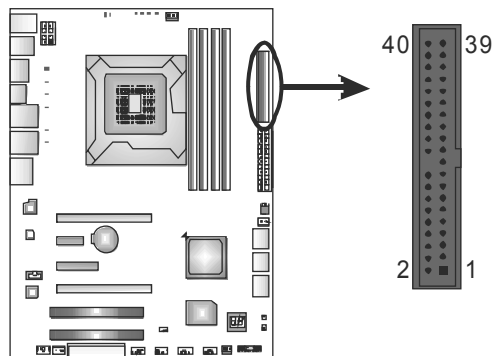


SATA1~SATA3: Serial ATA Connectors

The motherboard has a PCI to SATA Controller with 6 channels SATA interface, it satisfies the SATA 2.0 spec and with transfer rate of 3.0Gb/s.

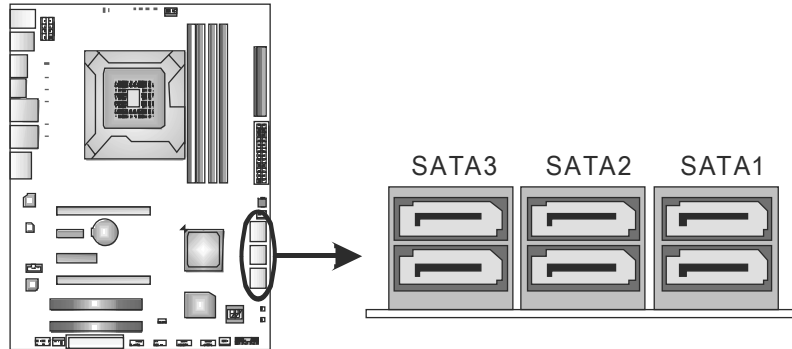

PCI1/PCI2: Peripheral Component Interconnect Slots

This motherboard is equipped with 2 standard PCI slots. PCI stands for Peripheral Component Interconnect, and it is a bus standard for expansion cards. This PCI slot is designated as 32 bits.

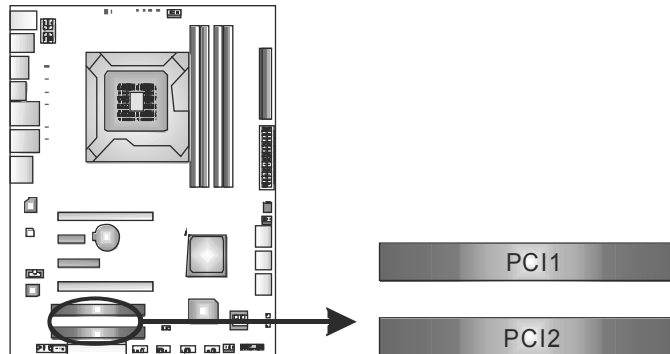

PEX16_1: PCI-Express Gen2 x16 (x16/CrossFireX x8, SLI x8 Speed) Slot

- PCI-Express 2.0 compliant.
- Maximum theoretical realized bandwidth of 8GB/s (4GB/s CrossFireX/SLI) simultaneously per direction, for an aggregate of 16GB/s(8GB/s CrossFireX/SLI) totally.
- PEX16_1 & PEX16_2 slots are reserved for graphic or video cards. The design of this motherboard supports dual PCI-Express graphics cards using CrossFireX/SLI technology with multiple displays. When CrossFireX/SLI is activated, these slots run with x8 speed.

PEX16_2: PCI-Express Gen2 x8 (x8/CrossFireX x8, SLI x8 Speed) Slot


- PCI-Express 2.0 compliant.
- Maximum theoretical realized bandwidth of 4GB/s (4GB/s CrossFireX/SLI) simultaneously per direction, for an aggregate of 8GB/s(8GB/s CrossFireX/SLI) totally.

PEX4_1: PCI-Express Gen2 x4 Slot

- PCI-Express 2.0 compliant.
- Maximum theoretical realized bandwidth of 2GB/s simultaneously per direction, for an aggregate of 4GB/s totally.


PEX1_1: PCI-Express Gen2 x1 Slot

- PCI-Express 2.0 compliant.
- Data transfer bandwidth up to 500MB/s per direction; 1GB/s in total.
- PCI-Express supports a raw bit-rate of 2.5Gb/s on the data pins.
- 2X bandwidth over the traditional PCI architecture.

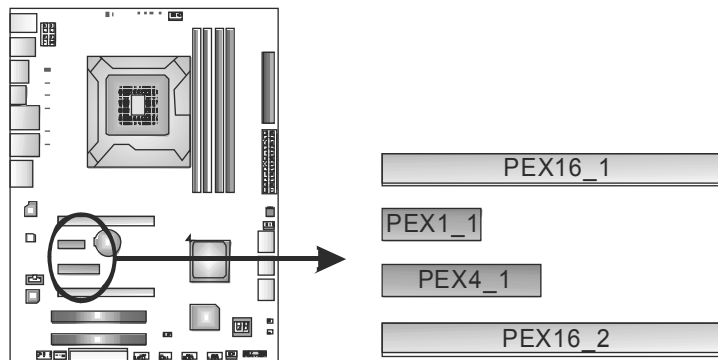

ATXPWR1: ATX Power Source Connector


This connector allows user to connect 24-pin power connector on the ATX power supply.

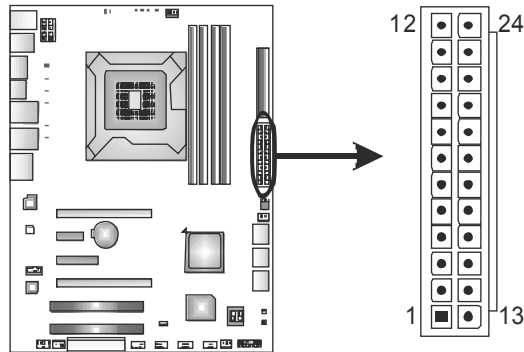

Pin	Assignment	Pin	Assignment
13	+3.3V	1	+3.3V
14	-12V	2	+3.3V
15	Ground	3	Ground
16	PS_ON	4	+5V
17	Ground	5	Ground
18	Ground	6	+5V
19	Ground	7	Ground
20	NC	8	PW_OK
21	+5V	9	Standby Voltage+5V
22	+5V	10	+12V
23	+5V	11	+12V
24	Ground	12	+3.3V

ATXPWR2: ATX Power Source Connector

This connector provides +12V to CPU power circuit.

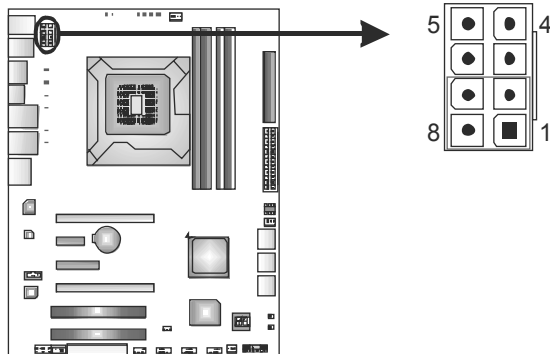

Pin	Assignment
1	+12V
2	+12V
3	+12V
4	+12V
5	Ground
6	Ground
7	Ground
8	Ground

Note:


Before power on the system, please make sure that both ATXPWR1 and ATXPWR2 connectors have been plugged-in.

If the CPU power plug is 4-pin, please plug it into Pin 1-2-5-6 of ATXPWR2.

CHAPTER 3: HEADERS & JUMPERS SETUP

3.1 HOW TO SETUP JUMPERS


The illustration shows how to set up jumpers. When the jumper cap is placed on pins, the jumper is “close”, if not, that means the jumper is “open”.

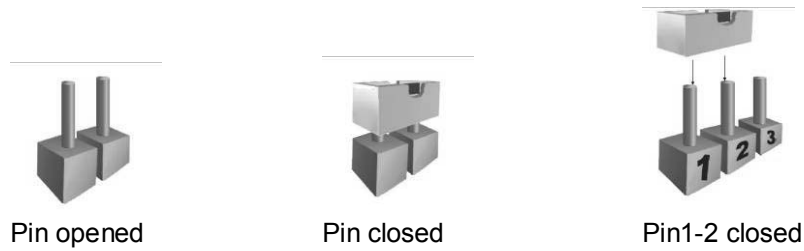

3.2 DETAIL SETTINGS

PANEL1: Front Panel Header



This 16-pin connector includes Power-on, Reset, HDD LED, Power LED, and speaker connection. It allows user to connect the PC case’s front panel switch functions.

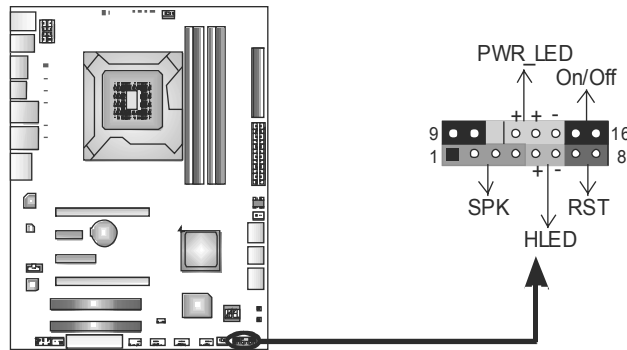

Pin	Assignment	Function	Pin	Assignment	Function
1	+5V	Speaker Connector	9	N/A	N/A
2	N/A		10	N/A	N/A
3	N/A		11	N/A	N/A
4	Speaker	Hard drive LED	12	Power LED (+)	Power LED
5	HDD LED (+)		13	Power LED (+)	
6	HDD LED (-)		14	Power LED (-)	
7	Ground	Reset button	15	Power button	Power-on button
8	Reset control		16	Ground	

F_JUSB1 ~ F_JUSB3: Headers for USB 2.0 Ports at Front Panel



These headers allow user to connect additional USB cable on the PC front panel. They also can be connected with internal USB devices, like USB card reader.

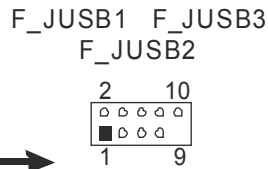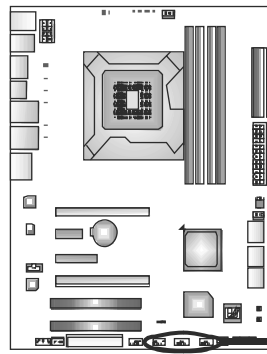

Pin	Assignment
1	+5V (fused)
2	+5V (fused)
3	USB-
4	USB-
5	USB+
6	USB+
7	Ground
8	Ground
9	Key
10	NC

AUDIOF1: Front Panel Audio Header

 
This header allows user to connect the front audio output cable with the PC front panel. This header allows only HD audio front panel connector; AC'97 connector is not acceptable.

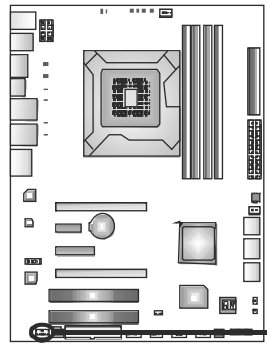

Pin	Assignment
1	Mic Left in
2	Ground
3	Mic Right in
4	GPIO
5	Right line in
6	Jack Sense
7	Front Sense
8	Key
9	Left line in
10	Jack Sense

CDIN1: CD-ROM Audio-in Connector


This connector allows user to connect the audio source from the different devices, like CD-ROM, DVD-ROM, PCI sound card, PCI TV turner card etc..

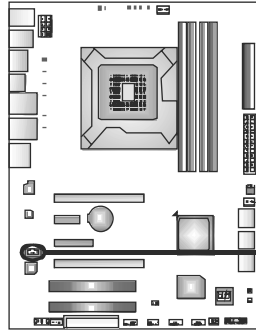

Pin	Assignment
1	Left Channel Input
2	Ground
3	Ground
4	Right Channel Input

JSPDIOUT1: Digital Audio-out Connectors


JSPDIOUT1 is for connecting the PCI bracket SPDIF output.

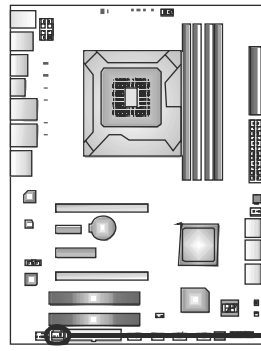

Pin	Assignment
1	+5V
2	SPDIF_OUT
3	Ground

On-Board Buttons

There are 2 on-board buttons.

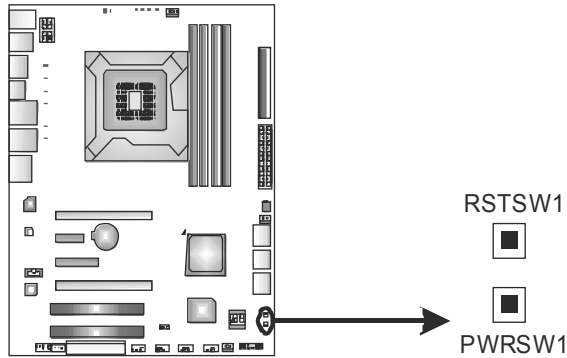

PWRSW1:


This is an on-board Power Switch button.

RSTSW1:

This is an on-board Reset button.

On-Board LED Indicators

There are 12 LED indicators on the motherboard showing 8+4 Phase CPU Power.

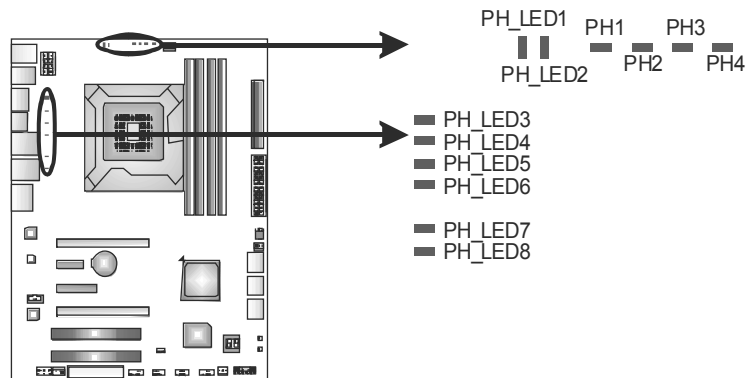

PH1 ~ PH4: CPU VTT (uncore) Power Status Indicators


PH_LED1 ~ PH_LED8: CPU Power Phase Status Indicators

Please refer to the tables below for different messages:

LED	Phase Indicator
ON	Phase Active
OFF	Phase Disable

JCMOS1: Clear CMOS Header

Placing the jumper on pin2-3 allows user to restore the BIOS safe setting and the CMOS data. Please carefully follow the procedures to avoid damaging the motherboard.

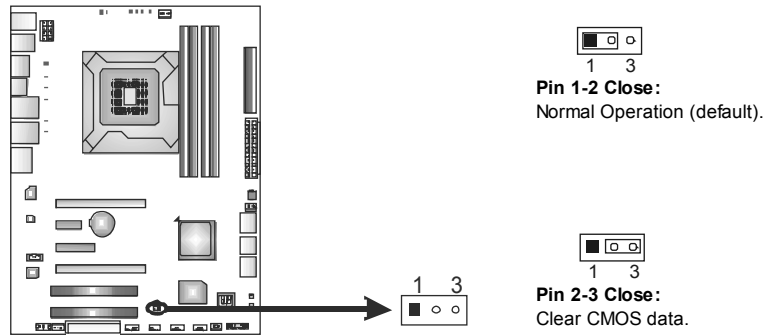


※ Clear CMOS Procedures:

1. Remove AC power line.
2. Set the jumper to "Pin 2-3 close".
3. Wait for five seconds.
4. Set the jumper to "Pin 1-2 close".
5. Power on the AC.
6. Reset your desired password or clear the CMOS data.


BIOS POST Code

This indicator will show POST code while booting. Please refer to Chapter 6.4 for all the BIOS POST codes.

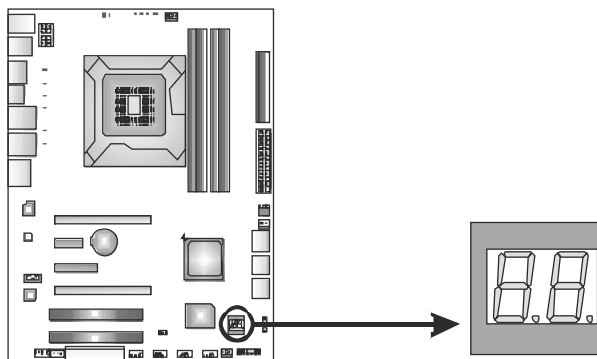

J1394_1: IEEE 1394 Header

This header allows user to connect IEEE 1394 device.

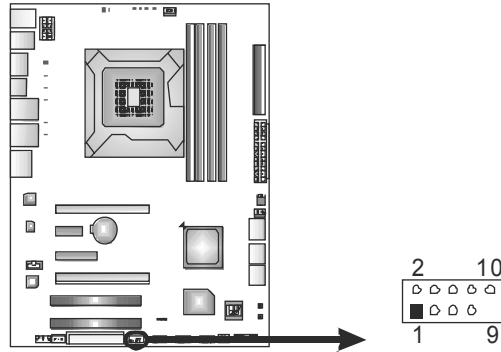

Pin	Assignment
1	TPA1+
2	TPA1-
3	GND
4	GND
5	TPB1+
6	TPB1-
7	VCC
8	VCC
9	N/A
10	KEY

CHAPTER 4: RAID FUNCTIONS

4.1 OPERATING SYSTEM

Supports Windows XP / Vista 32 / Vista 64.

4.2 RAID ARRAYS

RAID supports the following types of RAID arrays:

RAID 0: RAID 0 defines a disk striping scheme that improves disk read and write times for many applications.

RAID 1: RAID 1 defines techniques for mirroring data.

RAID 1+0 (Onboard): RAID 1+0 combines the techniques used in RAID 0 and RAID 1.

RAID 5 (Onboard): RAID 5 provides fault tolerance and better utilization of disk capacity.


4.3 How RAID WORKS

RAID 0:

The controller “stripes” data across multiple drives in a RAID 0 array system. It breaks up a large file into smaller blocks and performs disk reads and writes across multiple drives in parallel. The size of each block is determined by the stripe size parameter, which you set during the creation of the RAID set based on the system environment. This technique reduces overall disk access time and offers high bandwidth.

Features and Benefits

- **Drives:** Minimum 2, and maximum is up to 6 or 8. Depending on the platform.
- **Uses:** Intended for non-critical data requiring high data throughput, or any environment that does not require fault tolerance.
- **Benefits:** provides increased data throughput, especially for large files. No capacity loss penalty for parity.
- **Drawbacks:** Does not deliver any fault tolerance. If any drive in the array fails, all data is lost.
- **Fault Tolerance:** No.

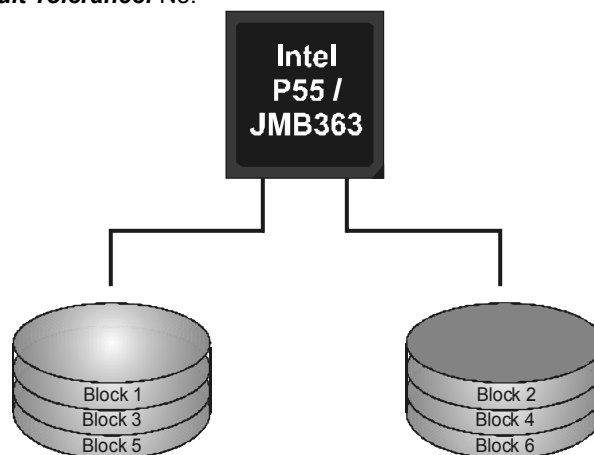


RAID 1:

Every read and write is actually carried out in parallel across 2 disk drives in a RAID 1 array system. The mirrored (backup) copy of the data can reside on the same disk or on a second redundant drive in the array. RAID 1 provides a hot-standby copy of data if the active volume or drive is corrupted or becomes unavailable because of a hardware failure. RAID techniques can be applied for high-availability solutions, or as a form of automatic backup that eliminates tedious manual backups to more expensive and less reliable media.

Features and Benefits

- **Drives:** Minimum 2, and maximum is 2.
- **Uses:** RAID 1 is ideal for small databases or any other application that requires fault tolerance and minimal capacity.
- **Benefits:** Provides 100% data redundancy. Should one drive fail, the controller switches to the other drive.
- **Drawbacks:** Requires 2 drives for the storage space of one drive. Performance is impaired during drive rebuilds.
- **Fault Tolerance:** Yes.

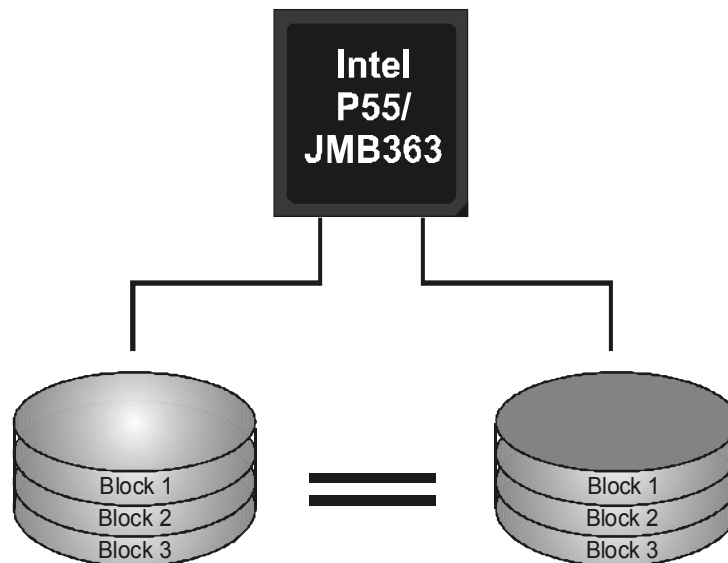


RAID 1+0 (For Onboard SATA Only):

RAID 1 drives can be striped using RAID 0 techniques. Resulting in a RAID 1+0 solution for improved resiliency, performance and rebuild performance.

Features and Benefits

- **Drives:** Minimum 4, and maximum is 6 or 8, depending on the platform.
- **Benefits:** Optimizes for both fault tolerance and performance, allowing for automatic redundancy. May be simultaneously used with other RAID levels in an array, and allows for spare disks.
- **Drawbacks:** Requires twice the available disk space for data redundancy, the same as RAID level 1.
- **Fault Tolerance:** Yes.

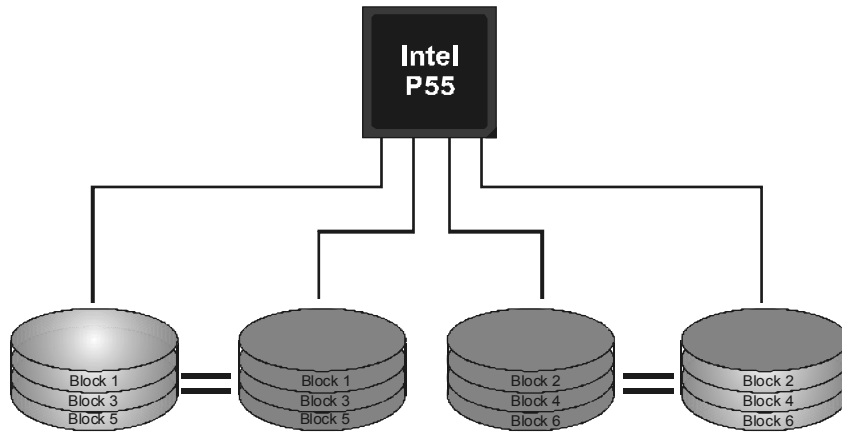


RAID 5 (For Onboard SATA Only):

RAID 5 stripes both data and parity information across three or more drives. It writes data and parity blocks across all the drives in the array. Fault tolerance is maintained by ensuring that the parity information for any given block of data is placed on a different drive from those used to store the data itself.

Features and Benefits

- **Drives:** Minimum 3.
- **Uses:** RAID 5 is recommended for transaction processing and general purpose service.
- **Benefits:** An ideal combination of good performance, good fault tolerance, and high capacity and storage efficiency.
- **Drawbacks:** Individual block data transfer rate same as a single disk. Write performance can be CPU intensive.
- **Fault Tolerance:** Yes.

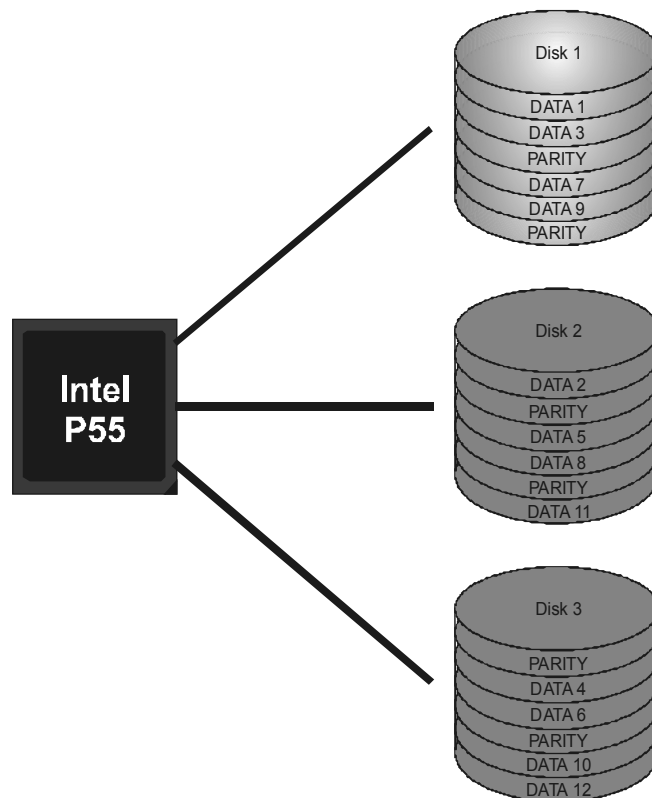

CHAPTER 5: T-POWER BIOS & SOFTWARE

5.1 T-POWER BIOS

T-Power BIOS Features


- Overclocking Navigator Engine (O.N.E.)
- Memory Integration Test (M.I.T., under Overclock Navigator Engine)
- BIO-Flasher: Update BIOS file from USB Flash Drive or FDD
- Self Recovery System (S.R.S)
- Smart Fan Function
- CMOS Reloading Program

!! WARNING !!

For better system performance, the BIOS firmware is being continuously updated. The BIOS information described below in this manual is for your reference only and the actual BIOS information and settings on board may be different from this manual. For further information of setting up the BIOS, please refer to the BIOS Manual in the Setup CD.



A. Overclocking Navigator Engine (O.N.E.)

ONE provides two powerful overclocking engines: MOS and AOS for both Elite and Casual overclockers.

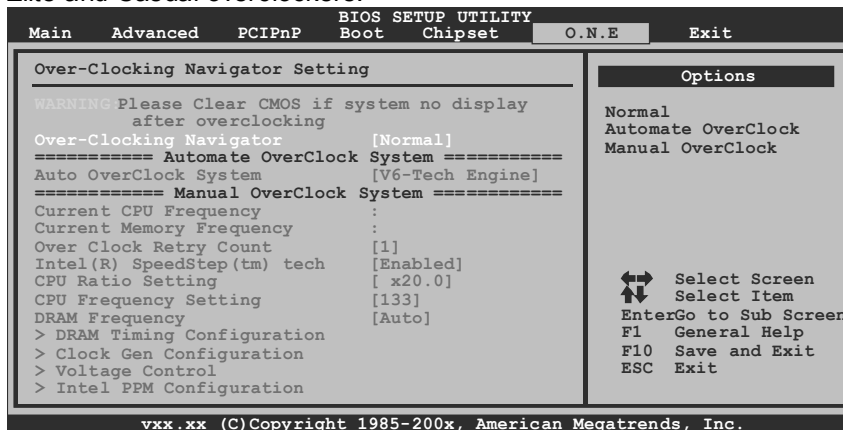

Manual Overclock System (M.O.S.)

MOS is designed for experienced overclock users. It allows users to customize personal overclock settings.

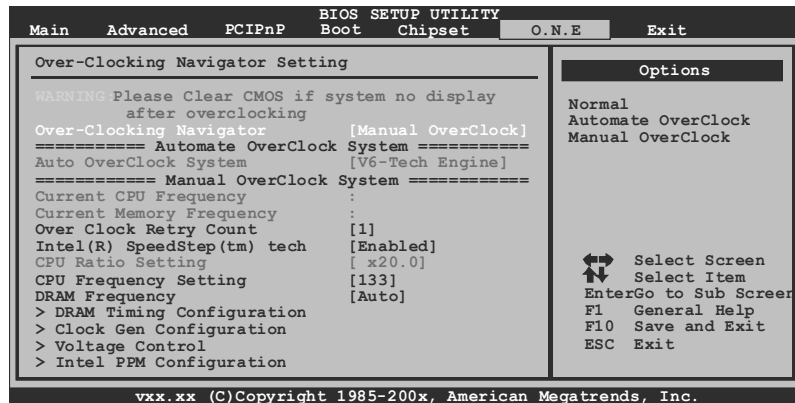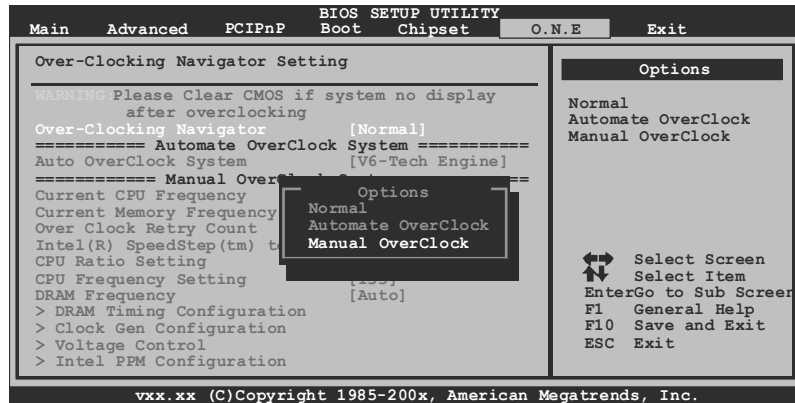

Over Clock Retry Count

This item allows you to set the overclock fail retry times.

Intel(R) SpeedStep(tm) Tech

This item allows you to enable SpeedStep technology for better power saving. SpeedStep is a technology built into some Intel processors that allows the clock speed of the processor to be dynamically changed by software.

CPU Ratio Setting

This item allows you to set the CPU ratio frequency. This item is adjustable only when SpeedStep Tech is set to Disabled

CPU Frequency Setting

This item allows you to select the CPU Frequency.

DRAM Frequency

To get better system performance, sometimes downgrading the memory frequency is necessary when CPU frequency is adjusted over the upper limit.

DRAM Timing Configuration

Enter this item for more advanced DRAM timing settings.

Clock Gen Configuration

Enter this item for more advanced Clock Gen settings.

Voltage Control

Enter this item for more advanced voltage settings.

Intel PPM Configuration

Enter this item for more advanced Intel PPM settings.

BIOSTAR Memory Insight

Enter this item for more advanced memory SPD information.

G.P.U Phase Control


Enter this function for more power saving settings.

NOTE

Overclock is an optional process, but not a “must-do” process; it is not recommended for inexperienced users. Therefore, we will not be responsible for any hardware damage which may be caused by overclocking. We also would not guarantee any overclocking performance.


Automatic Overclock System (A.O.S.)

For beginners in overclock field, BET had developed an easy, fast, and powerful feature to increase the system performance, named A.O.S. Based on many tests and experiments, A.O.S. provides 3 ideal overclock configurations that are able to raise the system performance in a single step.

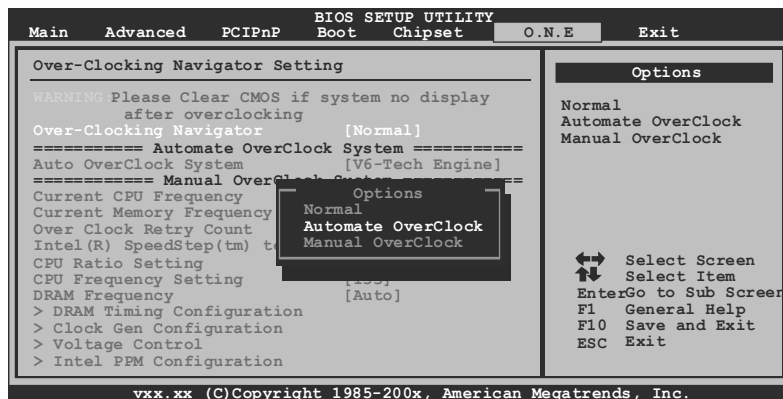


V6 Tech Engine

This engine will make a good over-clock performance.

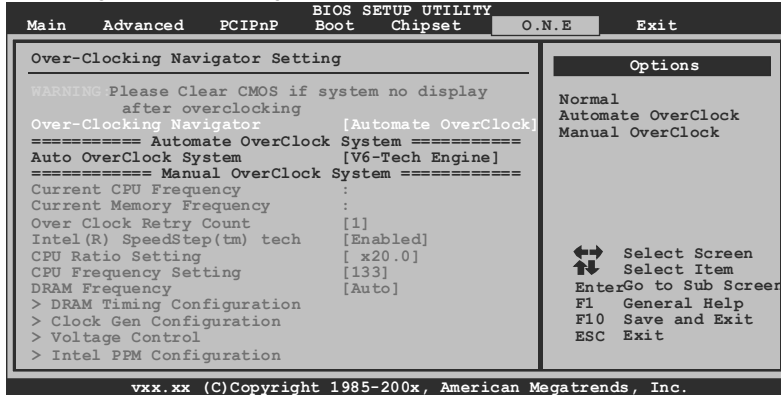


V8 Tech Engine

This engine will make a better over-clock performance.

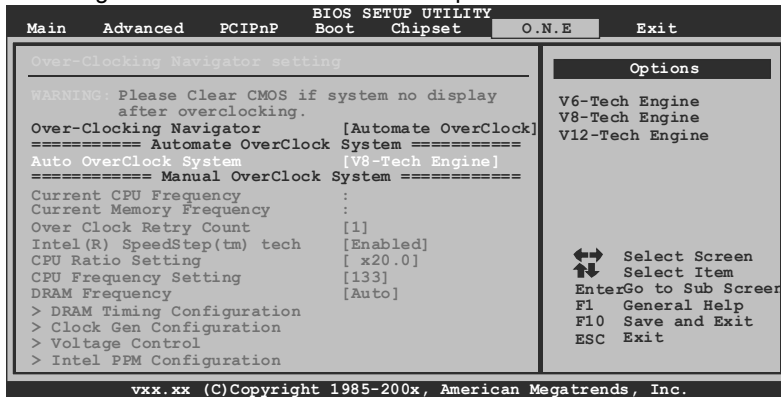

V12 Tech Engine

This engine will make a best over-clock performance.

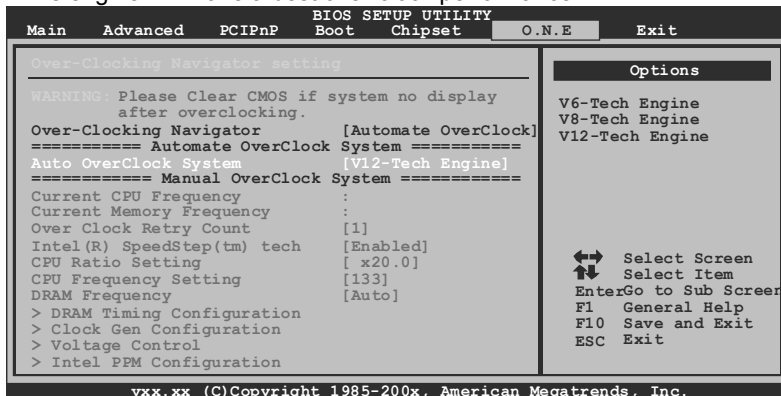

Notices:

Not all types of Intel CPU perform above overlock setting ideally; the difference will be based on the selected CPU model.



B. Memory Integration Test (M.I.T.)

This function is under “Overclocking Navigator Engine” item.

MIT allows users to test memory compatibilities, and no extra devices or software are needed.

Step 1

The default setting under this item is “HotKey F11”; the condition parameter should be changed to “Enable” to proceed this test.

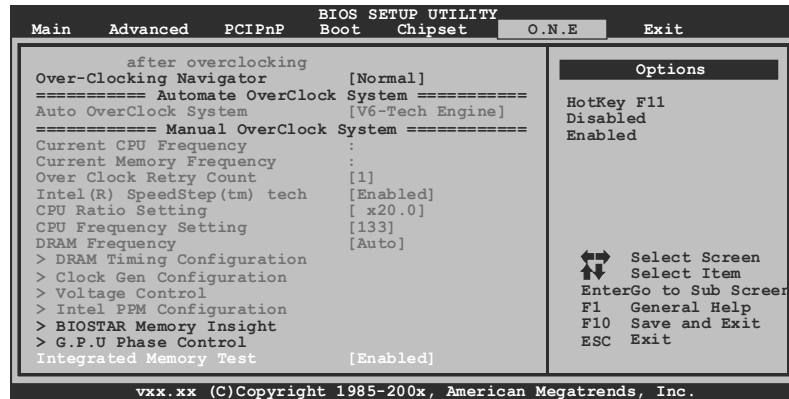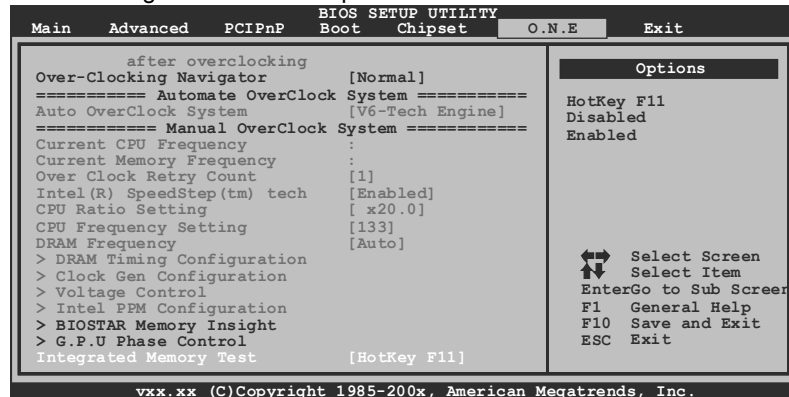

Step 2

Save and Exit from CMOS setup and reboot the system to activate this test.

Run this test for 5 minutes (minimum) to ensure the memory stability.

Step 3

When the process is done, change the setting back from “Enable” to “Disable” to complete the test.

C. BIO-Flasher

BIO-Flasher is a BIOS flashing utility providing you an easy and simple way to update your BIOS via USB pen drive or floppy disk.

The BIO-Flasher is built in the BIOS chip. To enter the utility, **press <F12>** during the **Power-On Self Tests (POST)** procedure while booting up.

Updating BIOS with BIO-Flasher

1. Go to the website to download the latest BIOS file for the motherboard.
2. Then, save the BIOS file into a USB pen drive or a floppy disk.
3. Insert the USB pen drive or the floppy disk that contains the BIOS file to the USB port or the floppy disk drive.
4. Power on or reset the computer and then press **<F12>** during the **POST** process. A select dialog as the picture on the right appears. Select the device contains the BIOS file and press **<Enter>** to enter the utility.



5. The utility will show the BIOS files and their respective information. Select the proper BIOS file and press **<Enter>** then **<Y>** to perform the BIOS update process.

6. After the update process, the utility will ask you to reboot the system. Press **<Y>** to proceed. BIOS update completes.



- This utility only allows storage device with FAT32/16 format and single partition.
- Shutting down or resetting the system while updating the BIOS will lead to system boot failure.

D. Self Recovery System (S.R.S.)

This function can't be seen under BIOS setup; and is always on whenever the system starts up.

However, it can prevent system hang-up due to inappropriate overclock actions.

When the system hangs up, S.R.S. will automatically log in the default BIOS setting, and all overclock settings will be re-configured.



E. Smart Fan Function

Smart Fan Function is under "Smart Fan Configuration" in "Advanced Menu".

This is a brilliant feature to control CPU/System Temperature vs. Fan speed.

When enabling Smart Fan function, Fan speed is controlled automatically by CPU/System temperature.

This function will protect CPU/System from overheat problem and maintain the system temperature at a safe level.

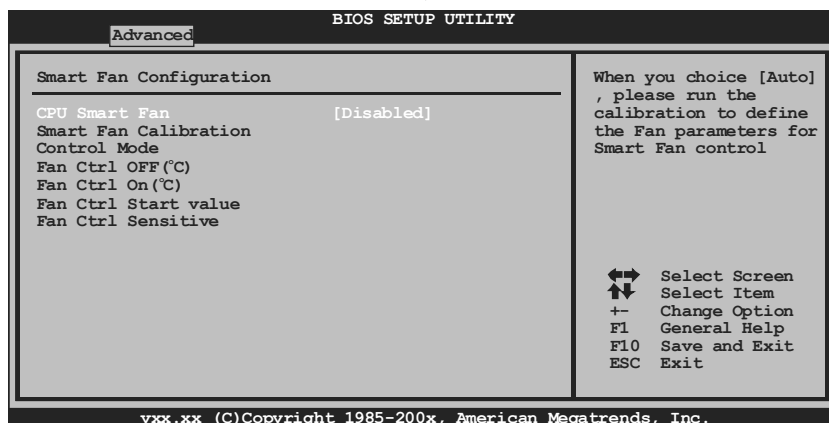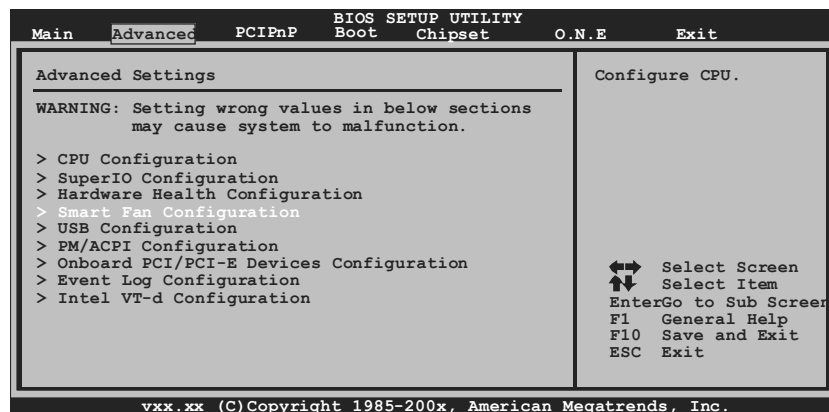

Smart Fan Calibration

Choose this item and then the BIOS will automatically test and detect the CPU/System fan functions and show CPU/System fan speed.

Fan Ctrl OFF(°C)

If the CPU/System temperature is lower than the set value, the CPU/System fan will turn off. The range is from 0~127, with an interval of 1.

Fan Ctrl On(°C)

The CPU/System fan starts to work when CPU/System temperature arrives to this set value. The range is from 0~127, with an interval of 1.

Fan Ctrl Full On(°C)

If the System Temperature reaches the set value, FAN will run in full speed. The range is from 0~127, with an interval of 1.

Fan Ctrl Start Value


When CPU/System temperature arrives to the set value, the CPU/System fan will work under Smart Fan Function mode. The range is from 0~127, with an interval of 1.

F. CMOS Reloading Program

It allows users to save different CMOS settings into BIOS-ROM.

Users are able to reload any saved CMOS setting for customizing system configurations. Moreover, users are able to save an ideal overclock setting during overclock operation.

There are 10 sets of record addresses in total, and users are able to name the CMOS data according to personal preference.

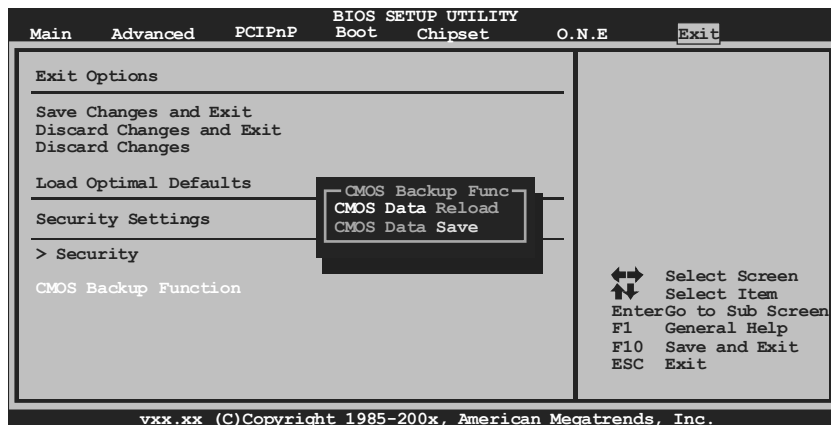

5.2 T-POWER SOFTWARE

TOverclocker is an integration for you to view CPU and Memory information, to overclock, and to monitor your hardware

Installing TOverclocker


1. Insert the Setup CD to the optical drive. The installation program will appear if the Autorun function has been enabled.
2. Select **Software Installation**, and then click on **TOverclocker**.
3. Follow the on-screen instructions to complete the installation.

Launching TOverclocker

After the installation process is completed, you will see the software icon showing on the desktop. Double-click the icon to launch it.

TOverclocker

TOverclocker presents a simple Windows-based system performance enhancement and manageability utility. It features several powerful and easy to use tools such as Overclocking for enhancing system performance, also for special enhancement on CPU and Memory. Smart-Fan control is for managing fan speed control of both CPU cooling fan and North-Bridge Chipset cooling fan. PC health is for monitoring system status. And pre-set OC modes are for easy OC. (The following snapped screens are for reference only.)

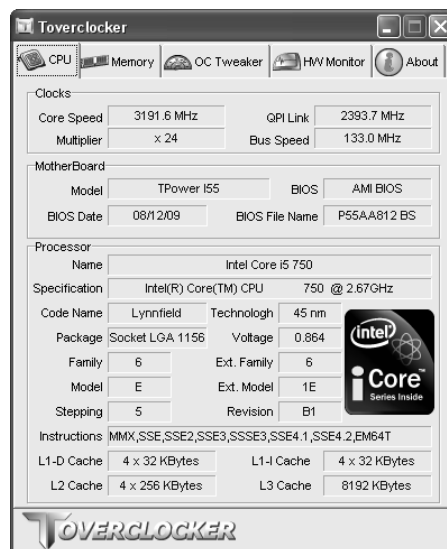




The **CPU** tab provides information on the CPU and motherboard.




The **Memory** tab provides information on the memory module(s).
 You can select memory module on a specific slot to see its information.




The **OC Tweaker** tab allows you to change system clock settings and voltages settings. It also provides six pre-set modes for you:

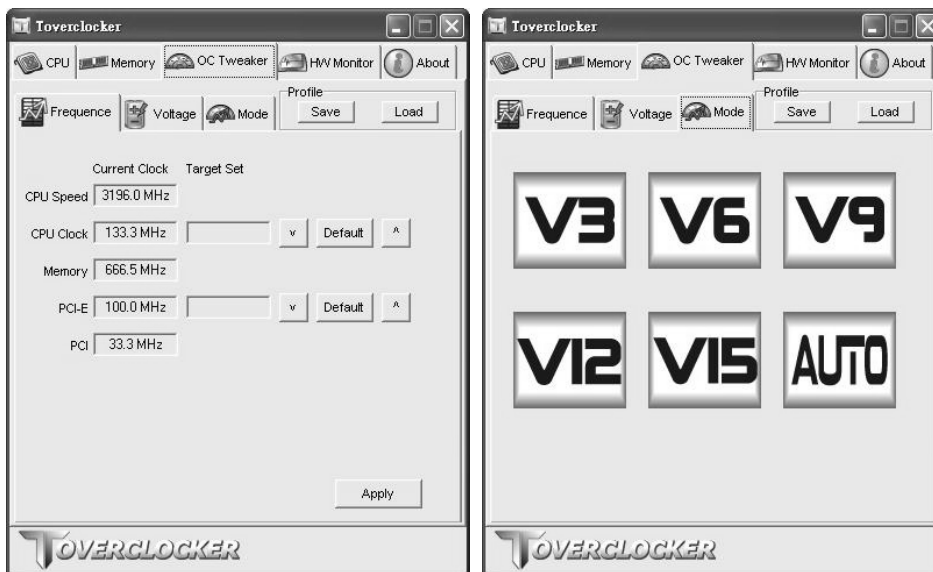

Motherboard Manual

 


The **HW Monitor** tab allows you to monitor hardware voltage, fan speed, and temperature. Besides, you also can set related values for CPU Smart Fan.

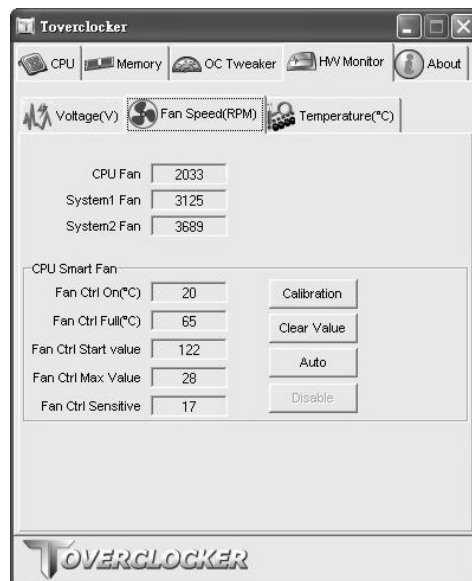

The **About** tab provides information about manufacturer and software version. You can update new version by clicking the button "Live Update."

Green Power Utility

BIOSTAR G.P.U (Green Power Utility) is a new function. The utility enhances energy efficiency by disabling extra phases while CPU is on light loading. It integrates a friendly GUI to monitor your CPU Usage, CPU Watt, and CPU Temperature; moreover, it optimizes power saving and best power efficiency on your system.

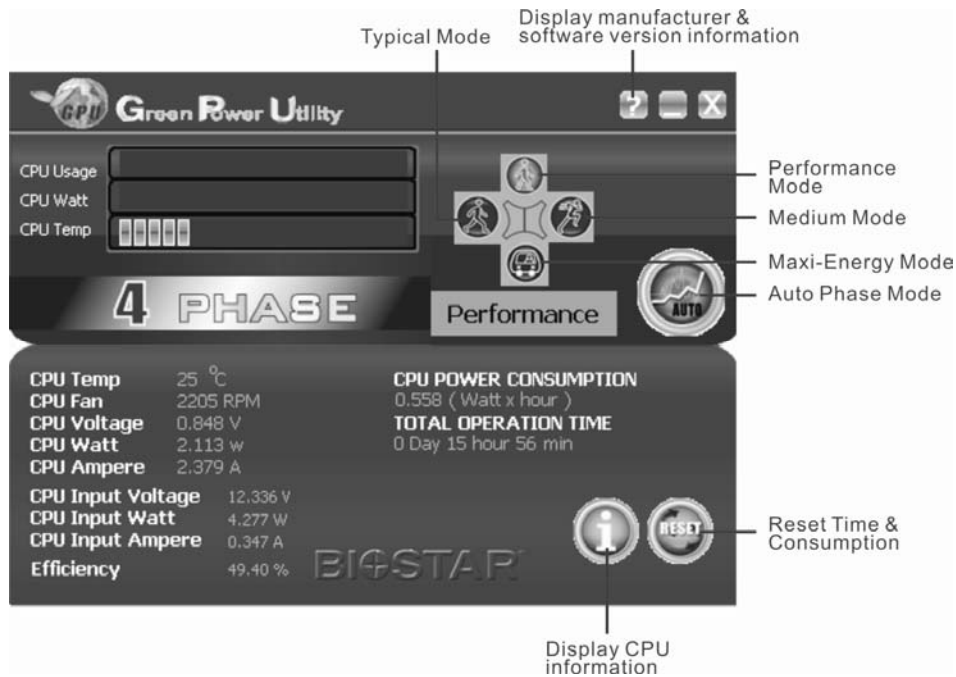

G.P.U Mode Setting

This utility provides five modes, upon your requirements, to improve system performance or to save power consumption.

Note: Even if the modes saving more power consumption are chosen, the system still can keep excellent performance.

- **Auto Phase Mode**

System switches the mode automatically according to current system loading condition.

- **Performance Mode**

This is the mode saving power consumption most. Least energy will be used in the system.

- **Typical Mode**

Compared with that in Performance Mode, energy consumption in this mode is a little bit more.

- **Medium Mode**

This is the standard system power saving mode.

- **Maxi-Energy Mode**

This is the best system performance mode.

eHot-Line (Optional)


eHot-Line is a convenient utility that helps you to contact with our Tech-Support system. This utility will collect the system information which is useful for analyzing the problem you may have encountered, and then send these information to our tech-support department to help you fix the problem.

 Before you use this utility, please set Outlook Express as your default e-mail client application program.

* represents important information that you must provide. Without this information, you may not be able to send out the mail.

This block will show the information which would be collected in the mail.

* Describe condition of your system.

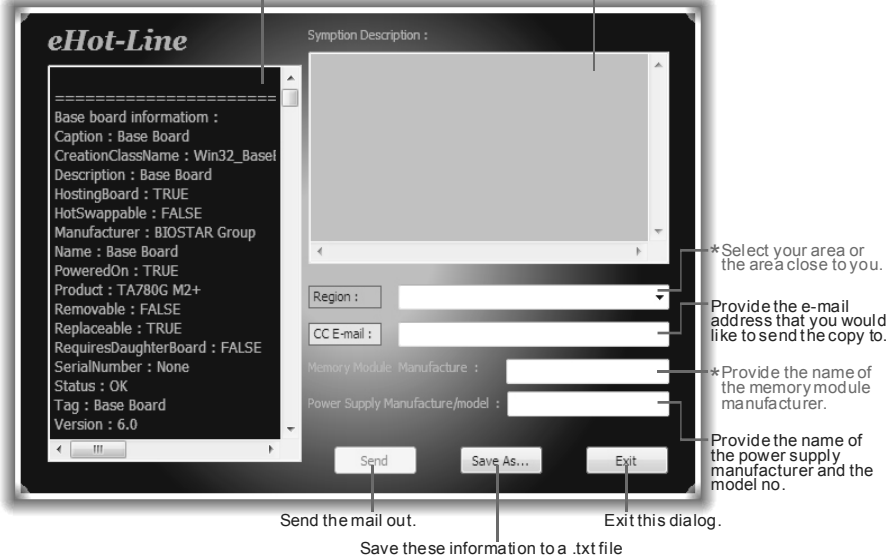

Annotations for the eHot-Line utility:


- Region:** * Select your area or the area close to you.
- CC E-mail:** Provide the e-mail address that you would like to send the copy to.
- Memory Module Manufacture:** * Provide the name of the memory module manufacturer.
- Power Supply Manufacture/model:** Provide the name of the power supply manufacturer and the model no.
- Send:** Send the mail out.
- Save As...:** Save these information to a .txt file
- Exit:** Exit this dialog.

After filling up this information, click **“Send”** to send the mail out. A warning dialog would appear asking for your confirmation; click **“Send”** to confirm or **“Do Not Send”** to cancel.



If you want to save this information to a .txt file, click **“Save As...”** and then you will see a saving dialog appears asking you to enter file name.

Enter the file name and then click “Save”. Your system information will be saved to a .txt file.

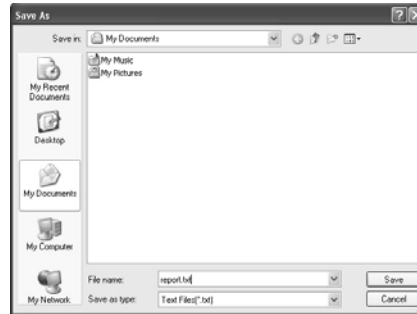

Open the saved .txt file, you will see your system information including motherboard/BIOS/CPU/video/device/OS information. This information is also included in the sent mail.




We will not share customer’s data with any other third parties, so please feel free to provide your system information while using eHot-Line service.



If you are not using Outlook Express as your default e-mail client application, you may need to save the system information to a .txt file and send the file to our tech support with other e-mail application. Go to the following web <http://www.biostar.com.tw/app/en-us/about/contact.php> for getting our contact information.


BIOS Update

BIOS Update is a convenient utility which allows you to update your motherboard BIOS under Windows system.

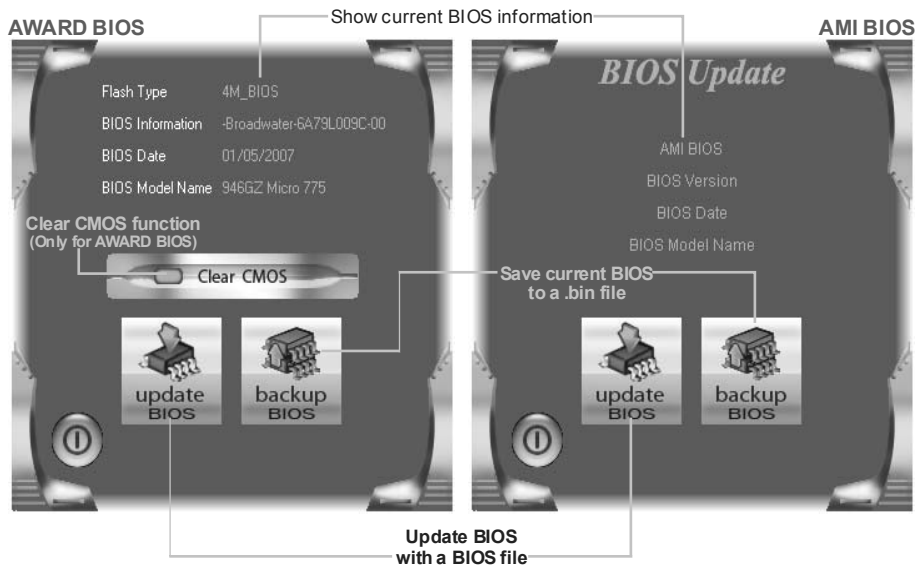

<Backup BIOS>



Once click on this button, the saving dialog will show. Choose the position to save file and enter file name. (We recommend that the file name should be English/number and no longer than 7 characters.) Then click **Save**.

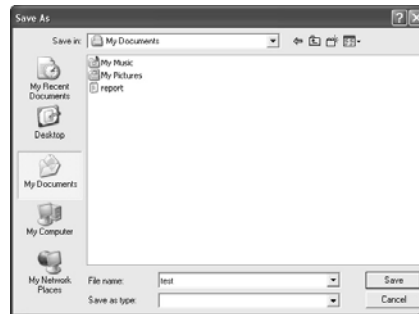

<Update BIOS>



Before doing this, please download the proper BIOS file from the website.

 For AWARD BIOS, update BIOS procedure should be run with Clear CMOS function, so please check on Clear CMOS first.

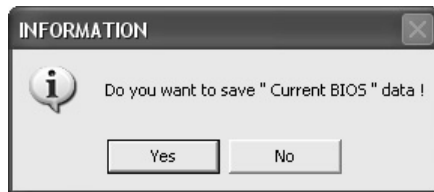


Then click Update BIOS button, a dialog will show for asking you backup current BIOS. Click **Yes** for BIOS backup and refer to the Backup BIOS procedure; or click **No** to skip this procedure.

 
After the BIOS Backup procedure, the open dialog will show for requesting the BIOS file which is going to be updated. Please choose the proper BIOS file for updating, then click on **Open**.

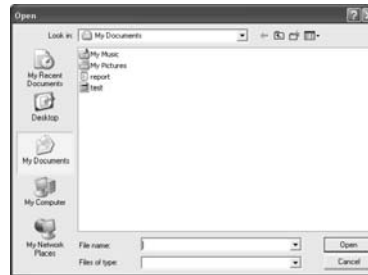

The utility will update BIOS with the proper BIOS file, and this process may take minutes. Please do not open any other applications during this process.

After the BIOS Update process, click on **OK** to restart the system.

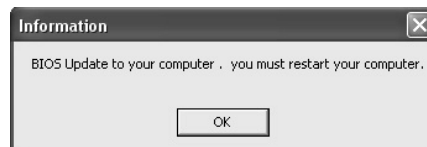

While the system boots up and the full screen logo shows, press  <Delete> key to enter BIOS setup.

In the BIOS setup, use the **Load Optimized Defaults** function and then **Save and Exit Setup** to exit BIOS setup. BIOS Update is completed.



All the information and content above about the T-Series software are subject to be changed without notice. For better performance, the software is being continuously updated. The information and pictures described above are for your reference only. The actual information and settings on board may be slightly different from this manual.

BIOScreen Utility

This utility allows you to personalize your boot logo easily. You can choose JPG or BMP as your boot logo so as to customize your computer.



Please follow the following instruction to update boot logo:


1. **Load Image** : Choose the picture as the boot logo.
2. **Transform** : Transform the picture for BIOS and preview the result.
3. **Update Bios** : Write the picture to BIOS Memory to complete the update.

CHAPTER 6: USEFUL HELP

6.1 DRIVER INSTALLATION NOTE

After you installed your operating system, please insert the Fully Setup Driver CD into your optical drive and install the driver for better system performance.

You will see the following window after you insert the CD

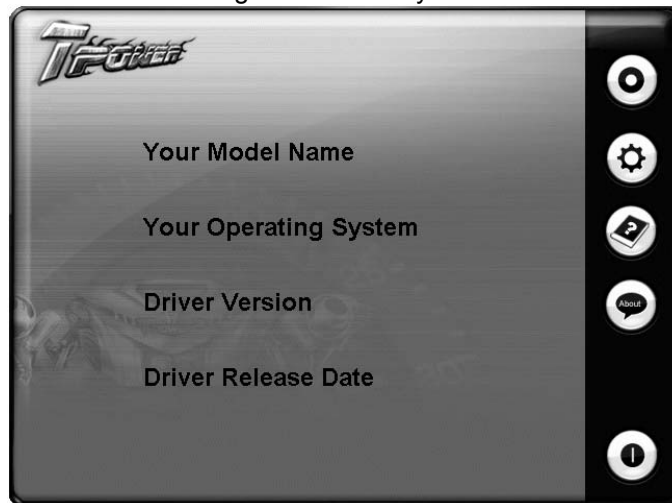

The setup guide will auto detect your motherboard and operating system.

Note:

If this window didn't show up after you insert the Driver CD, please use file browser to locate and execute the file **SETUP.EXE** under your optical drive.

A. Driver Installation

To install the driver, please click on the Driver icon. The setup guide will list the compatible driver for your motherboard and operating system. Click on each device driver to launch the installation program.

B. Software Installation

To install the software, please click on the Software icon. The setup guide will list the software available for your system, click on each software title to launch the installation program.

C. Manual

Aside from the paperback manual, we also provide manual in the Driver CD. Click on the Manual icon to browse for available manual.

Note:

You will need Acrobat Reader to open the manual file. Please download the latest version of Acrobat Reader software from <http://www.adobe.com/products/acrobat/readstep2.html>

6.2 EXTRA INFORMATION

CPU Overheated

If the system shutdown automatically after power on system for seconds, that means the CPU protection function has been activated.

When the CPU is over heated, the motherboard will shutdown automatically to avoid a damage of the CPU, and the system may not power on again.

In this case, please double check:

1. The CPU cooler surface is placed evenly with the CPU surface.
2. CPU fan is rotated normally.
3. CPU fan speed is fulfilling with the CPU speed.

After confirmed, please follow steps below to relief the CPU protection function.

1. Remove the power cord from power supply for seconds.
2. Wait for seconds.
3. Plug in the power cord and boot up the system.

Or you can:

1. Clear the CMOS data.
(See "Close CMOS Header: JCMOS1" section)
2. Wait for seconds.
3. Power on the system again.

6.3 AMI BIOS BEEP CODE

Boot Block Beep Codes

Number of Beeps	Description
1	No media present. (Insert diskette in floppy drive A:)
2	"AMIBOOT.ROM" file not found in root directory of diskette in A:
3	Insert next diskette if multiple diskettes are used for recovery
4	Flash Programming successful
5	File read error
7	No Flash EPROM detected
10	Flash Erase error
11	Flash Program error
12	"AMIBOOT.ROM" file size error
13	BIOS ROM image mismatch (file layout does not match image present in flash device)

POST BIOS Beep Codes

Number of Beeps	Description
1	Memory refresh timer error
3	Base memory read/write test error
6	Keyboard controller BAT command failed
7	General exception error (processor exception interrupt error)
8	Display memory error (system video adapter)

Troubleshooting POST BIOS Beep Codes

Number of Beeps	Troubleshooting Action
1, 3	Reseat the memory, or replace with known good modules.
6, 7	<p>Fatal error indicating a serious problem with the system. Consult your system manufacturer. Before declaring the motherboard beyond all hope, eliminate the possibility of interference by a malfunctioning add-in card. Remove all expansion cards except the video adapter.</p> <ul style="list-style-type: none"> ● If beep codes are generated when all other expansion cards are absent, consult your system manufacturer's technical support. ● If beep codes are not generated when all other expansion cards are absent, one of the add-in cards is causing the malfunction. Insert the cards back into the system one at a time until the problem happens again. This will reveal the malfunctioning card.
8	If the system video adapter is an add-in card, replace or reseat the video adapter. If the video adapter is an integrated part of the system board, the board may be faulty.

6.4 AMI BIOS Post Code

Checkpoint	Description
03	Disable NMI, Parity, video for EGA, and DMA controllers. Initialize BIOS, POST, Runtime data area. Also initialize BIOS modules on POST entry and GPNV area. Initialized CMOS as mentioned in the Kernel Variable "wCMOSFlags."
04	Check CMOS diagnostic byte to determine if battery power is OK and CMOS checksum is OK. Verify CMOS checksum manually by reading storage area. If the CMOS checksum is bad, update CMOS with power-on default values and clear passwords. Initialize status register A. Initializes data variables that are based on CMOS setup questions. Initializes both the 8259 compatible PICs in the system
05	Initializes the interrupt controlling hardware (generally PIC) and interrupt vector table.
06	Do RW test to CH-2 count reg. Initialize CH-0 as system timer. Install the POSTINT1Ch handler. Enable IRQ-0 in PIC for system timer interrupt. Traps INT1Ch vector to "POSTINT1ChHandlerBlock."
07	Fixes CPU POST interface calling pointer.
08	Initializes the CPU. The BAT test is being done on KBC. Program the keyboard controller command byte is being done after Auto detection of KB/MS using AMI KB-5.
C0	Early CPU Init Start -- Disable Cache -- Init Local APIC.
C1	Set up boot strap processor Information.
C2	Set up boot strap processor for POST.
C5	Enumerate and set up application processors.
C6	Re-enable cache for boot strap processor.
C7	Early CPU Init Exit.
0A	Initializes the 8042 compatible Key Board Controller.
0B	Detects the presence of PS/2 mouse.
0C	Detects the presence of Keyboard in KBC port.
0E	Testing and initialization of different Input Devices. Also, update the Kernel Variables. Traps the INT09h vector, so that the POST INT09h handler gets control for IRQ1. Uncompress all available language, BIOS logo, and Silent logo modules.
13	Early POST initialization of chipset registers.
20	Relocate System Management Interrupt vector for all CPU in the system.
24	Uncompress and initialize any platform specific BIOS modules. GPNV is initialized at this checkpoint.
2A	Initializes different devices through DIM. See DIM Code Checkpoints section of document for more information.
2C	Initializes different devices. Detects and initializes the video adapter installed in the system that have optional ROMs.
2E	Initializes all the output devices.
31	Allocate memory for ADM module and uncompress it. Give control to ADM module for initialization. Initialize language and font modules for ADM. Activate ADM module.
33	Initializes the silent boot module. Set the window for displaying text information.

Motherboard Manual

Checkpoint	Description
37	Displaying sign-on message, CPU information, setup key message, and any OEM specific information.
38	Initializes different devices through DIM. See DIM Code Checkpoints section of document for more information. USB controllers are initialized at this point.
39	Initializes DMAC-1 & DMAC-2.
3A	Initialize RTC date/time.
3B	Test for total memory installed in the system. Also, Check for DEL or ESC keys to limit memory test. Display total memory in the system.
3C	Mid POST initialization of chipset registers.
40	Detect different devices (Parallel ports, serial ports, and coprocessor in CPU, etc.) successfully installed in the system and update the BDA, EBDA...etc.
52	Updates CMOS memory size from memory found in memory test. Allocates memory for Extended BIOS Data Area from base memory. Programming the memory hole or any kind of implementation that needs an adjustment in system RAM size if needed.
60	Initializes NUM-LOCK status and programs the KBD typematic rate.
75	Initialize Int-13 and prepare for IPL detection.
78	Initializes IPL devices controlled by BIOS and option ROMs.
7C	Generate and write contents of ESCD in NVRam.
84	Log errors encountered during POST.
85	Display errors to the user and gets the user response for error.
87	Execute BIOS setup if needed / requested. Check boot password if installed.
8C	Late POST initialization of chipset registers.
8D	Build ACPI tables (if ACPI is supported).
8E	Program the peripheral parameters. Enable/Disable NMI as selected.
90	Initialization of system management interrupt by invoking all handlers. Please note this checkpoint comes right after checkpoint 20h.
A1	Clean-up work needed before booting to OS.
A2	Takes care of runtime image preparation for different BIOS modules. Fill the free area in F000h segment with 0FFh. Initializes the Microsoft IRQ Routing Table. Prepares the runtime language module. Disables the system configuration display if needed.
A4	Initialize runtime language module. Display boot option popup menu.
A7	Displays the system configuration screen if enabled. Initialize the CPU's before boot, which includes the programming of the MTRR's.
A9	Wait for user input at config display if needed.
AA	Uninstall POST INT1Ch vector and INT09h vector.
AB	Prepare BBS for Int 19 boot. Init MP tables.
AC	End of POST initialization of chipset registers. De-initializes the ADM module.
B1	Save system context for ACPI. Prepare CPU for OS boot including final MTRR values.
00	Passes control to OS Loader (typically INT19h).

6.5 TROUBLESHOOTING

Probable	Solution
1. There is no power in the system. Power LED does not shine; the fan of the power supply does not work 2. Indicator light on keyboard does not shine.	1. Make sure power cable is securely plugged in. 2. Replace cable. 3. Contact technical support.
System is inoperative. Keyboard lights are on, power indicator lights are lit, and hard drives are running.	Using even pressure on both ends of the DIMM, press down firmly until the module snaps into place.
System does not boot from a hard disk drive, but can be booted from optical drive.	1. Check cable running from disk to disk controller board. Make sure both ends are securely plugged in; check the drive type in the standard CMOS setup. 2. Backing up the hard drive is extremely important. All hard disks are capable of breaking down at any time.
System only boots from an optical drive. Hard disks can be read, applications can be used, but system fails to boot from a hard disk.	1. Back up data and applications files. 2. Reformat the hard drive. Re-install applications and data using backup disks.
Screen message shows "Invalid Configuration" or "CMOS Failure."	Review system's equipment. Make sure correct information is in setup.
System cannot boot after user installs a second hard drive.	1. Set master/slave jumpers correctly. 2. Run SETUP program and select correct drive types. Call the drive manufacturers for compatibility with other drives.

APPENDIX: SPEC IN OTHER LANGUAGES

GERMAN

<i>Spezifikationen</i>		
CPU	Socket 1156 Intel Core i7 / i5 Prozessoren	Unterstützt Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture-64 / Extended Memory 64 Technology / Virtualization Technology / Hyper Threading
Chipsatz	Intel P55	
Super E/A	IT8720 Bietet die häufig verwendeten alten Super E/A-Funktionen. Low Pin Count-Schnittstelle	Umgebungskontrolle, Hardware-Überwachung Lüfterdrehzahl-Controller/-Überwachung "Smart Guardian"-Funktion von ITE
Arbeitsspeicher	DDR3 DIMM-Steckplätze x 4 Jeder DIMM unterstützt 512MB / 1GB / 2GB / 4GB DDR3. Max. 16GB Arbeitsspeicher	Dual-Kanal DDR3 Speichermodul Unterstützt DDR3 2000(OC) / 1866(OC) / 1600(OC) / 1333 / 1066 / 800 registrierte DIMMs. ECC DIMMs werden nicht unterstützt.
IDE	JMB363	Ultra DMA 33 / 66 / 100 / 133 Bus Master-Modus Unterstützt PIO-Modus 0~4,
SATA II	P55	Datentransferrate bis zu 3Gb/s Konform mit der SATA-Spezifikation Version 2.0. Unterstützt RAID 0 / 1 / 5 / 1+0
eSATA	JMB363	Datentransferrate bis zu 3Gb/s Konform mit der SATA-Spezifikation Version 2.0. Unterstützt Port-Multiplier/RAID 0,1
LAN	Realtek RTL 8111DL x1 Intel 82578 PHY x1	10 / 100 / 1000 Mb/s Auto-Negotiation Halb-/ Vollduplex-Funktion
HD Audio-Unterstützung	ALC888S	Unterstützt High-Definition Audio 7.1-Kanal-Audioausgabe
IEEE 1394	LSI FW322	1394a
Steckplätze	PCI-Steckplatz x2 PCI Express Gen2 x16 Steckplatz x2 PCI Express Gen2 x4 Steckplatz x1 PCI Express Gen2 x1 Steckplatz x1	

Spezifikationen			
Onboard-Anschluss	Diskettenlaufwerkanschluss	x1	Jeder Anschluss unterstützt 2 Diskettenlaufwerke
	IDE-Anschluss	x1	Jeder Anschluss unterstützt 2 IDE-Laufwerke
	SATA-Anschluss	x6	Jeder Anschluss unterstützt 1 SATA-Laufwerk
	Fronttafelanschluss	x1	Unterstützt die Fronttafel Funktionen
	Front-Audioanschluss	x1	Unterstützt die Fronttafel-Audioanschlussfunktion
	CD-IN-Anschluss	x1	Unterstützt die CD Audio-In-Funktion
	S/PDIF Ausgangsanschluss	x1	Unterstützt die digitale Audioausgabefunktion
	CPU-Lüfter-Sockel	x1	CPU-Lüfterstromversorgungsanschluss (mit Smart Fan-Funktion)
	System-Lüfter-Sockel	x2	System-Lüfter-Stromversorgungsanschluss
	"CMOS löschen"-Sockel	x1	
	USB-Anschluss	x3	Jeder Anschluss unterstützt 2 Fronttafel-USB-Anschlüsse
	IEEE 1394-Anschluss	x1	
	Stromanschluss (24-polig)	x1	
Stromanschluss (8-polig)	x1		
Rückseiten-E/A	PS/2-Tastatur	x1	
	LAN-Anschluss	x2	
	USB-Anschluss	x8	
	Audioanschluss	x6	
	eSATA Anschluss	x2	
	1394-Anschluss	x1	
	Optisches +coaxial S/PDIF heraus	x1	
Platinengröße	244 mm (B) X 305 mm (L)	ATX	
OS-Unterstützung	Windows XP / Vista 32 / Vista 64		Biostar behält sich das Recht vor, ohne Ankündigung die Unterstützung für ein Betriebssystem hinzuzufügen oder zu entfernen.

FRENCH

SPEC		
UC	Socket 1156 Processeurs Intel Core i7 / i5	Prend en charge les technologies d'exécution de bit de désactivation / Intel SpeedStep® optimisée/ d'architecture Intel 64 / de mémoire étendue 64 / de virtualisation / Hyper Threading
Chipset	Intel P55	
Super E/S	IT8720 Fournit la fonctionnalité de Super E/S patrimoniales la plus utilisée. Interface à faible compte de broches	Initiatives de contrôle environnementales, Moniteur de matériel Contrôleur / moniteur de vitesse de ventilateur Fonction "Gardien intelligent" de l'ITE
Mémoire principale	Fentes DDR3 DIMM x 4 Chaque DIMM prend en charge des DDR3 de 512Mo / 1Go / 2Go / 4Go Capacité mémoire maximale de 16Go	Module de mémoire DDR3 à mode à double voie Prend en charge la DDR3 2000(OC) / 1866(OC) / 1600(OC) / 1333 / 1066 / 800 Les DIMM à registres et DIMM avec code correcteurs d'erreurs ne sont pas prises en charge
IDE	JMB363	Mode principale de Bus Ultra DMA 33 / 66 / 100 / 133 Prend en charge le mode PIO 0~4,
SATA II	P55	Taux de transfert jusqu'à 3 Go/s. Conforme à la spécification SATA Version 2.0 Prise en charge RAID 0 / 1 / 5 / 1+0
eSATA	JMB363	Taux de transfert jusqu'à 3 Go/s. Conforme à la spécification SATA Version 2.0 Prise en charge Port-Multiplicateur/ RAID 0,1
LAN	Realtek RTL 8111DL x1 Intel 82578 PHY x1	10 / 100 / 1000 Mb/s négociation automatique Half / Full duplex capability
Prise en charge audio HD	ALC888S	Prise en charge de l'audio haute définition Sortie audio à 7.1 voies
IEEE 1394	LSI FW322	1394a
Fentes	Fente PCI x2 Fente PCI Express Gen2 x16 x2 Fente PCI Express Gen2 x4 x1 Fente PCI Express Gen2 x1 x1	

SPEC			
Connecteur embarqué	Connecteur de disquette	x1	Chaque connector prend en charge 2 lecteurs de disquettes
	Connecteur IDE	x1	Chaque connecteur prend en charge 2 périphériques IDE
	Connecteur SATA	x6	Chaque connecteur prend en charge 1 périphérique SATA
	Connecteur du panneau avant	x1	Prend en charge les équipements du panneau avant
	Connecteur Audio du panneau avant	x1	Prend en charge la fonction audio du panneau avant
	Connecteur d'entrée CD	x1	Prend en charge la fonction d'entrée audio de CD
	Connecteur de sortie S/PDIF	x1	Prend en charge la fonction de sortie audio numérique
	Embase de ventilateur UC	x1	Alimentation électrique du ventilateur UC (avec fonction de ventilateur intelligent)
	Embase de ventilateur système	x2	Alimentation électrique du ventilateur système
	Embase d'effacement CMOS	x1	
	Connecteur USB	x3	Chaque connecteur prend en charge 2 ports USB de panneau avant
	Connecteur IEEE 1394	x1	
	Connecteur d'alimentation (24 broches)	x1	
	Connecteur d'alimentation (8 broches)	x1	
E/S du panneau arrière	Clavier PS/2	x1	
	Port LAN	x2	
	Port USB	x8	
	Fiche audio	x6	
	Port eSATA	x2	
	Port 1394 +coaxial optique sortie S/PDIF	x1 x1	
Dimensions de la carte	244 mm (l) X 305 mm (H)	ATX	
Support SE	Windows XP / Vista 32 / Vista 64	Biostar se réserve le droit d'ajouter ou de supprimer le support de SE avec ou sans préavis.	

ITALIAN

SPECIFICA		
CPU	Socket 1156 Processore Intel Core i7 / i5	Supporto di Execute Disable Bit / Enhanced Intel SpeedStep® / Architettura Intel 64 / Tecnologia Extended Memory 64 / Tecnologia Virtualization / Hyper Threading
Chipset	Intel P55	
Super I/O	IT8720 Fornisce le funzionalità legacy Super I/O usate più comunemente. Interfaccia LPC (Low Pin Count)	Funzioni di controllo dell'ambiente: Monitoraggio hardware Controller / Monitoraggio velocità ventolina Funzione "Smart Guardian" di ITE
Memoria principale	Alloggi DIMM DDR3 x 4 Ciascun DIMM supporta DDR3 512MB / 1GB / 2GB / 4GB Capacità massima della memoria 16GB	Modulo di memoria DDR3 a canale doppio Supporto di DDR3 2000(OC) / 1866(OC) / 1600(OC) / 1333 / 1066 / 800 DIMM registrati e DIMM ECC non sono supportati
IDE	JMB363	Modalità Bus Master Ultra DMA 33 / 66 / 100 / 133 Supporto modalità PIO Mode 0-4
SATA II	P55	Velocità di trasferimento dei dati fino a 3 Gb/s. Compatibile specifiche SATA Versione 2.0. Supporto RAID 0 / 1 / 5 / 1+0
eSATA	JMB363	Velocità di trasferimento dei dati fino a 3 Gb/s. Compatibile specifiche SATA Versione 2.0. Supporto Port-Multiplier/RAID 0,1
LAN	Realtek RTL 8111DL x1 Intel 82578 PHY x1	Negoziante automatica 10 / 100 / 1000 Mb/s Capacità Half / Full Duplex
Supporto audio HD	ALC888S	Supporto audio High-Definition (HD) Uscita audio 7.1 canali
IEEE 1394	LSI FW322	1394a
Alloggi	Alloggio PCI x2 Alloggio PCI Express Gen2 x16 x2 Alloggio PCI Express Gen2 x4 x1 Alloggio PCI Express Gen2 x1 x1	

SPECIFICA			
Connettori su scheda	Connettore floppy	x1	Ciascun connettore supporta 2 unità Floppy
	Connettore IDE	x1	Ciascun connettore supporta 2 unità IDE
	Connettore SATA	x6	Ciascun connettore supporta 1 unità SATA
	Connettore pannello frontale	x1	Supporta i servizi del pannello frontale
	Connettore audio frontale	x1	Supporta la funzione audio pannello frontale
	Connettore CD-in	x1	Supporta la funzione input audio CD
	Connettore output SPDIF	x1	Supporta la funzione d'output audio digitale
	Collettore ventolina CPU	x1	Alimentazione ventolina CPU (con funzione Smart Fan)
	Collettore ventolina sistema	x2	Alimentazione ventolina di sistema
	Collettore cancellazione CMOS	x1	
	Connettore USB	x3	Ciascun connettore supporta 2 porte USB pannello frontale
	Connettore IEEE 1394	x1	
	Connettore alimentazione (24 pin)	x1	
Connettore alimentazione (8 pin)	x1		
I/O pannello posteriore	Tastiera PS/2	x1	
	Porta LAN	x2	
	Porta USB	x8	
	Connettore audio	x6	
	Porta eSATA	x2	
	Porta 1394 +coaxial ottico S/PDIF fuori	x1 x1	
Dimensioni scheda	244 mm (larghezza) x 305 mm (altezza)	ATX	
Sistemi operativi supportati	Windows XP / Vista 32 / Vista 64	Biostar si riserva il diritto di aggiungere o rimuovere il supporto di qualsiasi sistema operativo senza preavviso.	

SPANISH

<i>Especificación</i>		
CPU	Socket 1156 Procesador Intel Core i7 / i5	Admite Bit de deshabilitación de ejecución / Intel SpeedStep® Mejorado / Intel Architecture-64 / Tecnología Extended Memory 64 / Tecnología de virtualización / Hyper Threading
Conjunto de chips	Intel P55	
Súper E/S	IT8720 Le ofrece las funcionalidades heredadas de uso más común Súper E/S. Interfaz de cuenta Low Pin	Iniciativas de control de entorno, Monitor hardware Controlador/monitor de velocidad de ventilador Función "Guardia inteligente" de ITE
Memoria principal	Ranuras DIMM DDR3 x 4 Cada DIMM admite DDR de 512MB / 1GB / 2GB / 4GB Capacidad máxima de memoria de 16GB	Módulo de memoria DDR3 de canal Doble Admite DDR3 de 2000(OC) / 1866(OC) / 1600(OC) / 1333 / 1066 / 800 No admite DIMM registrados o DIMM compatibles con ECC
IDE	JMB363	Modo bus maestro Ultra DMA 33 / 66 / 100 / 133 Soporte los Modos PIO 0~4,
SATA II	P55	Tasas de transferencia de hasta 3 Gb/s. Compatible con la versión SATA 2.0. Admite RAID 0 / 1 / 5 / 1+0
eSATA	JMB363	Tasas de transferencia de hasta 3 Gb/s. Compatible con la versión SATA 2.0. Admite Port-Multiplier/RAID 0,1
Red Local	Realtek RTL 8111DL x1 Intel 82578 PHY x1	Negociación de 10 / 100 / 1000 Mb/s Funciones Half / Full dúplex
Soporte de sonido HD	ALC888S	Soporte de sonido de Alta Definición Salida de sonido de 7.1 canales
IEEE 1394	LSI FW322	1394a
Ranuras	Ranura PCI X2 Ranura PCI Express Gen2 x16 X2 Ranura PCI Express Gen2 x4 X1 Ranura PCI Express Gen2 x1 X1	

Especificación			
Conectores en placa	Conector disco flexible	X1	Cada conector soporta 2 unidades de disco flexible
	Conector IDE	X1	Cada conector soporta 2 dispositivos IDE
	Conector SATA	X6	Cada conector soporta 1 dispositivos SATA
	Conector de panel frontal	X1	Soporta instalaciones en el panel frontal
	Conector de sonido frontal	X1	Soporta funciones de sonido en el panel frontal
	Conector de entrada de CD	X1	Soporta función de entrada de sonido de CD
	Conector de salida S/PDIF	X1	Soporta función de salida de sonido digital
	Cabecera de ventilador de CPU	X1	Fuente de alimentación de ventilador de CPU (con función Smart Fan)
	Cabecera de ventilador de sistema	X2	Fuente de alimentación de ventilador de sistema
	Cabecera de borrado de CMOS	X1	
	Conector USB	X3	Cada conector soporta 2 puertos USB frontales
	Cabecera IEEE 1394	x1	
	Conector de alimentación (24 patillas)	X1	
Conector de alimentación (8 patillas)	X1		
Panel trasero de E/S	Teclado PS/2	X1	
	Puerto de red local	X2	
	Puerto USB	X8	
	Conector de sonido	X6	
	Puerto eSATA	X2	
	Puerto 1394	x1	
	+coaxial óptico salida S/PDIF	x1	
Tamaño de la placa	244 mm. (A) X 305 Mm. (H)		ATX
Soporte de sistema operativo	Windows XP / Vista 32 / Vista 64		Biostar se reserva el derecho de añadir o retirar el soporte de cualquier SO con o sin aviso previo.

PORTUGUESE

ESPECIFICAÇÃO		
CPU	Socket 1156 Processador Intel Core i7 / i5	Suporta as tecnologias Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture -64 / Extended Memory 64 / Virtualization / Hyper Threading
Chipset	Intel P55	
Especificação do Super I/O	IT8720 Proporciona as funcionalidades mais utilizadas em termos da especificação Super I/O. Interface LPC (Low Pin Count).	Iniciativas para controlo do ambiente Monitorização do hardware Controlador/Monitor da velocidade da ventoinha Função "Smart Guardian" da ITE
Memória principal	Ranuras DIMM DDR3 x 4 Cada módulo DIMM suporta uma memória DDR3 de 256 MB / 512 MB / 1GB / 2GB / 4GB Capacidade máxima de memória:8 GB	Módulo de memória DDR3 de canal duplo Suporta módulos DDR3 2000(OC) / 1866(OC) / 1600(OC) / 1333 / 1066 / 800 Os módulos DIMM registados e os DIMM ECC não são suportados
IDE	JMB363	Modo Bus master Ultra DMA 33 / 66 / 100 / 133 Suporta o modo PIO 0~4,
SATA II	P55	Velocidades de transmissão de dados até 3 Gb/s. Compatibilidade com a especificação SATA versão 2.0. Suporta as funções RAID 0 / 1 / 5 / 1+0
eSATA	JMB363	Velocidades de transmissão de dados até 3 Gb/s. Compatibilidade com a especificação SATA versão 2.0. Suporta as funções Port-Multiplier/RAID 0,1
LAN	Realtek RTL 8111DL x1 Intel 82578 PHY x1	Auto negociação de 10 / 100 / 1000 Mb/s Capacidade semi/full-duplex
Suporte para áudio de alta definição	ALC888S	Suporta a especificação High-Definition Audio Saída de áudio de 7.1 canais
IEEE 1394	LSI FW322	1394a
Ranuras	Ranura PCI x2 Ranura PCI Express Gen2 x16 x2 Ranura PCI Express Gen2 x4 x1 Ranura PCI Express Gen2 x1 x1	

ESPECIFICAÇÃO			
Conectores na placa	Conector da unidade de disquetes	x1	Cada conector suporta 2 unidades de disquetes
	Conector IDE	x1	Cada conector suporta 2 dispositivos IDE
	Conector SATA	x6	Cada conector suporta 1 dispositivo SATA
	Conector do painel frontal	x1	Para suporte de várias funções no painel frontal
	Conector de áudio frontal	x1	Suporta a função de áudio no painel frontal
	Conector para entrada de CDs	x1	Suporta a entrada de áudio a partir de CDs
	Conector de saída S/PDIF	x1	Suporta a saída de áudio digital
	Conector da ventoinha da CPU	x1	Alimentação da ventoinha da CPU (com a função Smart Fan)
	Conector da ventoinha do sistema	x2	Alimentação da ventoinha do sistema
	Conector para limpeza do CMOS	x1	
	Conector USB	x3	Cada conector suporta 2 portas USB no painel frontal
	Conector IEEE 1394	x1	
	Conector de alimentação (16 pinos)	x1	
Conector de alimentação (8 pinos)	x1		
Entradas/Saídas no painel traseiro	Teclado PS/2	x1	
	Porta LAN	x2	
	Porta USB	x8	
	Tomada de áudio	x6	
	Porta eSATA	x2	
	Porta 1394	x1	
	+coaxial ótico saída S/PDIF	x1	
Tamanho da placa	244 mm (L) X 305 mm (A)		ATX
Sistemas operativos suportados	Windows XP / Vista 32 / Vista 64		A Biostar reserva-se o direito de adicionar ou remover suporte para qualquer sistema operativo com ou sem aviso prévio.

POLISH

<i>SPEC</i>		
Procesor	Socket 1156 Procesor Intel Core i7 / i5	Obsługa Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture-64 / Extended Memory 64 Technology / Virtualization Technology / Hyper Threading
Chipset	Intel P55	
Pamięć główna	Gniazda DDR3 DIMM x 4 Każde gniazdo DIMM obsługuje moduły 512MB / 1GB / 2GB / 4GB Maks. wielkość pamięci 16GB	Moduł pamięci DDR3 z trybem podwójnego kanału Obsługa DDR3 2000(OC) / 1866(OC) / 1600(OC) / 1333 / 1066 / 800 Brak obsługi Registered DIMM oraz ECC DIMM
Super I/O	IT8720 Zapewnia najbardziej powszechne funkcje Super I/O. Interfejs Low Pin Count	Funkcje kontroli warunków pracy, Monitor H/W Kontroler/Monitor prędkości wentylatora Funkcja ITE "Smart Guardian"
IDE	JMB363	Ultra DMA 33 / 66 / 100 / 133 Tryb Bus Master obsługa PIO tryb 0~4,
SATA II	P55	Transfer danych do 3 Gb/s. Zgodność ze specyfikacją SATA w wersji 2.0. Obsługa RAID 0 / 1 / 5 / 1+0
eSATA	JMB363	Transfer danych do 3 Gb/s. Zgodność ze specyfikacją SATA w wersji 2.0. Obsługa Port-Multiplier/RAID 0,1
LAN	Realtek RTL 8111DL x1 Intel 82578 PHY x1	10 / 100 / 1000 Mb/s z automatyczną negocjacją szybkości Działanie w trybie półwicznego / pełnego duplexu
Obsługa audio HD	ALC888S	Obsługa High-Definition Audio 7.1 kanałowe wyjście audio
IEEE 1394	LSI FW322	1394a
Gniazda	Gniazdo PCI x2 Gniazdo PCI Express Gen2 x16 x2 Gniazdo PCI Express Gen2 x4 x1 Gniazdo PCI Express Gen2 x1 x1	

SPEC			
Złącza wbudowane	Złącze napędu dyskietek	x1	Każde złącze obsługuje 2 napędy dyskietek
	Złącze IDE	x1	Każde złącze obsługuje 2 urządzenia IDE
	Złącze SATA	x6	Każde złącze obsługuje 1 urządzenie SATA
	Złącze panela przedniego	x1	Obsługa elementów panela przedniego
	Przednie złącze audio	x1	Obsługa funkcji audio na panelu przednim
	Złącze wejścia CD	x1	Obsługa funkcji wejścia audio CD
	Złącze wyjścia S/PDIF	x1	Obsługa funkcji cyfrowego wyjścia audio
	Złącze główkowe wentylatora procesora	x1	Zasilanie wentylatora procesora (z funkcją Smart Fan)
	Złącze główkowe wentylatora systemowego	x2	Zasilanie wentylatora systemowego
	Złącze główkowe kasowania CMOS	x1	
	Złącze USB	x3	Każde złącze obsługuje 2 porty USB na panelu przednim
	Złącze IEEE 1394	x1	
	Złącze zasilania (24 pinowe)	x1	
Złącze zasilania (8 pinowe)	x1		
Back Panel I/O	Klawiatura PS/2	x1	
	Port LAN	x2	
	Port USB	x8	
	Gniazdo audio	x6	
	Port eSATA	x2	
	Port 1394	x1	
	Optyczny +coaxial wyjścia S/PDIF	x1	
Wymiary płyty	244 mm (S) X 305 mm (W)	ATX	
Obsługa systemu operacyjnego	Windows XP / Vista 32 / Vista 64		Biostar zastrzega sobie prawo dodawania lub odwoływania obsługi dowolnego systemu operacyjnego bez powiadomienia.

RUSSIAN

СПЕЦ		
CPU (центральный процессор)	Socket 1156 Процессор Intel Core i7 / i5	Поддержка технологий Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture-64 / Extended Memory 64 Technology / технологии виртуализация / Hyper Threading
Набор микросхем	Intel P55	
Основная память	Слоты DDR3 DIMM x 4 Каждый модуль DIMM поддерживает 512МБ / 1ГБ / 2ГБ / 4 ГБ DDR3 Максимальная ёмкость памяти 16ГБ	Модуль памяти с двухканальным режимом DDR3 Поддержка DDR3 2000(OC) / 1866(OC) / 1600(OC) / 1333 / 1066 / 800 Не поддерживает зарегистрированные модули DIMM and ECC DIMM
Super I/O	IT8720 Обеспечивает наиболее используемые действующие функциональные возможности Super I/O. Интерфейс с низким количеством выводов	Инициативы по охране окружающей среды, Аппаратный монитор Регулятор скорости вентилятора/ монитор Функция ITE "Smart Guardian" (Интеллектуальная защита)
IDE	JMB363	Режим "хозяина" шины Ultra DMA 33 / 66 / 100 / 133 Поддержка режима PIO 0~4,
SATA II	P55	скорость передачи данных до 3 гигабит/с. Соответствие спецификации SATA версия 2.0. Поддержка RAID 0 / 1 / 5 / 1+0
eSATA	JMB363	скорость передачи данных до 3 гигабит/с. Соответствие спецификации SATA версия 2.0. Поддержка Port-Multiplier/RAID 0,1
Локальная сеть	Realtek RTL 8111DL x1 Intel 82578 PHY x1	Автоматическое согласование 10 / 100 / 1000 Мб/с Частичная / полная дуплексная способность
Звуковая поддержка жесткого диска	ALC888S	Звуковая поддержка High-Definition 7.1канальный звуковой выход
IEEE 1394	LSI FW322	1394a
Слоты	Слот PCI x2 Слот PCI Express Gen2 x16 x2 Слот PCI Express Gen2 x4 x1 Слот PCI Express Gen2 x1 x1	

СПЕЦ			
Встроенны й разъем	Разъем НГМД	x1	Каждый разъем поддерживает 2 накопителя на гибких магнитных дисках
	Разъем IDE	x1	Каждый разъем поддерживает 2 встроенных интерфейса накопителей
	Разъем SATA	x6	Каждый разъем поддерживает 1 устройство SATA
	Разъем на лицевой панели	x1	Поддержка устройств на лицевой панели
	Входной звуковой разъем	x1	Поддержка звуковых функций на лицевой панели
	Разъем ввода для CD	x1	Поддержка функции ввода для CD
	Разъем вывода для S/PDIF	x1	Поддержка вывода цифровой звуковой функции
	Контактирующее приспособление вентилятора центрального процессора	x1	Источник питания для вентилятора центрального процессора (с функцией интеллектуального вентилятора)
	Контактирующее приспособление вентилятора системы	x2	Источник питания для вентилятора системы
	Открытое контактирующее приспособление CMOS	x1	
	USB-разъем	x3	Каждый разъем поддерживает 2 USB-порта на лицевой панели
	IEEE 1394-разъем	x1	
	Разъем питания (24 вывод)	x1	
Разъем питания (8 вывод)	x1		
Задняя панель средств ввода-выв ода	Клавиатура PS/2	x1	
	Порт LAN	x2	
	USB-порт	x8	
	Гнездо для подключения наушников	x6	
	eSATA порт	x2	
	1394-порт	x1	
Оптически +coaxial вывода для S/PDIF	x1		
Размер панели	244 мм (Ш) X 305 мм (В)		ATX
Поддержка OS	Windows XP / Vista 32 / Vista 64		Biostar сохраняет за собой право добавлять или удалять средства обеспечения для OS с или без предварительного уведомления.

ARABIC

لمواصفات		
Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture-64 / Extended Memory 64 Technology / Virtualization Technology / Hyper Threading	Socket 1156 يتردد يصل إلى Intel Core i7 / i5 معالج	وحدة المعالجة المركزية
	Intel P55	مجموعة الشرائح
مزدوجة القناة DDR3 وحدة ذاكرة 2000(OC) / 1866(OC) / 1600(OC) / 1333 / 1066 / 800 ميجا بايت ECC ونك التي لا تتوافق مع DIMM لا تدعم رقائق الذاكرة	قناة DDR3 DIMM عدد 4 ميجا 512 سعة DDR3 تدعم ذاكرة من نوع DIMM كل قناة غيب 4/غيب 2/غيب 1 سعة ذاكرة قصوى 16 جيجا بايت	الذاكرة الرئيسية
وسائل التحكم في البيئية: مراقب لمعرفة حالة الأجزاء مراقب في سرعة المروحة ITE من "Smart Guardian" وظيفة	IT8720 الأكثر استخداماً. Super I/O يوفر وظيفة Low Pin Count Interface تدعم تقنية	Super I/O
وضع رئيسي Ultra DMA 33 / 66 / 100 / 133 نقل بتقنية PIO Mode 0~4 دعم وضع	JMB363	منفذ IDE
نقل البيلت بسرعة تصل إلى 3 جيجابت/ثانية. الإصدار SATA مطابقة لمواصفات RAID 0 / 1 / 5 / 1+0 تدعم تقنية	P55	SATA II
نقل البيلت بسرعة تصل إلى 3 جيجابت/ثانية. الإصدار SATA مطابقة لمواصفات RAID 0,1 /Port-Multiplier تدعم تقنية	JMB363	eSATA
تفاوض تلقائي 100/10 ميجا بايت / ثانية و 1 جيجا بايت/ثانية إمكانية النقل المزدوج الكامل/النصفي	Realtek RTL 8111DL x1 Intel 82578 PHY x1	شبكة داخلية
تدعم تقنية الصوت عالي التعريف من 7.1 قنوات لخرج الصوت	ALC888S	دعم الصوت عالي التعريف
1394a	LSI FW322	IEEE 1394
	عدد 2 عدد 2 عدد 1 عدد 1	قناة PCI قناة PCI Express Gen2 x16 قناة PCI Express Gen2 x4 قناة PCI Express Gen2 x1

المواصفات			
يدعم محرك الأقراص المرنة	عدد 1	منفذ محرك أقراص مرنة	المنافذ على سطح اللوحة
يدعم كل منفذ الثنين من أجهزة IDE	عدد 1	منفذ IDE	
يدعم كل منفذ واحد من أجهزة SATA	عدد 6	منفذ SATA	
يدعم تجهيزات اللوحة الامامية	عدد 1	منفذ اللوحة الامامية	
يدعم وظيفة الصوت باللوحة الامامية	عدد 1	منفذ الصوت الاممي	
يدعم وظيفة دخل صوت القرص المدمج	عدد 1	منفذ CD-IN	
يدعم وظيفة خرج الصوت الرقمي	عدد 1	منفذ خرج S/PDIF	
Smart Fan توصيل الطاقة لمروحة وحدة المعالجة مع وظيفة	عدد 1	وصلة مروحة وحدة المعالجة المركزية	
توصيل الطاقة لمروحة النظام	عدد 2	وصلة مروحة النظام	
	عدد 1	وصلة مسح CMOS	
باللوحة الامامية USB يدعم كل منفذ قحتي	عدد 3	منفذ USB	
	عدد 1	منفذ IEEE 1394	
	عدد 1	منفذ توصيل الطاقة (24بيوس)	
	عدد 1	منفذ توصيل الطاقة (8بيوس)	
	عدد 1	لوحة مفاتيح PS/2	منفذ دخل/خرج اللوحة الخلفية
	عدد 2	منفذ شبكة اتصال محلية	
	عدد 8	منافذ USB	
	عدد 6	مقيس صوت	
	عدد 2	منفذ eSATA	
	عدد 1	منفذ 1394	
	عدد 1	محور متحد +بصرية منفذ خرج S/PDIF	
ATX		244 مم (عرض) X 305 مم (ارتفاع)	حجم اللوحة
يحققها في اضافة أو ازالة الدعم لأي نظام تشغيل بإخطار Biostar حتى لا أو بدون إخطار.		Windows XP / Vista 32 / Vista 64	دعم أنظمة التشغيل

JAPANESE

仕様		
CPU	Socket 1156 Intel Core i7 / i5 processor	Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture-64 / Extended Memory 64 Technology / Virtualization Technology / Hyper Threadingをサポートします
チップセット	Intel P55	
メインメモリ	DDR3 DIMMスロット x 4 各DIMMは 512MB / 1GB / 2GB / 4GB DDR3をサポート 最大メモリ容量16GB	デュアル チャンネルモードDDR3 メモリモジュール DDR3 2000(OC) / 1866(OC) / 1600(OC) / 1333 / 1066 / 800 をサポート 登録済みDIMMとECC DIMMはサポートされません
Super I/O	IT8720 もつとも一般に使用されるレガシーSuper I/O 機能を採用しています。 低ピンカウントインターフェイス	環境コントロールイニシアチブ、 H/W モニター ファン速度コントローラ/ モニター ITEの「スマートガーディアン」機能
IDE	JMB363	Ultra DMA 33 / 66 / 100 / 133バスマスタモード PIO Mode 0~4のサポート
SATA II	P55	最高3 Gb/秒のデータ転送速度 SATAバージョン2.0仕様に準拠。 RAID 0 / 1 / 5 / 1+0のサポート
eSATA	JMB363	最高3 Gb/秒のデータ転送速度 SATAバージョン2.0仕様に準拠。 RAID 0,1 /Port-Multiplierのサポート
LAN	Realtek RTL 8111DL x1 Intel 82578 PHY x1	10 / 100 / 1000 Mb/秒のオートネゴシエーション 半/全二重機能
HD オーディオのサポート	ALC888S	ハイデフィニションオーディオのサポート 7.1 チャンネルオーディオアウト
IEEE 1394	LSI FW322	1394a
スロット	PCIスロット x2 PCI Express Gen2 x16スロット x2 PCI Express Gen2 x4スロット x1 PCI Express Gen2 x1スロット x1	

仕様			
オンボードコネクタ	フロッピーコネクタ	x1	各コネクタは2つのフロッピードライブをサポートします
	IDEコネクタ	x1	各コネクタは2つのIDEデバイスをサポートします
	SATAコネクタ	x6	各コネクタは1つのSATAデバイスをサポートします
	フロントパネルコネクタ	x1	フロントパネル機能をサポートします
	フロントオーディオコネクタ	x1	フロントパネルオーディオ機能をサポートします
	CDインコネクタ	x1	CDオーディオイン機能をサポートします
	S/PDIFアウトコネクタ	x1	デジタルオーディオアウト機能をサポートします
	CPUファンヘッダ	x1	CPUファン電源装置(スマートファン機能を搭載)
	システムファンヘッダ	x2	システムファン電源装置
	CMOSクリアヘッダ	x1	
	USBコネクタ	x3	各コネクタは2つのフロントパネルUSBポートをサポートします
	IEEE 1394コネクタ	x1	
	電源コネクタ(24ピン)	x1	
電源コネクタ(8ピン)	x1		
背面パネルI/O	PS/2キーボード	x1	
	LANポート	x2	
	USBポート	x8	
	オーディオジャック	x6	
	eSATAポート	x2	
	1394ポート	x1	
	光学+coaxial S/PDIFアウト	x1	
ボードサイズ	244 mm (幅) X 305 mm (高さ)	ATX	
OSサポート	Windows XP / Vista 32 / Vista 64		Biostarは事前のサポートなしにOSサポートを追加または削除する権利を留保します。

2009/09/09