



## FCC Information and Copyright

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. There is no guarantee that interference will not occur in a particular installation.

The vendor makes no representations or warranties with respect to the contents here and specially disclaims any implied warranties of merchantability or fitness for any purpose. Further the vendor reserves the right to revise this publication and to make changes to the contents here without obligation to notify any party beforehand.

Duplication of this publication, in part or in whole, is not allowed without first obtaining the vendor's approval in writing.

The content of this user's manual is subject to be changed without notice and we will not be responsible for any mistakes found in this user's manual. All the brand and product names are trademarks of their respective companies.



Dichiarazione di conformità sintetica  
Ai sensi dell'art. 2 comma 3 del D.M. 275 del  
30/10/2002  
Si dichiara che questo prodotto è conforme  
alle normative vigenti e soddisfa i requisiti  
essenziali richiesti dalle direttive  
2004/108/CE, 2006/95/CE e 1999/05/CE  
quando ad esso applicabili

Short Declaration of conformity  
We declare this product is complying with the  
laws in force and meeting all the essential  
requirements as specified by the directives  
2004/108/CE, 2006/95/CE and 1999/05/CE  
whenever these laws may be applied

# Table Of Contents

<b>FCC Information and Copyright .....</b>	<b>1</b>
<b>Chapter 1: Introduction.....</b>	<b>3</b>
1.1 Before You Start .....	3
1.2 Package Checklist.....	3
1.3 Specifications.....	4
1.4 Rear Panel Connectors.....	5
1.5 Motherboard Layout .....	6
<b>Chapter 2: Hardware installation.....</b>	<b>7</b>
2.1 Install Central Processing Unit (CPU) .....	7
2.2 Install a Heatsink.....	9
2.3 Connect Cooling Fans .....	10
2.4 Install System Memory .....	11
2.5 Expansion Slots.....	12
2.6 Jumper & Switch Setting.....	13
2.7 Headers & Connectors.....	14
2.8 LEDs .....	18
<b>Chapter 3: UEFI BIOS &amp; Software.....</b>	<b>19</b>
3.1 UEFI BIOS Setup .....	19
3.2 BIOS Update.....	19
3.3 Software.....	23
<b>Chapter 4: Useful help.....</b>	<b>35</b>
4.1 Driver Installation .....	35
4.2 AMI BIOS Beep Code.....	36
4.3 AMI BIOS post code .....	36
4.4 Troubleshooting.....	38
4.5 RAID Functions.....	39
4.6 Intel® Optane™ Technology .....	41
<b>APPENDIX I: Specifications in Other Languages .....</b>	<b>42</b>
Arabic.....	42
German.....	43
Russian.....	44
Spanish .....	45
Thai.....	46

# Chapter 1: Introduction

## 1.1 Before You Start

Thank you for choosing our product. Before you start installing the motherboard, please make sure you follow the instructions below:

- Prepare a dry and stable working environment with sufficient lighting.
- Always disconnect the computer from power outlet before operation.
- Before you take the motherboard out from anti-static bag, ground yourself properly by touching any safely grounded appliance, or use grounded wrist strap to remove the static charge.
- Avoid touching the components on motherboard or the rear side of the board unless necessary. Hold the board on the edge, do not try to bend or flex the board.
- Do not leave any unfastened small parts inside the case after installation. Loose parts will cause short circuits which may damage the equipment.
- Keep the computer from dangerous area, such as heat source, humid air and water.
- The operating temperatures of the computer should be 0 to 45 degrees Celsius.
- To avoid injury, be careful of:
  - Sharp pins on headers and connectors
  - Rough edges and sharp corners on the chassis
  - Damage to wires that could cause a short circuit

## 1.2 Package Checklist

- Serial ATA Cable x4
- Rear I/O Panel for ATX Case x1
- User's Manual x1
- Fully Setup Driver DVD x1

---


**Note**

- » *The package contents may be different due to the sales region or models in which it was sold. For more information about the standard package in your region, please contact your dealer or sales representative.*
-

## 1.3 Specifications

Specifications	
CPU Support	Socket 1151 for 9th / 8th Gen Intel® Core, Pentium and Celeron processors Maximum CPU TDP (Thermal Design Power): 95Watt * 9th / 8th Generation Intel® Core™ Processor Family only support 300-Series. * Please refer to <a href="http://www.biostar.com.tw">www.biostar.com.tw</a> for CPU support list.
Chipset	INTEL® B365
Memory	Supports Dual Channel DDR4 1866/2133/2400/2666 4x DDR4 DIMM Memory Slot, Max. Supports up to 64 GB Memory Each DIMM supports non-ECC 4/8/16GB DDR4 module * Please refer to <a href="http://www.biostar.com.tw">www.biostar.com.tw</a> for Memory support list.
Storage	6x SATA III Connector (6Gb/s) : Supports AHCI, RAID 0, 1, 5, 10/ Intel® Rapid Storage Technology & Intel® Optane Technology 1x M.2 (M Key) : Supports PCI-E 3.0 x4 (32Gb/s) 1x M.2 (M Key) : Supports PCI-E 3.0 x4 (32Gb/s) & SATA III (6Gb/s) SSD * When using SATA SSD module on PCIE-M2_1 slot, the SATA_6 connector will be disabled. * SATA RAID only supports UEFI Mode.
LAN	Intel® I219V 10/ 100/ 1000 Mb/s auto negotiation, Half / Full duplex capability
Audio Codec	ALC887 7.1 Channels, High Definition Audio
USB	8x USB 3.1(Gen1) port (4 on rear I/Os and 4 via internal header) 6x USB 2.0 port (2 on rear I/Os and 4 via internal header)
Expansion Slots	3x PCIe 3.0 x1 Slot 2x PCIe 3.0 x16 Slot
Rear I/Os	1x PS/2 Mouse 1x PS/2 Keyboard 1x HDMI Port 1x VGA Port 1x LAN Port 2x USB 2.0 Port 4x USB 3.1(Gen1) Port 3x Audio Jack
Internal I/Os	6x SATA III Connector (6Gb/s) 2x USB 2.0 Header (each header supports 2 USB 2.0 ports) 2x USB 3.1(Gen1) Header (each header supports 2 USB 3.1(Gen1) ports) 1x 8-Pin Power Connector 1x 24-Pin Power Connector 1x CPU Fan Connector 3x System Fan Connector 1x Front Panel Header 1x Front Audio Header 1x Clear CMOS Header 1x COM Port Header 1x S/PDIF out Connector 2x LED Header (12V/5V)
Form Factor	ATX Form Factor, 305mm x 244mm
OS Support	Windows 10(64bit) * Biostar reserves the right to add or remove support for any OS with or without notice.

## 1.4 Rear Panel Connectors

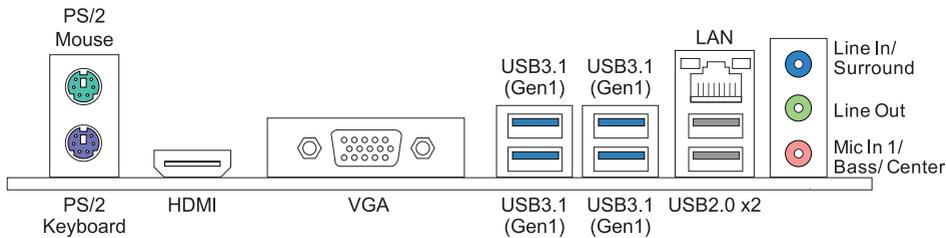


### Note

- » HDMI / VGA ports only work with an Intel® integrated Graphics Processor.
- » Maximum resolution  
HDMI: 4096 x 2160 @24Hz, compliant with HDMI 1.4  
VGA: 1920 x 1200 @60Hz
- » When using the front HD audio jack and plug in the headset, the rear sound will be automatically Disabled.
- » The motherboard supports two onboard display outputs only at the same time and the display output configuration can be selected in Intel graphics driver utility.
- » To configure 7.1-channel audio, you have to use a chassis with HD front panel audio module and enable the multi-channel audio feature through O.S. Audio Utility.

## The 2/ 4/ 5.1/ 7.1-channel configuration

Audio Port	2-channel	4-channel	5.1 channel	7.1 channel
Blue (Rear Panel)	Line In	Line In	Line In	Side Speaker Out
Green (Rear Panel)	Line Out	Front Speaker Out	Front Speaker Out	Front Speaker Out
Pink (Rear Panel)	Mic In	Mic In	Center/Subwoofer Out	Center/Subwoofer Out
Green (Front Panel)	Headphone	Rear Speaker Out	Rear Speaker Out	Rear Speaker Out

# 1.5 Motherboard Layout

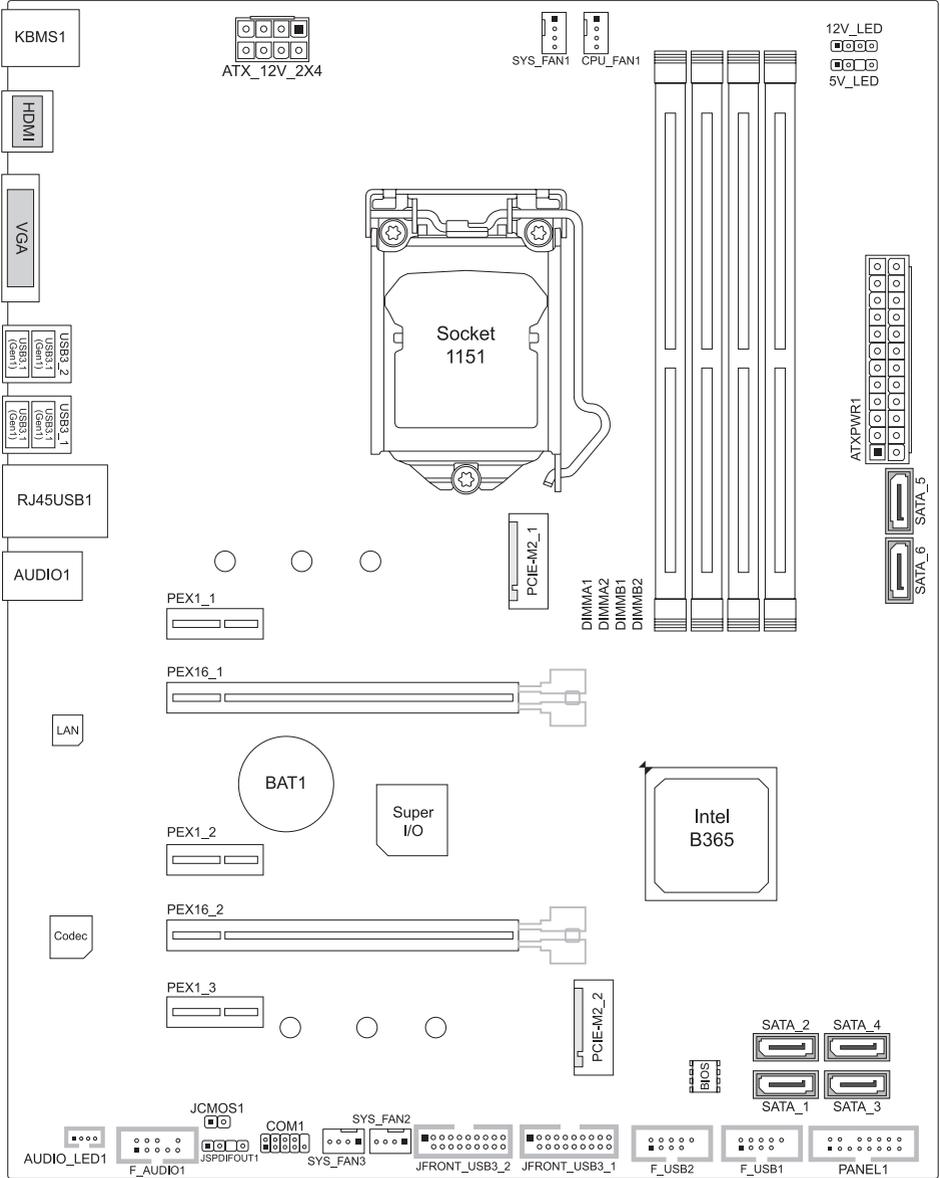


**Note**

» ■ represents the 1st pin.

## Chapter 2: Hardware installation

### 2.1 Install Central Processing Unit (CPU)


Step 1: Locate the CPU socket on the motherboard

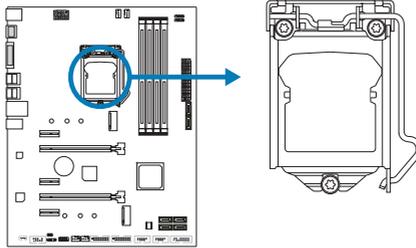


#### Note

- » Remove pin cap before installation, and make good preservation for future use. When the CPU is removed, cover the pin cap on the empty socket to ensure pin legs won't be damaged.
- » The motherboard might equip with two different types of pin cap. Please refer below instruction to remove the pin cap.


Step 2: Pull the socket locking lever out from the socket and then raise the lever up.

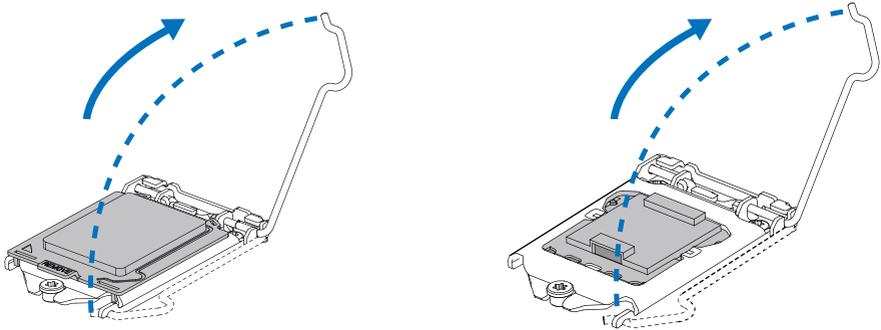


Step 3: Remove the Pin Cap.

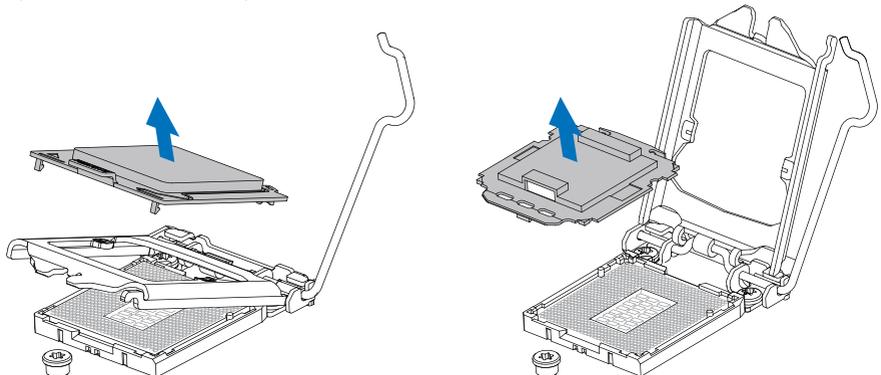

Step 4: Hold processor with your thumb and index fingers, oriented as shown. Align the notches with the socket. Lower the processor straight down without tilting or sliding the processor in the socket.

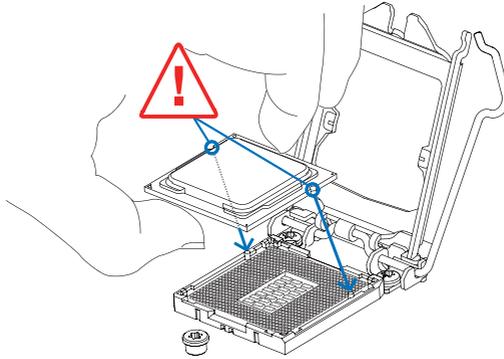

Step 5: Hold the CPU down firmly, and then lower the lever to locked position to complete the installation.

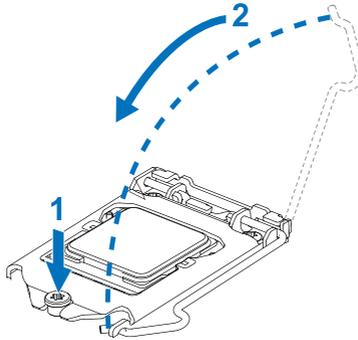


---

**Note**


- » Ensure that you install the correct CPU designed for LGA1151 socket.
  - » The CPU fits only in one correct orientation. Do not force the CPU into the socket to prevent damaging the CPU.
-

## 2.2 Install a Heatsink

Step 1: Place the CPU fan assembly on top of the installed CPU and make sure that the four fasteners match the motherboard holes. Orient the assembly and make the fan cable is closest to the CPU fan connector.

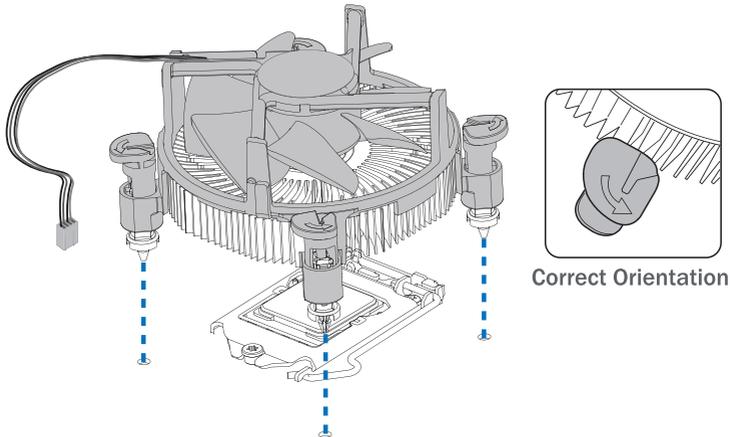

Step 2: Press down two fasteners at one time in a diagonal sequence to secure the CPU fan assembly in place. As each fastener locks into position a click should be heard.

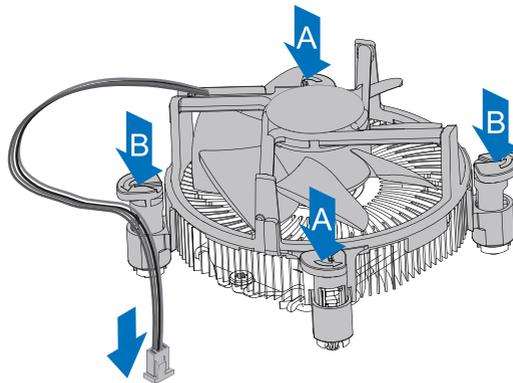


### Note

- » Apply the thermal interface material on the CPU before heatsink installation, if necessary.
- » Do not forget to connect the CPU fan connector.
- » For proper installation, please kindly refer to the installation manual of your CPU heatsink.

## 2.3 Connect Cooling Fans


These fan headers support cooling-fans built in the computer. The fan cable and connector may be different according to the fan manufacturer.

### CPU\_FAN1: CPU Fan Header

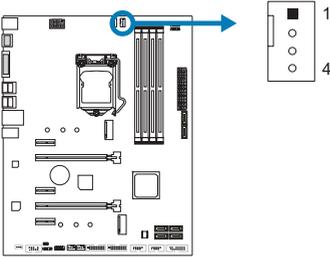


PWM Mode		DC Mode	
Pin	Assignment	Pin	Assignment
1	Ground	1	Ground
2	+12V	2	Voltage Control
3	Sense	3	Sense
4	Speed Control Signal	4	NC

### SYS\_FAN1: System Fan Header

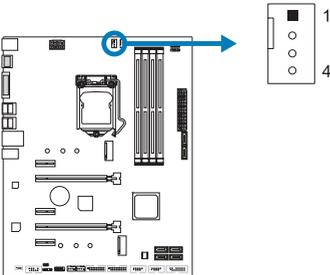

PWM Mode		DC Mode	
Pin	Assignment	Pin	Assignment
1	Ground	1	Ground
2	+12V	2	Voltage Control
3	Sense	3	Sense
4	Speed Control Signal	4	NC

### SYS\_FAN2/ 3: System Fan Header

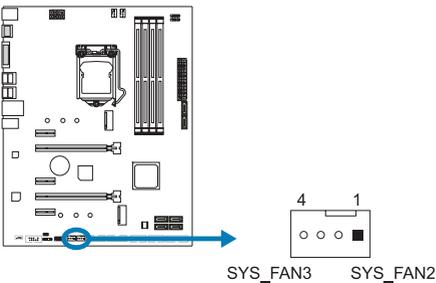



Pin	Assignment
1	Ground
2	+12V
3	FAN RPM rate sense
4	Smart Fan Control (By Fan)

#### Note


- » CPU\_FAN1, SYS\_FAN1/ 2/ 3 support 4-pin and 3-pin head connectors. When connecting with wires onto connectors, please note that the red wire is the positive and should be connected to pin#2, and the black wire is Ground and should be connected to pin#1(GND).

## 2.4 Install System Memory


### DDR4 Modules

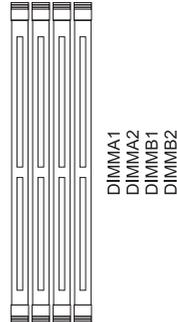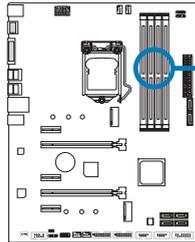

Step 1: Unlock a DIMM slot by pressing the retaining clips outward. Align a DIMM on the slot such that the notch on the DIMM matches the break on the slot.

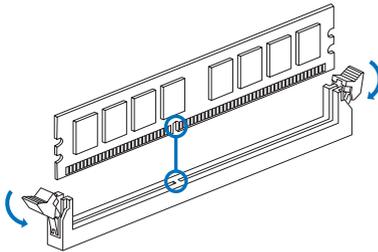

Step 2: Insert the DIMM vertically and firmly into the slot until the retaining clips snap back in place and the DIMM is properly seated.

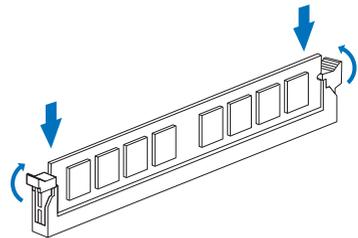

#### Note

» If the DIMM does not go in smoothly, do not force it. Pull it all the way out and try again.

### Memory Capacity

DIMM Socket Location	DDR4 Module	Total Memory Size
DIMMA1	4GB/8GB/16GB	Max is 64GB.
DIMMA2	4GB/8GB/16GB	
DIMMB1	4GB/8GB/16GB	
DIMMB2	4GB/8GB/16GB	

### Dual Channel Memory Installation

Please refer to the following requirements to activate Dual Channel function:  
Install memory module of the same density in pairs, shown in the table.

Dual Channel Status	DIMMA1	DIMMA2	DIMMB1	DIMMB2
Enabled	O	X	O	X
Enabled	X	O	X	O
Enabled	O	O	O	O

(O means memory installed, X means memory not installed.)

#### Note

» When installing more than one memory module, we recommend to use the same brand and capacity memory on this motherboard.

## 2.5 Expansion Slots

### PEX16\_1: PCI-Express Gen3 x16 Slot

- PCI-Express 3.0 compliant.
- Theoretical maximum bandwidth using two slots simultaneously is 16GB/s for each slot, a total of 32GB/s.

### PEX16\_2: PCI-Express Gen3 x16 Slot (x4 lanes)

- PCI-Express 3.0 compliant.
- Theoretical maximum bandwidth using two slots simultaneously is 4GB/s for each slot, a total of 8GB/s.


### PEX1\_1/ PEX1\_2/ PEX1\_3: PCI-Express Gen3 x1 Slots

- PCI-Express 3.0 compliant.
- Data transfer bandwidth up to 1GB/s per direction; 2GB/s in total.

### PCIE-M2\_1/ PCIE-M2\_2: M.2 (M Key) Slot

- The M.2 slot supports M.2 Type 2242/2260/2280 SSD module. When installing M.2 SSD module, please place the screw and hex pillar to correct position.
- Supports Intel® Rapid Storage Technology & Intel® Optane Technology.
- **PCIE-M2\_1** : Supports SATA III (6.0 Gb/s) module and PCI Express module up to Gen3 x4 (32Gb/s).

**PCIE-M2\_2** : Support PCI Express module up to Gen3 x4 (32Gb/s).

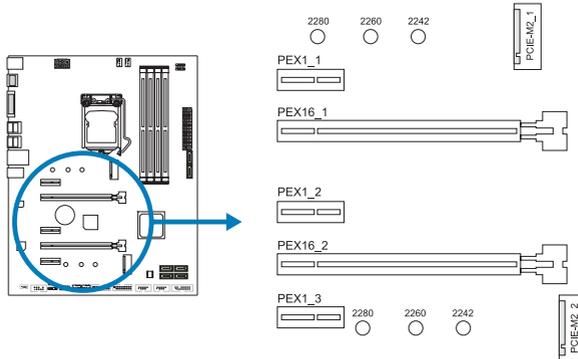

#### Note

» When using SATA SSD module on PCIE-M2\_1 slot, the SATA\_6 connector will be disabled.

## Install an Expansion Card

You can install your expansion card by following steps:

- Read the related expansion card's instruction document before install the expansion card into the computer.
- Remove your computer's chassis cover, screws and slot bracket from the computer.
- Place a card in the expansion slot and press down on the card until it is completely seated in the slot.
- Secure the card's metal bracket to the chassis back panel with a screw.
- Replace your computer's chassis cover.
- Power on the computer, if necessary, change BIOS settings for the expansion card.
- Install related driver for the expansion card.

## 2.6 Jumper & Switch Setting

The illustration shows how to set up jumpers. When the jumper cap is placed on pins, the jumper is “close”, if not, that means the jumper is “open”.

Pin opened



Pin closed




Pin 1-2 closed



### JCMOS1: Clear CMOS Jumper

The jumper allows users to restore the BIOS safe setting and the CMOS data. Please carefully follow the procedures to avoid damaging the motherboard.

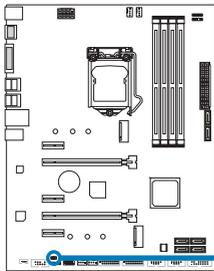

Pin 1-2 Open: Normal Operation (Default)



Pin 1-2 Close: Clear CMOS data


#### Clear CMOS Procedures:

1. Remove AC power line.
2. Set the jumper to “Pin 1-2 close”, you can use a metal object like a screwdriver to touch the two pins.
3. Wait for five seconds.
4. After clearing the CMOS values, be sure the jumper is “Pin 1-2 open”.
5. Power on the AC.
6. Load Optimal Defaults and save settings in CMOS.

## 2.7 Headers & Connectors

### ATXPWR1: ATX Power Source Connector


For better compatibility, we recommend to use a standard ATX 24-pin power supply for this connector. Make sure to find the correct orientation before plugging the connector.

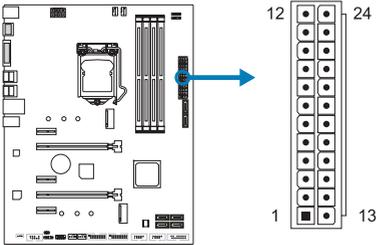

Pin	Assignment	Pin	Assignment
13	+3.3V	1	+3.3V
14	-12V	2	+3.3V
15	Ground	3	Ground
16	PS_ON	4	+5V
17	Ground	5	Ground
18	Ground	6	+5V
19	Ground	7	Ground
20	NC	8	PW_OK
21	+5V	9	Standby Voltage+5V
22	+5V	10	+12V
23	+5V	11	+12V
24	Ground	12	+3.3V

### ATX\_12V\_2X4: ATX Power Source Connector

The connector provides +12V to the CPU power circuit. If the CPU power plug is 4-pin, please plug it into Pin 1-2-5-6 of ATX\_12V\_2X4.

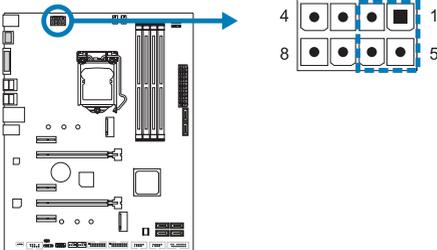


Pin	Assignment
1	+12V
2	+12V
3	+12V
4	+12V
5	Ground
6	Ground
7	Ground
8	Ground

#### ► Note

- » Before you power on the system, please make sure that both ATXPWR1 and ATX\_12V\_2X4 connectors have been plugged-in.
- » Insufficient power supplied to the system may result in instability or the peripherals not functioning properly. Use of a PSU with a higher power output is recommended when configuring a system with more power-consuming devices.

## PANEL1: Front Panel Header


This 16-pin header includes Power-on, Reset, HDD LED, Power LED, and speaker connection.

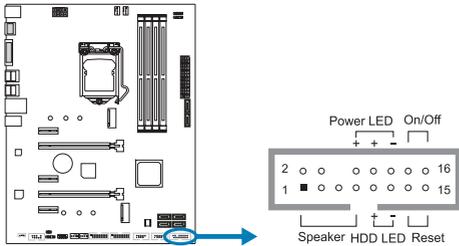

Pin	Assignment	Function	Pin	Assignment	Function
1	+5V	Speaker Connector	2	N/A	N/A
3	N/A		4	Ground	
5	N/A		6	N/A	
7	Speaker	Hard drive LED	8	Power LED (+)	Power LED
9	HDD LED (+)		10	Power LED (+)	
11	HDD LED (-)	Reset button	12	Power LED (-)	Power-on button
13	Ground		14	Power button	
15	Reset control		16	Ground	

## SATA\_1/\_2/\_3/\_4/\_5/\_6: Serial ATA Connectors

These connectors connect to SATA hard disk drives via SATA cables.

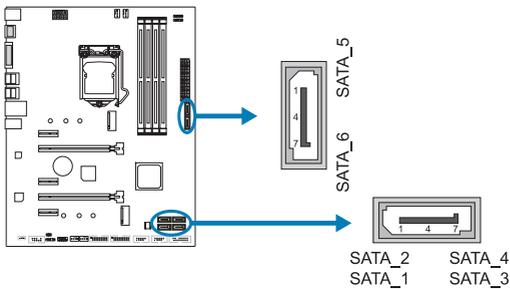


Pin	Assignment
1	Ground
2	TX+
3	TX-
4	Ground
5	RX-
6	RX+
7	Ground

### Note

» When using SATA SSD module on PCIe-M2\_1 slot, the SATA\_6 connector will be disabled.

## JFRONT\_USB3\_1/3\_2: Header for USB 3.1(Gen1) Ports at Front Panel


This header allows user to add additional USB ports on the PC front panel, and also can be connected with a wide range of external peripherals.

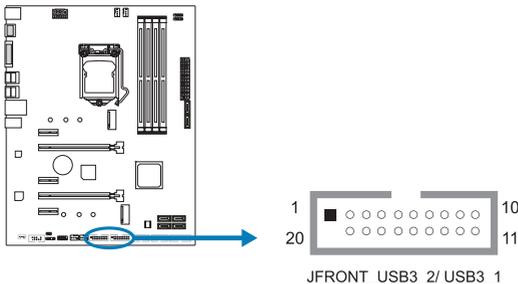

Pin	Assignment	Pin	Assignment
1	VBUS0	11	D2+
2	SSRX1-	12	D2-
3	SSRX1+	13	Ground
4	Ground	14	SSTX2+
5	SSTX1-	15	SSTX2-
6	SSTX1+	16	Ground
7	Ground	17	SSRX2+
8	D1-	18	SSRX2-
9	D1+	19	VBUS1
10	ID	20	Key

## F\_USB1/ 2: Header for USB 2.0 Ports at Front Panel


This header allows user to add additional USB ports on the PC front panel, and also can be connected with a wide range of external peripherals.

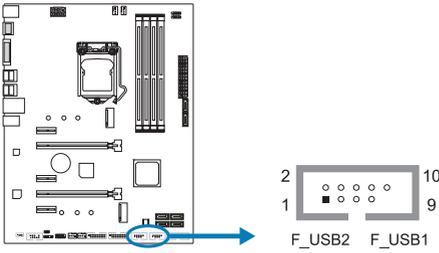

Pin	Assignment
1	+5V (fused)
2	+5V (fused)
3	USB-
4	USB-
5	USB+
6	USB+
7	Ground
8	Ground
9	Key
10	NC

## JSPDIFOUT1: Digital Audio-out Connector


The connector is for connecting the S/PDIF output bracket.

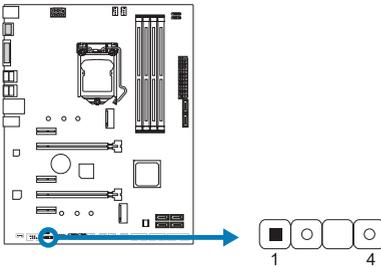

Pin	Assignment
1	Ground
2	SPDIF_OUT
3	NA
4	+5V

## F\_AUDIO1: Front Panel Audio Header

This header allows user to connect the chassis-mount front panel audio I/O which supports HD and AC'97 audio standards.

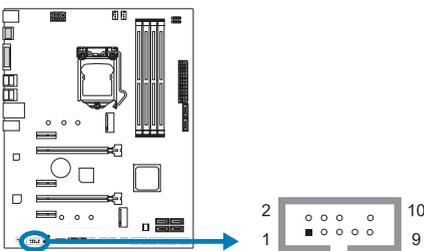


HD Audio		AC'97	
Pin	Assignment	Pin	Assignment
1	Mic Left in	1	Mic In
2	Ground	2	Ground
3	Mic Right in	3	Mic Power
4	GPIO	4	Audio Power
5	Right line in	5	RT Line Out
6	Jack Sense	6	RT Line Out
7	Front Sense	7	Reserved
8	Key	8	Key
9	Left line in	9	LFT Line Out
10	Jack Sense	10	LFT Line Out

### Note

- » It is recommended that you connect a high-definition front panel audio module to this connector to avail of the motherboard's high definition audio capability.
- » Please try to disable the "Front Panel Jack Detection" if you want to use an AC'97 front audio output cable. The function can be found via O.S. Audio Utility.

## COM1: Serial Port Header




The motherboard has a serial port header for connecting RS-232 Port.

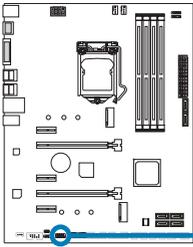

Pin	Assignment
1	Carrier detect
2	Received data
3	Transmitted data
4	Data terminal ready
5	Signal ground
6	Data set ready
7	Request to send
8	Clear to send
9	Ring indicator
10	Key

## 12V\_LED: RGB LED Device (5050 SMD) Header

This header provides 12V power and RGB control pins for RGB LED Device (5050 SMD).

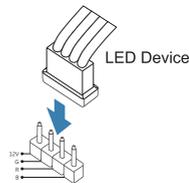

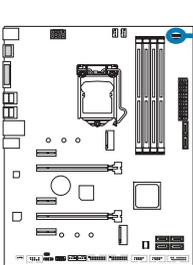


RGB LED Device Header  
(12V\_LED)

Pin	Cable Color	Assignment
1	12V (Black)	VCC12
2	G (Green)	LED_GREEN
3	R (Red)	LED_RED
4	B (Blue)	LED_BLUE

## 5V\_LED: Addressable RGB LED Device (WS2818B) Header

This header provides 5V power and Data control pins for RGB LED Device (WS2818B).

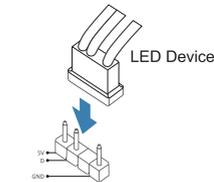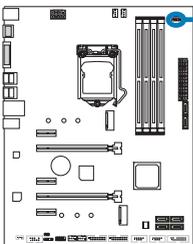

Addressable RGB LED Device Header  
(5V\_LED)

Pin	Assignment
1	VCC5
2	Data
3	N/A
4	GND


### Note

- » Ensure proper pin connecting to your LED device, wrong connection may damage your LED device or motherboard.
- » The 12V\_LED connector supports to 5050 RGB LED strips with the maximum power rating of 3A (12V).
- » The 5V\_LED connector supports up to 300 LEDs WS2818B individually Addressable RGB LED strips with the maximum power rating of 3A (5V).
- » Please use the Vivid LED DJ software to control the LEDs. For detailed software setting information, refer to chapter 3.3.

## 2.8 LEDs

### LEDs

Below LEDs are controlled by RACING GT EVO program. Please refer to Chapter 3.3 for more detail software setting.

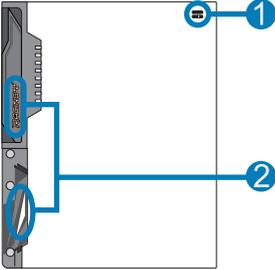


1. RGB LED Device Header (5V/12V)
2. Racing ARMOR LED



6. Select the proper BIOS file, and a message asking if you are sure to flash the BIOS file. Click “Yes” to start updating BIOS.



7. A dialog pops out after BIOS flash is completed, asking you to restart the system. Press the <Y> key to restart system.

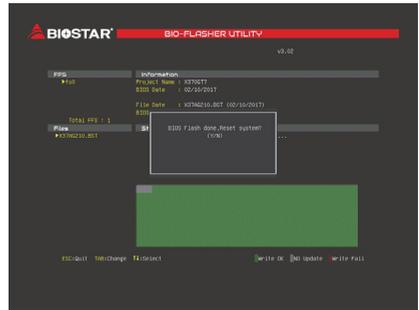

8. While the system boots up and the full screen logo shows up, press <DEL> key to enter BIOS setup.

After entering the BIOS setup, please go to the <Save & Exit>, using the <Restore Defaults> function to load Optimized Defaults, and select <Save Changes and Reset> to restart the computer. Then the BIOS Update is completed.


### **BIOS Update Utility (through the Internet)**

1. Installing BIOS Update Utility from the DVD Driver.
2. Please make sure the system is connected to the internet before using this function.


3. Launch BIOS Update Utility and click the “Online Update” button on the main screen.




4. An open dialog will show up to request your agreement to start the BIOS update. Click “Yes” to start the online update procedure.

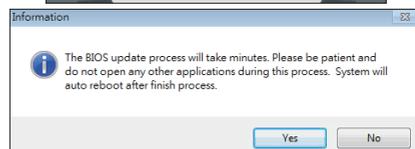


5. If there is a new BIOS version, the utility will ask you to download it. Click “Yes” to proceed.

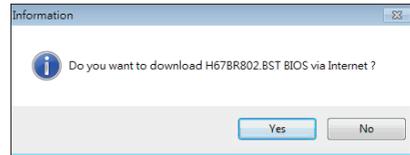

6. After the download is completed, you will be asked to program (update) the BIOS or not. Click “Yes” to proceed.

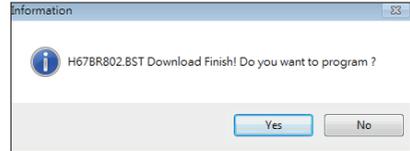

7. After the updating process is finished, you will be asked you to reboot the system. Click “OK” to reboot.

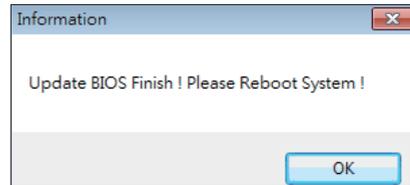

8. While the system boots up and the full screen logo shows up, press <DEL> key to enter BIOS setup.

After entering the BIOS setup, please go to the <Save & Exit>, using the <Restore Defaults> function to load Optimized Defaults, and select <Save Changes> and <Reset> to restart the computer. Then, the BIOS Update is completed.


### **BIOS Update Utility (through a BIOS file)**

1. Installing BIOS Update Utility from the DVD Driver.
2. Download the proper BIOS from <http://www.biostar.com.tw/>


3. Launch BIOS Update Utility and click the “Update BIOS” button on the main screen.




4. A warning message will show up to request your agreement to start the BIOS update. Click “OK” to start the update procedure.

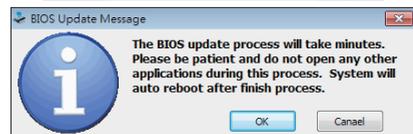

5. Choose the location for your BIOS file in the system. Please select the proper BIOS file, and then click on “Open”. It will take several minutes, please be patient.

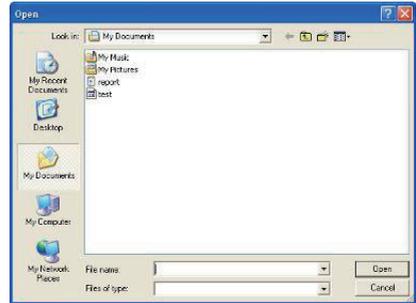


6. After the BIOS Update process is finished, click on “OK” to reboot the system.

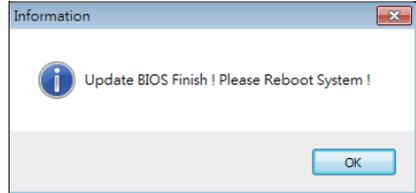

7. While the system boots up and the full screen logo shows up, press <DEL> key to enter BIOS setup. After entering the BIOS setup, please go to the <Save & Exit>, using the <Restore Defaults> function to load Optimized Defaults, and select <Save Changes and Reset> to restart the computer. Then, the BIOS Update is completed.

### **Backup BIOS**

Click the Backup BIOS button on the main screen for the backup of BIOS, and select a proper location for your backup BIOS file in the system, and click “Save”.

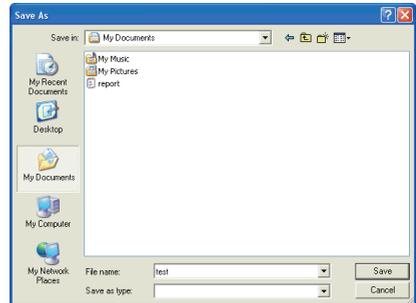

## 3.3 Software

### Installing Software

1. Insert the Setup DVD to the optical drive. The driver installation program would appear if the Auto-run function has been enabled.
2. Select Software Installation, and then click on the respective software title.
3. Follow the on-screen instructions to complete the installation.

### Launching Software

After the installation process is completed, you will see the software icon showing on the desktop. Double-click the icon to launch it.

#### Note

- » All the information and content about following software are subject to be changed without notice. For better performance, the software is being continuously updated.
- » The information and pictures described below are for your reference only. The actual information and settings on board may be slightly different from this manual.

### BIOScreen Utility

This utility allows you to personalize your boot logo easily. You can choose BMP as your boot logo so as to customize your computer.




Please follow the step-by-step instructions below to update boot logo:

- Load Image: Choose the picture as the boot logo.
- Transform: Transform the picture for BIOS and preview the result.
- Update Bios: Write the picture to BIOS Memory to complete the update.

### eHot-Line

eHot-Line is a convenient utility that helps you to contact with our Tech-Support system. This utility will collect the system information which is useful for analyzing the problem you may have encountered, and then send these information to our tech-support department to help you fix the problem.

\* represents important information that you must provide. Without this information, you may not be able to send out the mail.

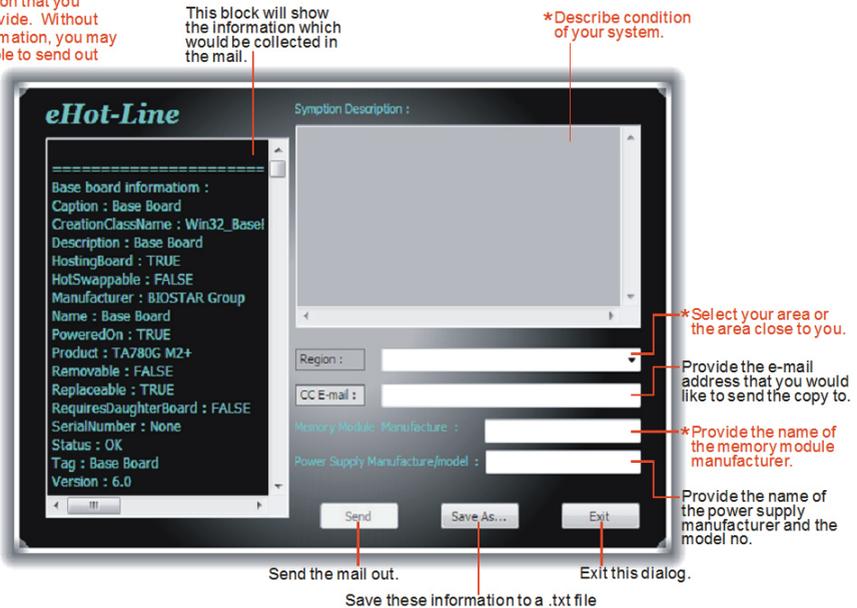

This block will show the information which would be collected in the mail.

\* Describe condition of your system.

\* Select your area or the area close to you.

Provide the e-mail address that you would like to send the copy to.

\* Provide the name of the memory module manufacturer.

Provide the name of the power supply manufacturer and the model no.

Send the mail out.

Exit this dialog.


Save these information to a .txt file

After filling up this information, click “Send” to send the mail out. A warning dialog would appear asking for your confirmation; click “Send” to confirm or “Do Not Send” to cancel.


If you want to save this information to a .txt file, click “Save As...” and then you will see a saving dialog appears asking you to enter file name.



Enter the file name and then click “Save”. Your system information will be saved to a .txt file.

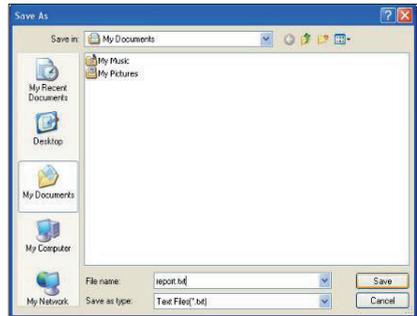

Open the saved .txt file, you will see your system information including motherboard/BIOS/CPU/video/device/OS information. This information is also concluded in the sent mail.

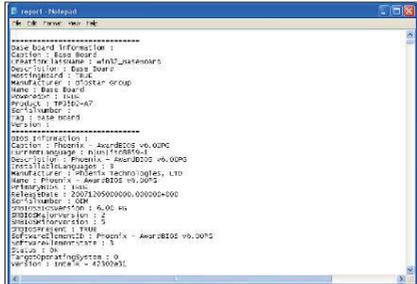

#### Note

- » Before you use this utility, please set Outlook Express as your default e-mail client application program.
- » We will not share customer's data with any other third parties, so please feel free to provide your system information while using eHot-Line service.
- » If you are not using Outlook Express as your default e-mail client application, you may need to save the system information to a .txt file and send the file to our tech support with other e-mail application. Go to the following website <http://www.biostar.com.tw/app/en/about/contact.php> for getting our contact information.

## RACING GT EVO


RACING GT EVO is an easy-to-use program that integrates several BIOSTAR utilities and allows users to configure these utilities simultaneously and seamlessly.

### Note

» Menu contents of RACING GT EVO will be different slightly, depending on different motherboard of users' computers.

## System Information

This System Information tab provides you an overview of the basic system information.

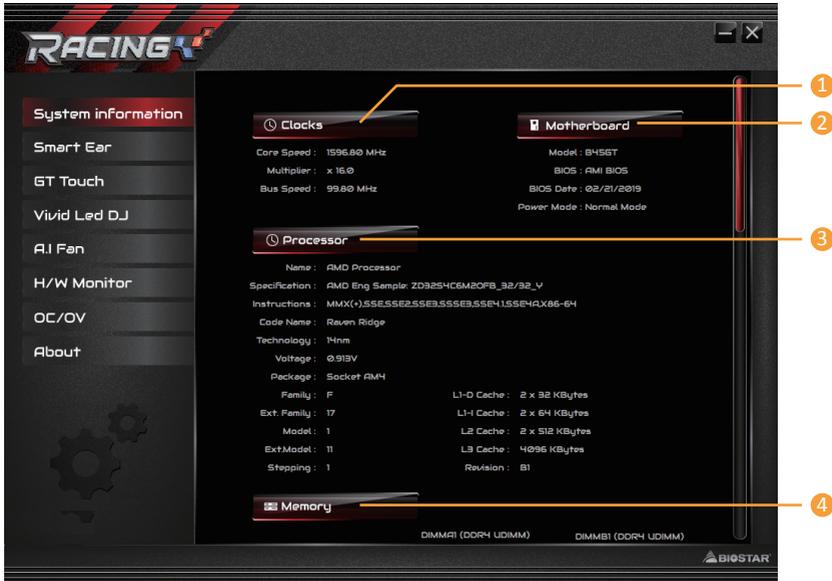

- 1. Clocks:** Shows core speed, multiplier and bus speed.
- 2. Motherboard:** Shows motherboard information.
- 3. Processor:** Shows CPU information.
- 4. Memory:** Shows memory information.

## SmartEAR

Smart EAR allows you to control system volume and adjust impedance setting (Low/High Gain) to optimize your headphone performance. You can easily enjoy high-quality and awesome sound.

Requirements:

1. A chassis with front audio output jacks
2. An earphone or a headphone
3. Windows 7 (32/64bit)/ 8.1(64bit)/ 10(64bit) operation system

Installation Guide:

1. Make sure the front audio cable of the chassis connected to the front audio header of the motherboard properly.
2. Install the RACING GT EVO program from the driver DVD.
3. Connect the earphone or headphone to the front audio jack of the chassis or audio lineout port of rear I/Os.

» If you want to use an AC'97 front audio output cable, please disable the "Front Panel Jack Detection" setting. This setting can be found via O.S. Audio Utility.




**1. Volume Control Knob:** The volume can be finely adjusted by turning the knob either clockwise or anti-clockwise to increase or decrease system volume accordingly.

**2. Mute:** To disable system sound.

**3. High/Low Gain Switch:** Keep the gain switch to low for low impedance headphone and set to high for high impedance headphone.

## GT Touch

GT Touch allows you to adjust Normal, ECO and Sport mode when running RACING GT EVO program in Windows environment.

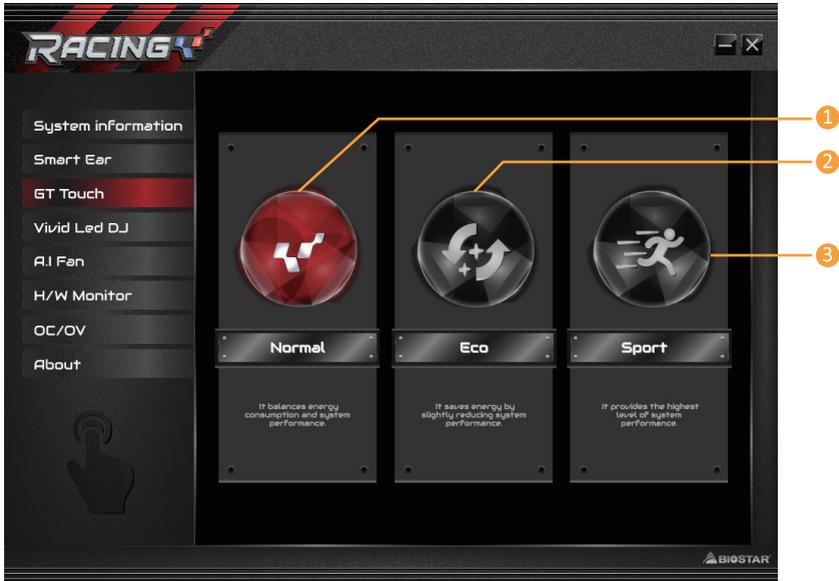

- 1. Normal Mode:** It balances energy consumption and system performance.
- 2. ECO Mode:** It saves energy by slightly reducing system performance.
- 3. Sport Mode:** It provides the highest level of system performance.

## Vivid LED DJ

Vivid LED DJ can adjust your color scheme of Racing ARMOR , RGB LED Device.



**1. LED COMMANDER:** Allows you to select the LED mode.

- **Default :** Default LED illuminations. (Blue light)
- **RAZER :** Allows you to connect to the RAZER app to sync the motherboard lights.
  - » *When using RAZER mode, turn off RACING GT Software and LED illumination will return to the default state.*
  - » *RAZER mode is to achieve LED illumination synchronization through the connection with RAZER software.*
  - » *RAZER software must be installed to use RAZER Mode. RAZER related information please go to RAZER official website download.*
  - » *When using RAZER mode, it must be used with RAZER related devices and peripheral devices.*

- **RGB Sync :** Allows you to synchronize the LED Type item settings.

**2. LED Type:** Select the LED lighting blocks.

- **System :** System LED illuminations. (Racing ARMOR)
- **12V LED :** The 12V LED illumination. (12V\_LED Device)
- **5V LED :** The 5V LED illumination. (5V\_LED Device)
- **Memory Sync :** The RGB Audio LED illumination. (Memory LED)

**3. ON/OFF:** To enable or disable VIVID LED function.

**4. ON/OFF:** Allows you to enable or disable LED of a single item.

**5. Color Palette:** Allows to you choose specific color of the LEDs.

**6. LED Brightness Bar:** Allows you to adjust the LED brightness.

**7. Auto:** LEDs will Automatically change the Color Palette and LED Brightness.

- » *If you select Auto mode, the Color Palette and LED Brightness Bar will disabled.*

**8. LED SPARKLE:** Allows to you choose sparkle of the LEDs.

- **Permanent:** LEDs are constantly lit.
- **Shine:** LEDs flash at a specific frequency.
- **Breath:** LEDs gradually flash on and off.
- **Shine & Music:** LEDs will flash according the music played on your system.

» *Please make sure your speaker or earphone is properly connected to audio jack before using RACING GT EVO program.*

- **Meteor:** LEDs slide at a specific frequency.
- **Wave:** LEDs are presented in a water wave rhythm.
- **Starry sky:** LEDs flicker at a specific rhythm.
- **Lightning:** LEDs flash and slide at a specific frequency.
- **Rainbow:** LEDs lights to dazzling colorful rhythm.
- **Aurora:** LEDs shows soft light and flickers lightly.

**9. High/Low Speed Switch:** Allows you to control the flicker speed.

---

» **Note**

» *With VIVID LED DJ users can control the four LED light zones independently with different flashing modes (LED SPARKLE).*

---

## A.I Fan

A.I FAN utility smartly allows PC users to have more customizability of fan operating modes and automatically detects different temperatures to make fan operating at defined speed for optimal cooling performance.



**1. Temperature:** Shows the current CPU and system temperature.

**2. CPU1/2 RPM & SYSTEM1/2/3/4 RPM:** Click button to set the status value of CPU and system fan.

**3. Default:** Restore defaults your changes value of a single item.

**4. PWM/Temperature Panel:** According to the fan PWM value corresponding to CPU and system temperature to adjust the fan speed.

» *Allows you to adjust according to your preferences.*

**5. User Selection:** Sets the fan property controls the actual selection operation.

- **Auto:** Allows you to adjust the Automatic detection Mode.
- **DC:** Allows you to adjust the Direct Current (DC) Mode.
- **PWM:** Allows you to adjust the Pulse Width Modulation (PWM) Mode.

**6. Control Mode:** Allows you to control mode of the fans.

- **Aggressive:** Enable Aggressive mode.
- **Quiet:** Enable Quiet mode.
- **Manual:** Enable Manual mode.
- **Full on:** Enable Full On mode.

## H/W Monitor


The HW Monitor tab allows you to monitor hardware voltage, fan speed, and temperature.



- 1. CPU Temperature/System Temperature:** Shows the current CPU and system temperature.
- 2. Fan:** Shows the current fans' speed.
- 3. Voltage:** Shows the current voltages of CPU and memory.

## OC/OV

The OC/OV tab allows you to save or load the OC/OV setting profiles, change system frequency and voltage settings.

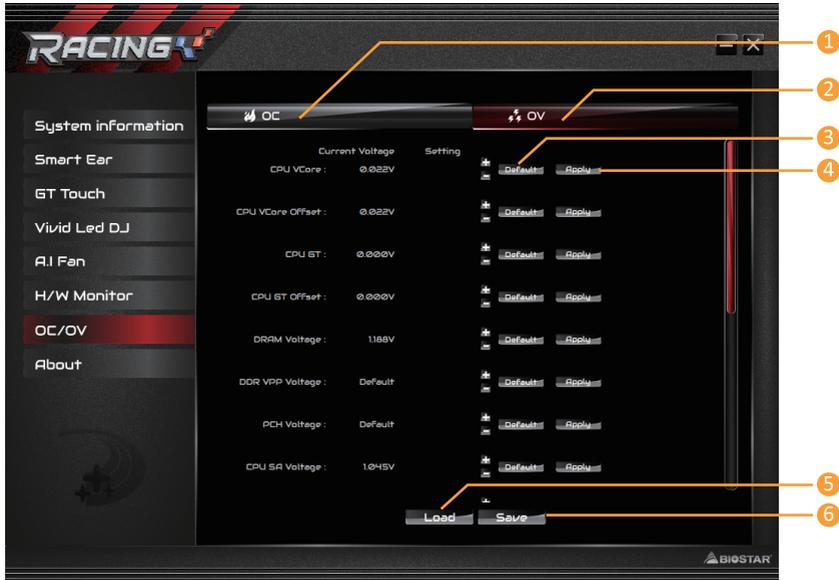

**1. OC:** Allows you to adjust overclocking profile values.

**2. OV:** Allows you to adjust voltage profile values.

**3. Default:** Restore defaults your changes.

**4. Apply:** Apply your changes.

**5. Load:** Load the profile values from the file.

**6. Save:** Store the profile values for future use.

### Note

- » Not all types of CPU perform above overclock setting ideally; the difference will be based on the selected CPU model.
- » Overclock is an optional process, but not a “must-do” process; it is not recommended for inexperienced users. Therefore, we will not be responsible for any hardware damage which may be caused by overclocking. We also would not guarantee any overclocking performance.

### About

The About menu to display the Racing GT EVO Utility version information.




## Chapter 4: Useful help

### 4.1 Driver Installation

After you installed your operating system, please insert the Fully Setup Driver DVD into your optical drive and install the driver for better system performance.

You will see the following window after you insert the DVD

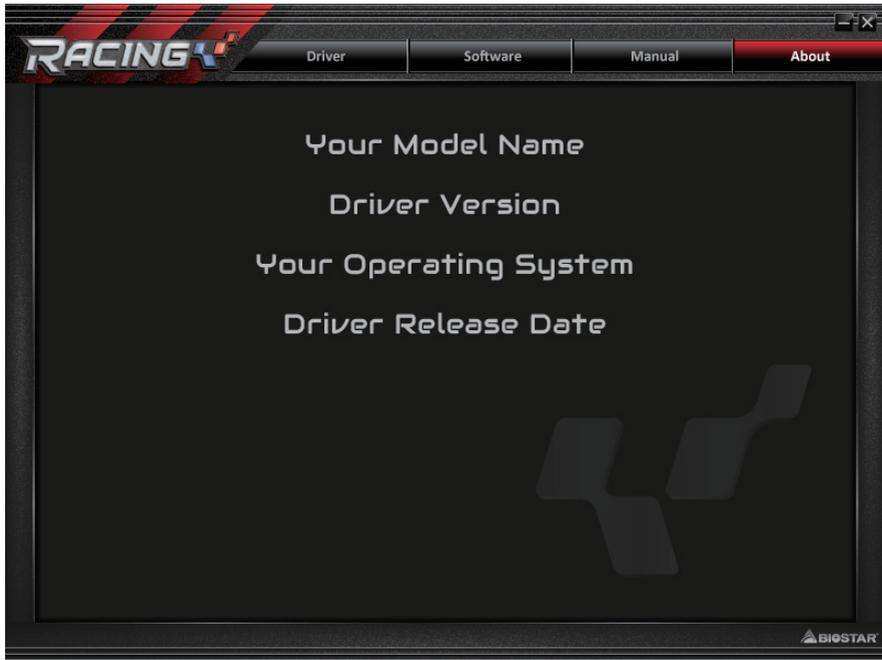

The setup guide will auto detect your motherboard and operating system.

#### **A. Driver Installation**

To install the driver, please click on the Driver icon. The setup guide will list the compatible driver for your motherboard and operating system. Click on each device driver to launch the installation program.

#### **B. Software Installation**

To install the software, please click on the Software icon. The setup guide will list the software available for your system, click on each software title to launch the installation program.

#### **C. Manual**

Aside from the paperback manual, we also provide manual in the Driver DVD. Click on the Manual icon to browse for available manual.

#### **Note**

- » *If this window didn't show up after you insert the Driver DVD, please use file browser to locate and execute the file SETUP.EXE under your optical drive.*
- » *You will need Acrobat Reader to open the manual file. Please download the latest version of Acrobat Reader software from <http://get.adobe.com/reader/>*

## 4.2 AMI BIOS Beep Code

### Boot Block Beep Codes

Number of Beeps	Description
Continuing	Memory sizing error or Memory module not found

### POST BIOS Beep Codes

Number of Beeps	Description
1	Success booting.
8	Display memory error (system video adapter)

## 4.3 AMI BIOS post code

Code	Description
10	PEI Core is started
11	Pre-memory CPU initialization is started
15	Pre-memory North Bridge initialization is started
19	Pre-memory South Bridge initialization is started
2B	Memory initialization. Serial Presence Detect (SPD) data reading
2C	Memory initialization. Memory presence detection
2D	Memory initialization. Programming memory timing information
2E	Memory initialization. Configuring memory
2F	Memory initialization (other).
31	Memory Installed
32	CPU post-memory initialization is started
33	CPU post-memory initialization. Cache initialization
34	CPU post-memory initialization. Application Processor(s) (AP) initialization
35	CPU post-memory initialization. Boot Strap Processor (BSP) selection
36	CPU post-memory initialization. System Management Mode (SMM) initialization
37	Post-Memory North Bridge initialization is started
3B	Post-Memory North Bridge initialization (North Bridge module specific)
4F	DXE IPL is started
60	DXE Core is started
F0	Recovery condition triggered by firmware (Auto recovery)
F1	Recovery condition triggered by user (Forced recovery)
F2	Recovery process started
F3	Recovery firmware image is found
F4	Recovery firmware image is loaded
E0	S3 Resume is started (S3 Resume PPI is called by the DXE IPL)
E1	S3 Boot Script execution
E2	Video repost
E3	OS S3 wake vector call
60	DXE Core is started
61	NVRAM initialization
62	Installation of the South Bridge Runtime Services
63	CPU DXE initialization is started
68	PCI host bridge initialization
69	North Bridge DXE initialization is started
6A	North Bridge DXE SMM initialization is started

Code	Description
70	South Bridge DXE initialization is started
71	South Bridge DXE SMM initialization is started
72	South Bridge devices initialization
78	South Bridge DXE Initialization (South Bridge module specific)
79	ACPI module initialization
90	Boot Device Selection (BDS) phase is started
91	Driver connecting is started
92	PCI Bus initialization is started
93	PCI Bus Hot Plug Controller Initialization
94	PCI Bus Enumeration
95	PCI Bus Request Resources
96	PCI Bus Assign Resources
97	Console Output devices connect
98	Console input devices connect
99	Super IO Initialization
9A	USB initialization is started
9B	USB Reset
9C	USB Detect
9D	USB Enable
A0	IDE initialization is started
A1	IDE Reset
A2	IDE Detect
A3	IDE Enable
A4	SCSI initialization is started
A5	SCSI Reset
A6	SCSI Detect
A7	SCSI Enable
A8	Setup Verifying Password
A9	Start of Setup
AB	Setup Input Wait
AD	Ready To Boot event
AE	Legacy Boot event
AF	Exit Boot Services event
B0	Runtime Set Virtual Address MAP Begin
B1	Runtime Set Virtual Address MAP End
B2	Legacy Option ROM Initialization
B3	System Reset
B4	USB hot plug
B5	PCI bus hot plug
B6	Clean-up of NVRAM
B7	Configuration Reset (reset of NVRAM settings)

## 4.4 Troubleshooting

Probable	Solution
<ol style="list-style-type: none"> <li>1. There is no power in the system. Power LED does not shine; the fan of the power supply does not work.</li> <li>2. Indicator light on keyboard does not shine.</li> </ol>	<ol style="list-style-type: none"> <li>1. Make sure power cable is securely plugged in.</li> <li>2. Replace cable.</li> <li>3. Contact technical support.</li> </ol>
System is inoperative. Keyboard lights are on, power indicator lights are lit, and hard drives are running.	Using even pressure on both ends of the DIMM, press down firmly until the module snaps into place.
System does not boot from a hard disk drive, but can be booted from optical drive.	<ol style="list-style-type: none"> <li>1. Check cable running from disk to disk controller board. Make sure both ends are securely plugged in; check the drive type in the standard CMOS setup.</li> <li>2. Backing up the hard drive is extremely important. All hard disks are capable of breaking down at any time.</li> </ol>
System only boots from an optical drive. Hard disks can be read, applications can be used, but system fails to boot from a hard disk.	<ol style="list-style-type: none"> <li>1. Back up data and applications files.</li> <li>2. Reformat the hard drive. Re-install applications and data using backup disks.</li> </ol>
Screen message shows "Invalid Configuration" or "CMOS Failure."	Review system's equipment. Make sure correct information is in setup.
System cannot boot after user installs a second hard drive.	<ol style="list-style-type: none"> <li>1. Set master/slave jumpers correctly.</li> <li>2. Run SETUP program and select correct drive types. Call the drive manufacturers for compatibility with other drives.</li> </ol>

### **CPU Overheated**

If the system shutdown automatically after power on system for seconds, that means the CPU protection function has been activated.

When the CPU is over heated, the motherboard will shutdown automatically to avoid a damage of the CPU, and the system may not power on again.

In this case, please double check:

1. The CPU cooler surface is placed evenly with the CPU surface.
2. CPU fan is rotated normally.
3. CPU fan speed is fulfilling with the CPU speed.

After confirmed, please follow steps below to relief the CPU protection function.


1. Remove the power cord from power supply for seconds.
2. Wait for seconds.
3. Plug in the power cord and boot up the system.

Or you can:

1. Clear the CMOS data. (See "Close CMOS Header: JCMOS1" section)
2. Wait for seconds.
3. Power on the system again.

## 4.5 RAID Functions


### RAID Definitions

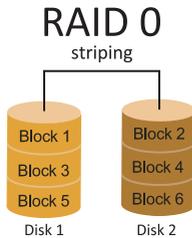

In a RAID 0 system data are split up in blocks that get written across all the drives in the array. By using multiple disks (at least 2) at the same time, this offers superior I/O performance. This performance can be enhanced further by using multiple controllers, ideally one controller per disk.

#### Features and Benefits

- Drives: Minimum 2, and maximum is up to 6 or 8. Depending on the platform.
- Uses: Intended for non-critical data requiring high data throughput, or any environment that does not require fault tolerance.
- Benefits: provides increased data throughput, especially for large files. No capacity loss penalty for parity.
- Drawbacks: Does not deliver any fault tolerance. If any drive in the array fails, all data is lost.
- Fault Tolerance: No.
- Total Capacity: (Minimal. HDD Capacity) x (Connected HDDs Amount)

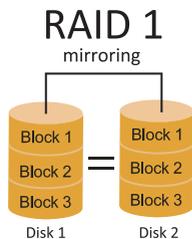


Data are stored twice by writing them to both the data disk (or set of data disks) and a mirror disk (or set of disks) . If a disk fails, the controller uses either the data drive or the mirror drive for data recovery and continues operation. You need at least 2 disks for a RAID 1 array.

#### Features and Benefits

- Drives: Minimum 2, and maximum is 2.
- Uses: RAID 1 is ideal for small databases or any other application that requires fault tolerance and minimal capacity.
- Benefits: Provides 100% data redundancy. Should one drive fail, the controller switches to the other drive.
- Drawbacks: Requires 2 drives for the storage space of one drive. Performance is impaired during drive rebuilds.
- Fault Tolerance: Yes.

## RAID 10 (1+0)

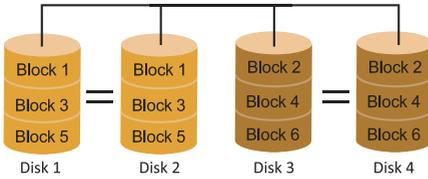


RAID 10 combines the advantages (and disadvantages) of RAID 0 and RAID 1 in one single system. It provides security by mirroring all data on a secondary set of disks (disk 3 and 4 in the drawing below) while using striping across each set of disks to speed up data transfers.

### Features and Benefits

- Drives: Minimum 4, and maximum is 6 or 8, depending on the platform.
- Benefits: Optimizes for both fault tolerance and performance, allowing for automatic redundancy. May be simultaneously used with other RAID levels in an array, and allows for spare disks.
- Drawbacks: Requires twice the available disk space for data redundancy, the same as RAID level 1.
- Fault Tolerance: Yes.

## RAID 5

parity across disks

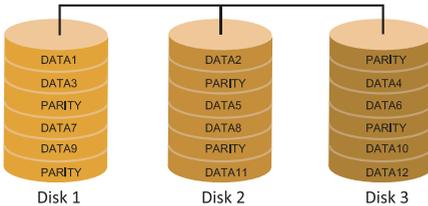

A RAID 5 array can withstand a single disk failure without losing data or access to data. Although RAID 5 can be achieved in software, a hardware controller is recommended. Often extra cache memory is used on these controllers to improve the write performance.

### Features and Benefits

- Drives: Minimum 3.
- Uses: RAID 5 is recommended for transaction processing and general purpose service.
- Benefits: An ideal combination of good performance, good fault tolerance, and high capacity and storage efficiency.
- Drawbacks: Individual block data transfer rate same as a single disk. Write performance can be CPU intensive.
- Fault Tolerance: Yes.

### Note

- » For more details settings about Intel® Rapid Storage Technology (Intel® RST), please visit [http://www.intel.com/p/en\\_US/support/highlights/chpsts/imsm](http://www.intel.com/p/en_US/support/highlights/chpsts/imsm)
- » PCI-E Storage only supports RAID 0, 1 & 5.
- » SATA RAID only supports UEFI Mode.

## 4.6 Intel® Optane™ Technology (powered by 3D XPoint memory)

With Intel® Optane™ technology you can unleash the power of your processor instead of it working at a fraction of its power. Eliminating that bottleneck requires better storage memory that is fast, inexpensive, and non-volatile. Intel® Optane technology has the potential to revolutionize big data, high-performance computing, virtualization, storage, cloud, gaming, and many other applications.

### Features and Benefits :

- Massive in-memory data base
- Fast system recovery
- Low latency
- High endurance

### Requirement for Intel® Optane Introduction :

- Intel® Optane Memory or Storage.
- Intel® 7th/ 8th/ 9th generation core CPU.
- Install Intel® Optane Memory or Storage in the port that supports Intel® Optane technology. (Reference Page 4 for detail)
- Install Intel® Rapid Storage Technology Driver and follow the instructions to enable Intel® Optane Technology.
- In some cases, Intel Optane Technology will not be available if UEFI OS is not installed.

## APPENDIX I: Specifications in Other Languages

### Arabic

المواصفات	
المأخذ 1151 للمعالج ايه إم دي Intel® Core / Pentium / Celeron (الجيل 9 / 8) الحد الأقصى للطاقة الحرارية في تصميم المعالج (TDP – thermal design power) : 95 واط. * تدعم الجيل 9/8 من Intel® كور™ عائلة المعالج 300 سلسلة فقط. * يرجى الرجوع إلى الموقع <a href="http://www.biostar.com.tw">www.biostar.com.tw</a> لقائمة دعم المعالج CPU.	قاعدة وحدة المعالجة المركزية
INTEL® B365	مجموعة الشرائح
تدعم قناة مزدوجة دي. دي. ار. DDR4 1866/2133/2400/2666 4x دي. دي. ار. DDR4 فتحات الذاكرة المزدوجة DIMM، تتحمل كحد أقصى 64 جيجابايت ذاكرة كل فتحة مزدوجة DIMM تتحمل دون ECC 16/8/4 جيجابايت دي. دي. ار. DDR4 * يرجى الرجوع إلى الموقع <a href="http://www.biostar.com.tw">www.biostar.com.tw</a> لقائمة دعم الذاكرة.	الذاكرة
وصلة 6x ساتا SATAIII(6Gb/s) : تدعم RAID 10 / 5 / 1 / 0 AHCI, Intel® Rapid Storage Technology / Intel® Optane Technology & x1 فتحة M.2 (M Key) : تدعم 4 x 3.0 Gb/s PCI-E x1 فتحة M.2 (M Key) : تدعم 4 x 3.0 Gb/s SATA III & (6.0Gb/s) SSD * عند استخدام وحدة SATA SSD على فتحة M2_1 PCI-E ، سيتم تعطيل موصل SATA_6 SATA RAID وضع فقط.	التخزين
Intel® I219V 1000 / 100 / 10 ميجابايت / الثانية ، تحديد تلقائي ، النصف / القدرة القصوى المزدوجة	شبكة محلية LAN
ALC887 7.1 قنوات عالية الدقة	التعزيز الصوتي
منافذ 8 x ناقل متسلسل عام USB 3.1 (Gen1) 4 في المداخل والمخارج الخلفية و 4 من خلال الموزع الداخلي ) منافذ 6 x ناقل متسلسل عام USB 2.0 (2 في المداخل والمخارج الخلفية و 4 من خلال الموزع الداخلي )	ناقل متسلسل عام USB
3 x فتحة منفذ الملحقات الإضافية PCI-E 3.0 x 1 2 x فتحة منفذ الملحقات الإضافية PCI-E 3.0 x 16	فتحات التوسع
1 x لوحة المفاتيح للكمبيوتر 1 x PS/2 الفأرة فتحة توصيل عدد 1 واجهة مرئية رقمية HDMI فتحة توصيل عدد 1 واجهة مرئية رقمية VGA فتحة لتوصيل عدد 1 الشبكة المحلية LAN فتحة توصيل عدد 2 ناقل متسلسل عام USB 2.0 فتحة توصيل عدد 4 ناقل متسلسل عام USB 3.1 (Gen1) فتحة توصيل عدد 3 جاك للصوت	المداخل والمخارج الخلفية
وصلة 6x ساتا SATA III (6Gb/s) موزع 2 x ناقل متسلسل عام USB 2.0 ( كل موزع يتحمل فتحتين ناقل متسلسل عام USB 2.0 ) موزع 2 x ناقل متسلسل عام USB 3.1 (Gen1) ( كل موزع يتحمل فتحتين ناقل متسلسل عام USB 3.1 (Gen1) ) وصلة للطاقة 1 x 8 دبائيس وصلة للطاقة 1 x 24 دبوس وصلة 1 x مروحة تبريد وحدة المعالجة المركزية وصلة 3 x مرواح تبريد المنظومة موزع 1 x اللوحة الأمامية موزع 1 x الصوت الأمامي موزع 1 x Clear CMOS موزع 1 x فتحة تسلسلية وصلة 1 x خارجية S/PDIF سوني فيليبس الواجهة الرقمية موزع 2 x LED (5V/12V)	المداخل والمخارج الداخلية
عامل الشكل 305مم x 244 مم	عامل الشكل
ويندوز (64bit) 10 * بيوستار BIOSTAR تحتفظ بحق إضافة أو إزالة الدعم لأي نظام تشغيل مع أو بدون أضرار.	أنظمة التشغيل المدعومة

## German

Spezifikationen	
CPU-Unterstützung	<p>Connection 1151 for the 9th / 8th Intel® Core, Pentium and Celeron processors            Maximale CPU TDP (Thermal Design Power): 95 Watt            * 9. / 8. Generation Intel® Core™ Prozessor Familie unterstützt nur 300-Serie            * Bitte konsultieren Sie <a href="http://www.biostar.com.tw">www.biostar.com.tw</a> für CPU-Unterstützungsliste</p>
Chipset	INTEL® B365
Festplattenspeicher	<p>Unterstützt zweikanaliges DDR4 1866/2133/2400/2666            4x DDR4 DIMM-SpeicherSlot, Max. Unterstützung bis zu 64 GB-Speicher            Jedes DIMM unterstützt nicht-ECC 4/8/16 GB DDR4-Module            * Bitte konsultieren Sie <a href="http://www.biostar.com.tw">www.biostar.com.tw</a> für Speicherunterstützung Liste.</p>
Arbeitsspeicher	<p>6x SATA III-Verbindung (6Gb/s) :            Unterstützt AHCI, RAID 0, 1, 5, 10/ Intel® Rapid Storage Technology &amp; Intel® Optane Technology            1x M.2 (M Key) : Unterstützt PCI-E 3.0 x4 (32Gb/s)            1x M.2 (M Key) : Unterstützt PCI-E 3.0 x4 (32Gb/s) &amp; SATA III (6Gb/s) SSD            * Bei Verwendung des SATA-SSD-Moduls im PCIe-M2_1-Steckplatz wird der SATA_6-Anschluss deaktiviert.            * SATA RAID unterstützt nur den UEFI-Modus.</p>
LAN	<p>Intel® I219V            10/ 100/ 1000 Mb Auto-Negotiation, Halb- / Voll-Duplex-fähig</p>
Audio-Codec	<p>ALC887            7.1 Kanäle, HD-Audio</p>
USB	<p>8x USB 3.1(Gen1)-Port (4 hintere I/Os und 4 via interne Header)            6x USB 2.0-Port (2 hintere I/Os und 4 via interne Header)</p>
Erweiterungsanschlüsse	<p>3x PCIe 3.0 x1-Slot            2x PCIe 3.0 x16-Slot</p>
Hintere I/Os	<p>1x PS/2-Maus            1x PS/2-Keyboard            1x HDMI-Port            1x VGA-Port            1x LAN-Port            2x USB 2.0-Port            4x USB 3.1(Gen1)-Port            3x Audio Jack</p>
Interne I/Os	<p>6x SATA III-Verbindung            2x USB 2.0-Header (jeder Header unterstützt 2 USB 2.0-Ports)            2x USB 3.1(Gen1)-Header (jeder Header unterstützt 2 USB 3.1(Gen1)-Ports)            1x 8-Pin-Stromverbindung            1x 24-Pin-Stromverbindung            1x CPU-Ventilatorverbindung            3x System-Ventilatorverbindung            1x Header für Frontpanel            1x Header für Frontaudio            1x Header für klares CMOS            1x Header für Seriellen Anschluss            1x S/PDIF-Auswurfsverbindung            2x Header LED (12V/5V)</p>
Formfaktor	ATX Formfaktor, 305 mm x 244mm
OS-Unterstützung	<p>Windows 10(64bit)            * Biostar reserves the right to add or remove support for any OS with or without notice.</p>

## Russian

Спецификации	
Поддержка центрального процессора	Socket 1151 для 9-го / 8-го поколения процессоров Intel® Core, Pentium а также Celeron Максимальный термопакет центрального процессора (TDP): 95 ватт * Семейство процессоров Intel® Core™ 9th / 8th поколения поддерживает только 300-Series. * Перечень поддержки центрального процессора смотрите на <a href="http://www.biostar.com.tw">www.biostar.com.tw</a> .
Набор микросхем	INTEL® V365
Память	Поддерживает двухканальный DDR4 1866/2133/2400/2666 4 гнезда платы памяти DDR4 DIMM, максимальная память до 64 Гб Каждый модуль DIMM поддерживает модуль не-ECC 4/8/16 Гб DDR4 * Перечень поддержки памяти смотрите на <a href="http://www.biostar.com.tw">www.biostar.com.tw</a> .
Накопитель	Соединитель 6x SATA III (6Gb/s) : Support AHCI, RAID 0, 1, 5, 10/ Intel® Rapid Storage Technology & Intel® Optane Technology 1x M.2 (M Key) : Поддерживает PCI-E 3.0 x4 (32Gb/s) 1x M.2 (M Key) : Поддерживает PCI-E 3.0 x4 (32Gb/s) & SATA III (6Gb/s) SSD * При использовании модуля SATA SSD в слоте PCI-E-M2_1 разъем SATA_6 будет отключен. * SATA RAID поддерживает только режим UEFI.
Локальная сеть	Intel® I219V Автосогласование 10/ 100/ 1000 Мб/с, работает в полно/полудуплексном режиме
Аудиокодек	ALC887 Каналы 7.1, высококачественное аудио
USB	8 порта USB 3.1(Gen1) (4 сзади ввода-вывода и 4 через внутренние контакты) 6 порта USB 2.0 (2 сзади ввода-вывода и 4 через внутренние контакты)
Гнезда расшир.	3x PCIe 3.0 x1 гнездо 2x PCIe 3.0 x16 гнездо
Задняя плата ввода-вывода	1 мышь PS/2 1 клавиатура PS/2 1 порта HDMI 1 порта VGA 1 порт локальной сети 2 порта USB 2.0 4 порта USB 3.1(Gen1) 3 гнезд для подключения наушников
Внутр. Плата ввода-вывода	Соединитель 6x SATA III (6Gb/s) 2 контакта USB 2.0 (каждый контакт поддерживает 2 порта USB 2.0) 2 контакт USB 3.1(Gen1) (каждый контакт поддерживает 2 порта USB 3.1(Gen1)) 1 8-выводный разъем питания 1 24-выводный разъем питания 1 разъем вентилятора ЦП 3 разъема вентилятора системы 1 контакт передней панели 1 контакт передней аудиопанели 1 контакт микросхемы Clear CMOS 1 контакт последовательного порта 1 соединитель S/PDIF-Out 2 контакт LED (12V/5V)
Конструктив	Форм-фактор ATX, 305мм x 244мм
Поддержка ОС	Windows 10(64bit) * Biostar оставляет за собой право добавлять или удалять поддержку любой ОС, с уведомлением или без.

## Spanish

Especificaciones	
Compatibilidad con el procesador	Ranura 1151 para el 9 <sup>º</sup> / 8 <sup>º</sup> procesador Intel® Core, Pentium y Celeron Alimentación de Proyección Térmica (TDP – Thermal Design Power): 95Watt * La familia de procesadores Intel® Core™ de 9 <sup>ª</sup> / 8 <sup>ª</sup> generación solo es compatible con la serie 300. * Por favor consultar con <a href="http://www.biostar.com.tw">www.biostar.com.tw</a> para la lista de compatibilidad con el procesador.
Tipo de Placa	INTEL® B365
Memoria	Soporta DDR4 1866/2133/2400/2666 Doble Canal 4x DDR4 DIMM Ranura de memoria Soporta hasta 64 GB Memoria Cada DIMM soporta un modulo non-ECC 4/8/16 GB DDR4 *Por favor consultar con <a href="http://www.biostar.com.tw">www.biostar.com.tw</a> para la lista de compatibilidad con el memoria.
Almacenamiento de información	Conector 6x SATA III (6Gb/s) : Soporta AHCI, RAID 0, 1, 5, 10/ Intel® Rapid Storage Technology & Intel® Optane Technology 1x M.2 (M Key) : Soporta PCI-E 3.0 x4 (32Gb/s) 1x M.2 (M Key) : Soporta PCI-E 3.0 x4 (32Gb/s) & SATA III (6Gb/s) SSD * Cuando se usa el módulo SATA SSD en la ranura PCIe-M2_1, el conector SATA3_6 se deshabilitará. * RAID SATA solo es compatible con el modo UEFI.
LAN	Intel® I219V 10/ 100/ 1000 Mb/s auto negociación, capacidad dúplex Mitad/Completo
Códec Audio	ALC887 Canales Audio de Alta Definición 7.1
USB	Ranura 8x USB 3.1(Gen1) (4 en las entrada/salidas posteriores y 4 por los distribuidores internos) Ranura 6x USB 2.0 (2 en las entrada/salidas posteriores y 4 por los distribuidores internos)
Ranuras de Extinción	Ranura 3x PCIe 3.0 x1 Ranura 2x PCIe 3.0 x16
Panel trasero de E/S	Ratón 1x PS/2 Teclado 1x PS/2 Ranura 1x HDMI Ranura 1x VGA Ranura 1x LAN Ranura 2x USB 2.0 Ranura 4x USB 3.1(Gen1) Socket audio 3x
Conectores en placa	Conector 6x SATA III (6Gb/s) Distribuidor 2x USB 2.0 (cada distribuidor soporta 2 ranuras USB 2.0) Distribuidor 2x USB 3.1(Gen1) (cada distribuidor soporta 2 ranuras USB 3.1(Gen1)) Conector con 8 patillas x1 Conector con 24 patillas x1 Conector Ventilador procesador x1 Conector Ventilador Sistema x3 Distribuidor Panel Frontal x1 Distribuidor Audio Frontal x1 Distribuidor CMOS Directo x1 Distribuidor Ranura Serie x1 Conector Externo S/PDIF x1 Distribuidor LED (12V/5V) x2
Factor de Forma	Factor de Forma ATX, 305mm x 244mm
Soporte OS	Windows 10(64bit) * Biostar reserva su derecho de añadir o retirar el soporte para cada OS con o sin notificación.

## Thai

คุณสมบัติ	
ซีพียู	ซี็อกเก็ต 1151 สำหรับโปรเซสเซอร์ 9th / 8th Intel® Core, Pentium และ Celeron CPU TDP (Thermal Design Power) สูงสุด: 95Watt * ตระกูลโปรเซสเซอร์ Intel® Core™ รุ่น 9 และ 8 รองรับเฉพาะ 300-Series * เข้าชมได้ที่ <a href="http://www.biostar.com.tw">www.biostar.com.tw</a> สำหรับรายการซีพียูที่สนับสนุน
ชิพเซ็ต	INTEL® B365
หน่วยความจำ	สนับสนุน Dual Channel DDR4 1866/2133/2400/2666 รองรับหน่วยความจำ 4 สล็อต DDR4 DIMM สูงสุดถึง 64 GB ทุก DIMM สนับสนุนโมดูล non-ECC 4/8/16GB DDR4 * เข้าชมได้ที่ <a href="http://www.biostar.com.tw">www.biostar.com.tw</a> สำหรับรายการหน่วยความจำที่สนับสนุน
สโตเรจ	6x SATA III พอร์ตเชื่อมต่อ (6Gb/s) : สนับสนุน AHCI, RAID 0, 1, 5, 10/ Intel® Rapid Storage Technology & Intel® Optane Technology 1x M.2 (M Key) : สนับสนุน PCI-E 3.0 x4 (32Gb/s) 1x M.2 (M Key) : สนับสนุน PCI-E 3.0 x4 (32Gb/s) และ SATA III (6.0Gb/s) SSD * เมื่อใช้โมดูล SATA SSD บนสล็อต PCIe-M2_1 ขั้วต่อ SATA_6 จะถูกปิดใช้งาน * SATA RAID รองรับโหมด UEFI เท่านั้น
แลน	Intel® I219V 10/ 100/ 1000 Mb/s การเจรจาอัตโนมัติ, ความสามารถในการพลิกซ์ Half / Full
ออดิโอ โคเดก	ALC887 7.1 Channels, High Definition Audio
ยูเอสบี	8x USB 3.1(Gen1) พอร์ต (4 พอร์ตด้านหลัง I/O และ 4 พอร์ต ผ่านพอร์ตเชื่อมต่อด้านใน) 6x USB 2.0 พอร์ต (2 พอร์ตด้านหลัง I/O และ 4 พอร์ต ผ่านพอร์ตเชื่อมต่อด้านใน)
สล็อตขยายเพิ่มเติม	3x PCIe 3.0 x1 สล็อต 2x PCIe 3.0 x16 สล็อต
พอร์ต I/O ด้านหลัง	1x PS/2 เมาส์ 1x PS/2 คีย์บอร์ด 1x HDMI พอร์ต 1x VGA พอร์ต 1x LAN พอร์ต 2x USB 2.0 พอร์ต 4x USB 3.1(Gen1) พอร์ต 3x Audio Jack
พอร์ต I/O ด้านใน	6x SATA III พอร์ตเชื่อมต่อ (6Gb/s) 2x USB 2.0 พอร์ตเชื่อมต่อ (หัวเชื่อมต่อทุกตัวรองรับ 2 พอร์ต USB 2.0) 2x USB 3.1(Gen1) พอร์ตเชื่อมต่อ (หัวเชื่อมต่อทุกตัวรองรับ 2 พอร์ต USB 3.1(Gen1)) 1x 8-Pin Power พอร์ตเชื่อมต่อ 1x 24-Pin Power พอร์ตเชื่อมต่อ 1x พอร์ตเชื่อมต่อ CPU Fan 3x พอร์ตเชื่อมต่อระบบ Fan 1x พอร์ตเชื่อมต่อแผงด้านหน้า 1x พอร์ตเชื่อมต่อออดิโอด้านหน้า 1x พอร์ต Clear CMOS 1x พอร์ตเชื่อมต่อ Serial Port 1x พอร์ตเชื่อมต่อออก S/PDIF 2x พอร์ต LED (12V/5V)
รูปแบบจากโรงงาน	ชานาน ATX จากโรงงาน, 244 มม. x 305 มม. Windows 10(64bit)
สนับสนุน OS	* Biostar ขอสงวนสิทธิ์ในการเพิ่มหรือลดการสนับสนุนสำหรับระบบปฏิบัติการ OS ต่างๆ โดยไม่ต้องแจ้งให้ทราบล่วงหน้า

## FCC条款

依照FCC条款第15部分的规定，本装置已经通过测试并且符合Class B级数字装置的限制。此条款限制了在安装过程中可能造成的有害射频干扰并提供了合理的防范措施。本装置在使用时会产生无线射频辐射，如果没有依照本手册的指示安装和使用，可能会与无线通讯装置产生干扰。然而，并不保证在特定的安装下不会发生任何干扰。

如果关闭和重新开启本设备后，仍确定本装置造成接收广播或电视的干扰，用户可以使用以下列表中的一种或多种方法来减少干扰：

- 重新安装或调整接收天线。
- 增加本设备与接收设备之间的距离。
- 连接设备连接到不同的插座以便于两个设备使用不同的回路。
- 咨询经销商或富有经验的无线电工程师，以获得更多资讯。

本用户手册内容的变更，恕不另行通知，制造商没有解释的义务。

本用户手册的所有内容若有任何错误，制造商没有义务为其承担任何责任。所有商标和产品名称均有其各自所有权。

未经过书面许可，不得以任何形式（部分或全部）复制此手册信息。

## 免责声明

本手册内容系BIOSTAR®知识产权，版权归BIOSTAR®所有。我们本着对用户负责的态度，精心地编写该手册，但不保证本手册的内容完全准确无误。BIOSTAR®有权在不知会用户的前提下对产品不断地进行改良、升级及对手册内容进行修正，实际状况请以产品实物为准。本手册为纯技术文档，无任何暗示及影射第三方之内容，且不承担排版错误导致的用户理解歧义。本手册中所涉及的第三方注册商标所有权归其制造商或品牌所有人。



### CE符合性简短声明

我们声明此产品符合现行标准，并满足2004/108/CE、2006/95/CE 和1999/05/CE指令规定的所有基本要求。

## 防静电操作规则

静电可能严重损坏您的设备，在处理主板以及其它的系统设备的时候要特别注意，避免和主板上的系统组件的不必要接触，保证在抗静电的环境下工作，避免静电放电可能对主板造成损坏，当在您的机箱中插入或者移除设备时，请保证电源处于断开状态，厂商对于不遵照本操作规则或者不遵守安全规范而对主板造成的损坏不负责。



**警告**  
主板易受静电损坏  
请遵守操作规则



# 目录

<b>第一章: 主板介绍</b> .....	<b>3</b>
1.1 前言 .....	3
1.2 包装清单 .....	3
1.3 主板特性 .....	4
1.4 后置面板接口 .....	5
1.5 主板布局图 .....	6
<b>第二章: 硬件安装</b> .....	<b>7</b>
2.1 中央处理器(CPU) .....	7
2.2 散热片 .....	9
2.3 风扇接头 .....	10
2.4 系统内存 .....	11
2.5 扩展槽 .....	12
2.6 跳线设置 .....	13
2.7 接口和插槽 .....	14
2.8 LED灯 .....	18
<b>第三章: UEFI BIOS和软件</b> .....	<b>19</b>
3.1 UEFI BIOS设置 .....	19
3.2 刷新BIOS .....	19
3.3 软件 .....	23
<b>第四章: 帮助信息</b> .....	<b>35</b>
4.1 驱动程序安装注意事项 .....	35
4.2 AMI BIOS 哔声代码 .....	36
4.3 AMI BIOS 开机自检代码 .....	36
4.4 问题解答 .....	38
4.5 RAID 功能 .....	39
4.6 英特尔® Optane™ 技术 .....	41
<b>附录I : 产品中有毒有害物质或元素的名称及含量</b> .....	<b>42</b>

# 第一章: 主板介绍

## 1.1 前言

感谢您选购我们的产品。在开始安装主板前，请仔细阅读以下安全指导说明：

- 选择清洁稳定的工作环境。
- 操作前请确保计算机断开电源。
- 从防静电袋取出主板之前，先轻触安全触地器或使用触地手腕带去除静电以确保安全。
- 避免触摸主板上的零件。手持电路板的边缘，不要弯曲或按压电路板。
- 安装之后，确认没有任何小零件置于机箱中，一些小的零件可能引起电流短路并可能损坏设备。
- 确保计算机远离危险区域，如：高温、潮湿、靠近水源的地方。
- 计算机的工作温度应保持在0-45°C之间
- 为避免受伤，请注意以下幾點：  
主板或連接器上尖銳的針腳  
机箱上的粗糙边缘和尖角  
破损的线缆可能引起短路

## 1.2 包装清单

- Serial ATA数据线 x4
- ATX机箱后置I/O面板 x1
- 用户手册 x1
- 驱动光盘 x1 (包括安装驱动)

---

### 注意


» 此清单可能因销售区域或主板型号不同而异，相关标配详情请咨询当地经销商。

---

## 1.3 主板特性

规格	
CPU支援	Socket 1151 · 第9代/第8代Intel Core i7 / i5 / i3 / Pentium / Celeron处理器 CPU最大热功耗(95Watt) * 第9代/第8代Intel®Core™处理器系列仅支持300系列。 * 请访问 <a href="http://www.biostar.com.tw">www.biostar.com.tw</a> 获取CPU的支持列表。
芯片组	INTEL® B365
内存	支持双通道DDR4 1866/2133/2400/2666 4个DDR4 DIMM插槽 · 最大内存容量为64GB 每个DIMM支持非ECC 4/ 8/ 16 GB DDR4内存模组 * 请访问 <a href="http://www.biostar.com.tw">www.biostar.com.tw</a> 获取内存的支持列表。
存储器	6个SATA III接口 (6Gb/s): 支持 AHCI, RAID 0 · 1 · 5 · 10/ Intel®快速储存技术 & Intel® Optane技术 1个 M.2 (M Key) : 支持 PCI-E 3.0 x4 (32Gb/s) 1个 M.2 (M Key) : 支持 PCI-E 3.0 x4 (32Gb/s) & SATA III (6Gb/s) SSD * 当安装 SATA SSD 模块于 PCIE-M2_1 插槽时 · SATA_6 接口将会被禁用。 * SATA RAID仅支持UEFI模式。
网络	Intel® I219V 10/ 100/ 1000 Mb/s自适应传输模式 · 半双工/全双工工作模式
音效	ALC887 8声道音频输出 · 支持高清音频
USB	8个USB 3.1(Gen1)端口(背板4个端口 · 板载接头支持4个端口) 6个USB 2.0端口(背板2个端口 · 板载接头支持4个端口)
扩展槽	3个PCIe 3.0 x1插槽 2个PCIe 3.0 x16插槽
背板接口	1个PS/2鼠标 1个PS/2键盘接口 1个HDMI端口 1个VGA端口 1个LAN端口 2个USB2.0端口 4个USB3.1(Gen1)端口 3个音频插孔
板载接口	6个SATA III接口 2个USB2.0接头(每个接头支持2个USB2.0端口) 2个USB3.1(Gen1)接头(每个接头支持2个USB3.1(Gen1)端口) 1个电源接口(8针) 1个电源接口(24针) 1个CPU风扇接头 3个系统风扇接头 1个前置面板接头 1个前置音频接头 1个清空CMOS数据接头 1个串行端口 1个S/PDIF输出接头 2个LED接头(12V/5V)
主板尺寸	ATX Form Factor · 305 mm x 244 mm
操作系统支持	Windows 10(64bit) * 如有增加或减少任何OS支持 · Biostar保留不预先通知的权利。

## 1.4 后置面板接口

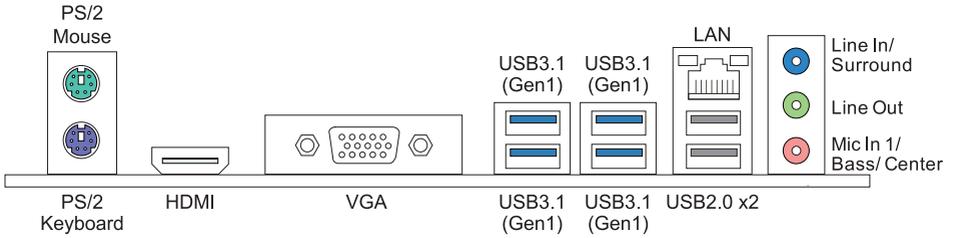


### 注意

- » 仅Intel集成显卡处理器支持HDMI/VGA端口。
- » 最高分辨率：  
HDMI: 4096 x 2160 @24Hz·符合HDMI 1.4规范  
VGA: 1920 x 1200 @60Hz
- » 当使用前置HD音频插孔并插入耳机/麦克风时·后置声音将自动禁用。
- » 主板仅同时支持2个板载显示端口输出。显示输出的配置可以在英特尔图形驱动程序工具中进行选择。
- » 配置8声道音频输出·您必须使用HD前面板音频模块·才能够通过O.S.多声道音频功能音频工具。

## 2/ 4/ 5.1/ 7.1-声道模式配置

音频接口	2 声道模式	4 声道模式	5.1 声道模式	7.1 声道模式
蓝色 (背部面板)	线性输入	线性输入	线性输入	侧边声道输出
绿色 (背部面板)	线性输出	前置声道输出	前置声道输出	前置声道输出
粉红色 (背部面板)	麦克风输入	麦克风输入	中置/重低音声道输出	中置/重低音声道输出
草绿色 (前置面板)	耳机	后置声道输出	后置声道输出	后置声道输出

## 1.5 主板布局图

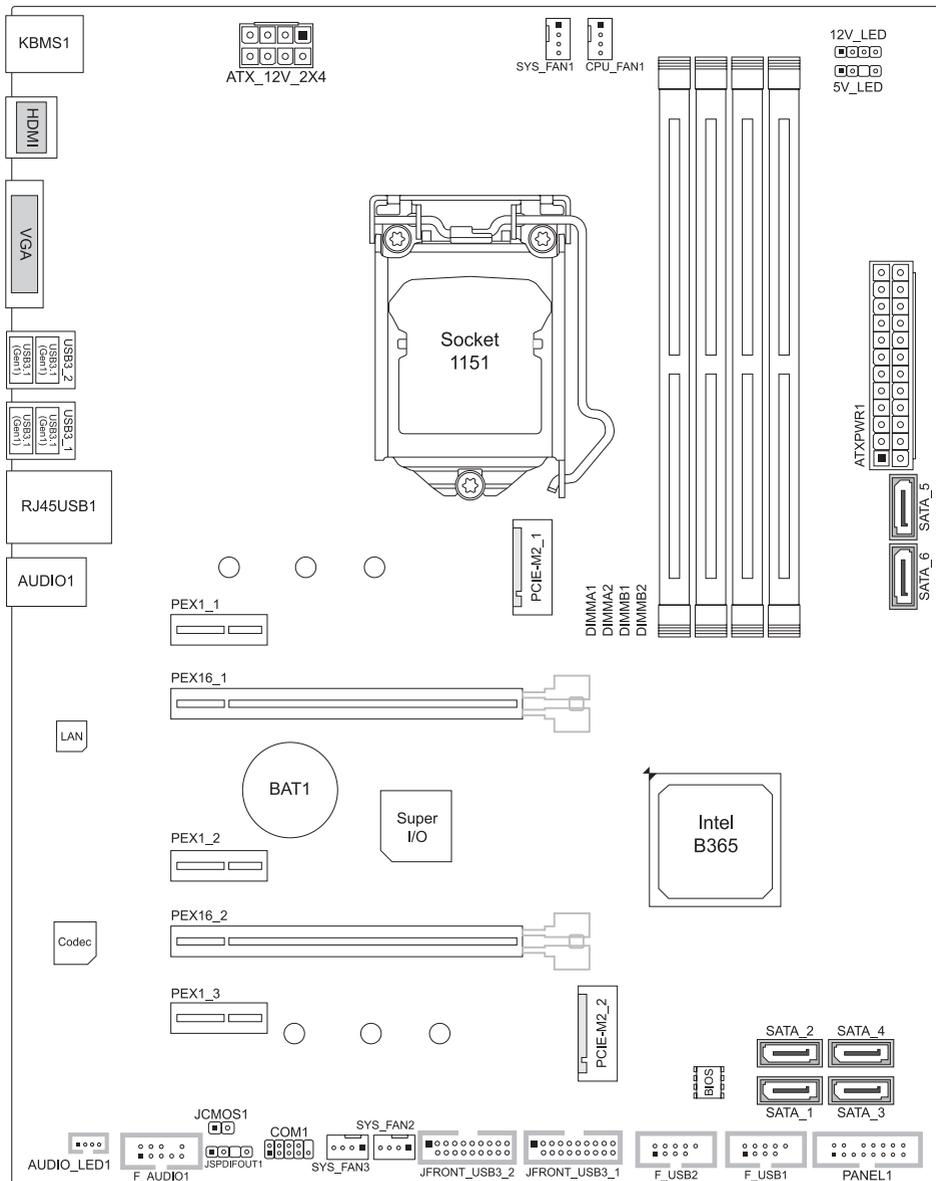


### 注意

» ■ 标示为针脚1

## 第二章: 硬件安装

### 2.1 中央处理器(CPU)


步骤1: 找到主板上的CPU插槽。

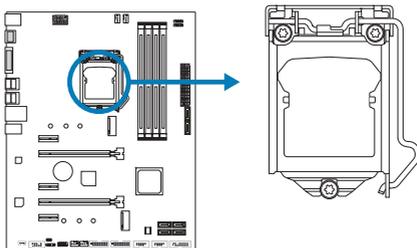


#### 注意

- » 安装前请取掉针脚保护盖, 并妥善保管以备后用。移开CPU后, 请盖上保护盖以确保针脚不被损坏。
- » 主板可能配有两种不同的针脚保护盖, 请参照以下指示取掉保护盖。


步骤2: 将拉杆从插槽移出并向上抬起

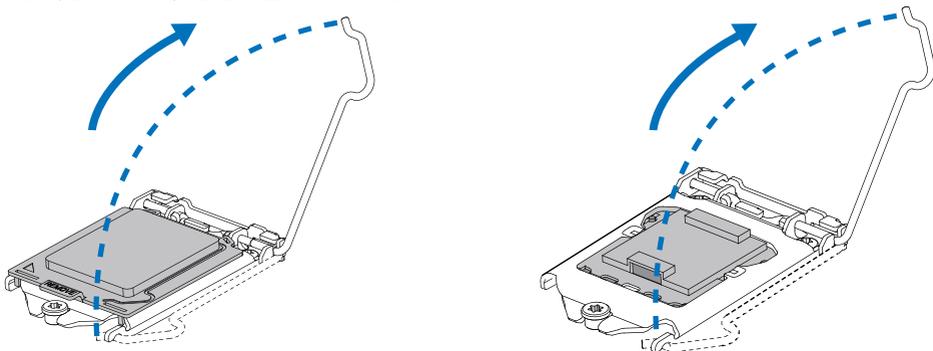


步骤3: 取掉针脚保护盖

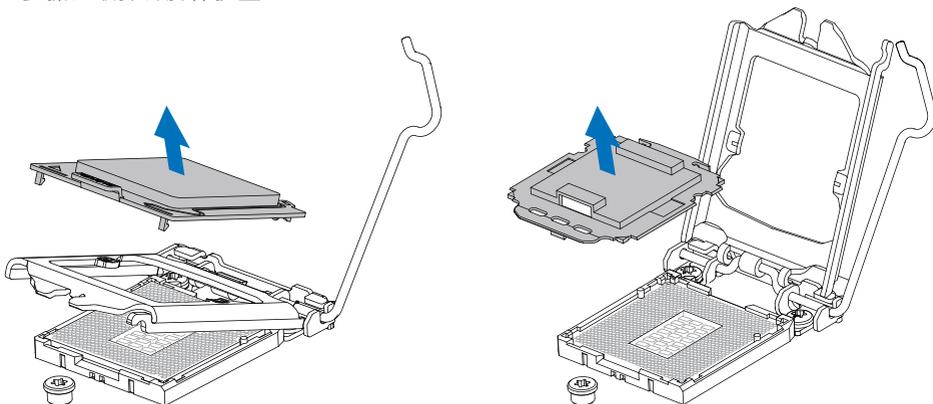

步骤4: 按照箭头的指示方向，将CPU上的切口对准插槽上相应的位置，然后将CPU放入插槽处

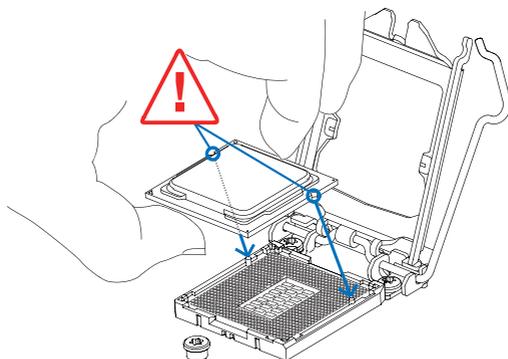

步骤5: 固定CPU，将拉杆闭合。

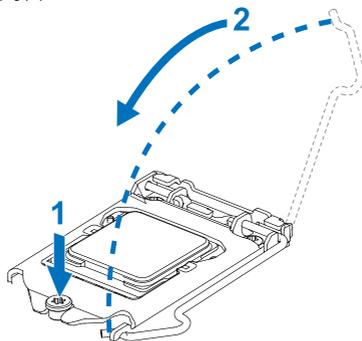


**注意**


- » 请确保安装专为LGA1151插座设计的CPU。
- » CPU必须按正确的方向放入，不要强行将CPU放进插槽以免损坏CPU。

## 2.2 散热片

步骤1: 请将CPU风扇组件置于CPU顶部，确保四个钉钩对齐主板上的插孔，调整其方位，使风扇电线与CPU风扇接口间距最近。确保钉钩插槽垂直指向散热片。

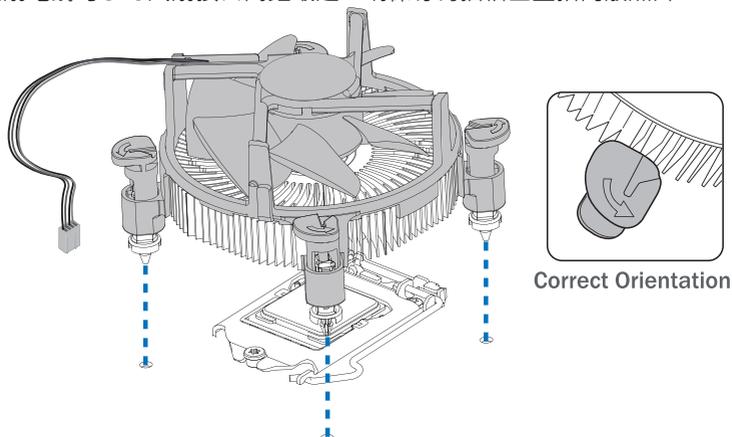

步骤2: 依次把对角2个钉钩同时向下按，以固定风扇，完成CPU安装。

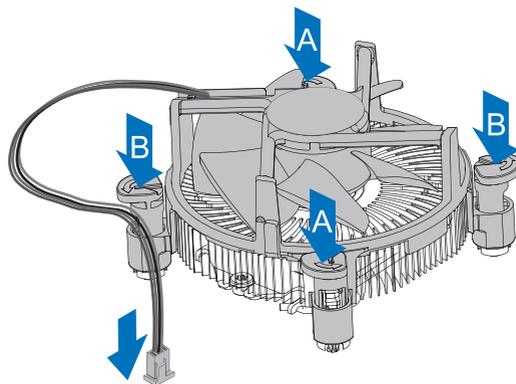


### 注意

- » 如有必要，在安装散热风扇前请先涂抹散热膏于CPU表面。
- » 请务必连接CPU风扇接口。
- » 请参照CPU散热片的安装手册获取正确的安装信息。

## 2.3 风扇接头


此风扇接头支持电脑内置的冷却风扇，风扇引线和插头可能因制造商而异。

### CPU\_FAN1: CPU 风扇接头

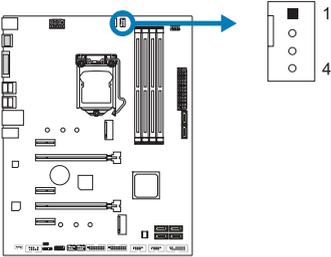


PWM 模式		DC 模式	
针	定义	针	定义
1	接地	1	接地
2	+12V	2	Voltage Control
3	Sense	3	Sense
4	Speed Control Signal	4	NC

### SYS\_FAN1: 系统风扇接头

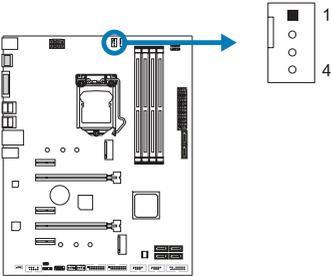

PWM 模式		DC 模式	
针	定义	针	定义
1	接地	1	接地
2	+12V	2	Voltage Control
3	Sense	3	Sense
4	Speed Control Signal	4	NC

### SYS\_FAN2/ 3: 系统风扇接头

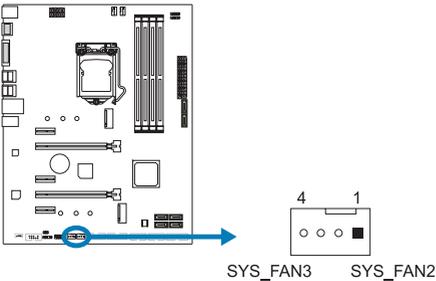


针	定义
1	接地
2	+12V
3	FAN RPM rate sense
4	Smart Fan Control (By Fan)

#### 注意

- » CPU\_FAN1·SYS\_FAN1/2/3支持4针脚和3针脚接口；接线时请注意红线是正极需接到第二个针脚，黑线接地需接到GND针脚。


## 2.4 系统内存

### DDR4内存模组

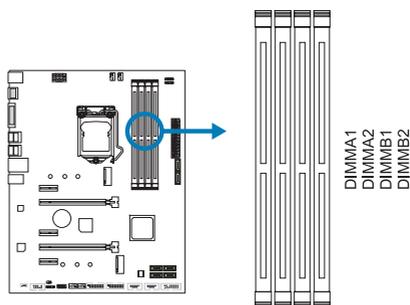

步骤1: 向外推开固定夹，打开DIMM插槽。 步骤2: 垂直插入DIMM并固定好，直到固定夹跳回原位，DIMM就位。

将DIMM按顺序放在插槽上，DIMM上的切口须与插槽凹口匹配。

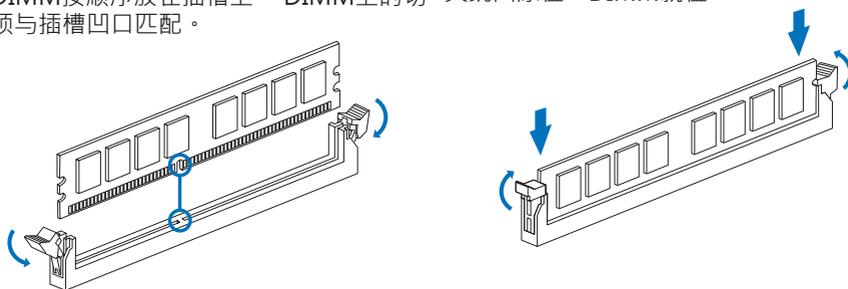

#### 注意

» 如果DIMM未顺利插入，请勿强行按压。将DIMM拔出，再重插一次。

### 内存容量

DIMM插槽位置	模组	总内存
DIMMA1	4GB/8GB/16GB	最大为 64GB.
DIMMA2	4GB/8GB/16GB	
DIMMB1	4GB/8GB/16GB	
DIMMB2	4GB/8GB/16GB	

### 双通道内存安装

为激活主板双通道功能，使用内存模组必须符合以下要求：成对安装相同密度的内存模组。如下表所示

双通道状态	DIMMA1	DIMMA2	DIMMB1	DIMMB2
Enabled	○	X	○	X
Enabled	X	○	X	○
Enabled	○	○	○	○

(“○”表示内存已安装，“X”表示内存未安装。)

#### 注意

» 当安装多个内存模块时，我们建议使用相同品牌和容量的内存安装于主板上。

## 2.5 扩展槽

### PEX16\_1: PCI-Express Gen3 x16 插槽

- 符合PCI-Express 3.0规范。
- 同步单向最大理论带宽为16GB/s·总带宽为32GB/s。

### PEX16\_2: PCI-Express Gen3 x16 插槽 (x4 通道)


- 符合PCI-Express 3.0规范。
- 同步单向最大理论带宽为4GB/s·总带宽为8GB/s。

### PEX1\_1/PEX1\_2/PEX1\_3: PCI-Express Gen3 x1 插槽

- 符合PCI-Express 3.0规范。
- 同步单向最大理论带宽为1GB/s·总带宽为2GB/s。

### PCIE-M2\_1/PCIE-M2\_2: M.2 (Key M) 插槽

- M.2插槽支持M.2 Type 2242/2260/2280 SSD模块。安装M.2模块前请将六角柱放到正确的位置。
- 支持 Intel®快速储存技术 & Intel® Optane技术。
- PCIE-M2\_1: 支持SATA III (6.0 Gb/s)模块与PCI Express Gen3 x4模块 (32 Gb/s)。
- PCIE-M2\_2: 支持PCI Express Gen3 x4模块 (32 Gb/s)。

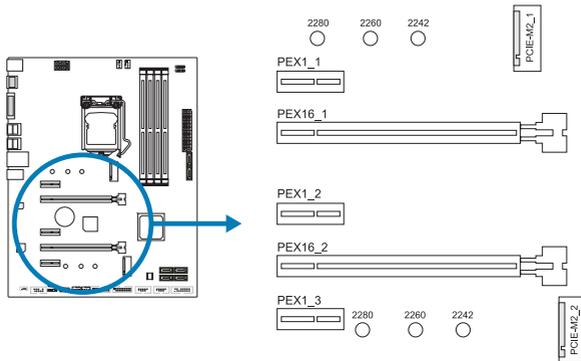

#### 注意

» 当安装 SATA SSD 模块于 PCIE-M2\_1 插槽时，SATA\_6 接口将会被禁用。

### 安装扩展卡

请参照以下步骤安装扩展卡：

- 安装扩展卡前请阅读扩展卡的相关指示说明。
- 打开电脑机箱后盖，移除螺丝和插槽支架。
- 将扩展卡按照正确的方向插入插槽，直到扩展卡完全就位。
- 用螺丝将扩展卡的金属支架固定到机箱后置面板。
- 还原电脑机箱后盖。
- 开机。如有必要，可为扩展卡更改BIOS设置。
- 安装扩展卡的驱动。

## 2.6 跳线设置

下图展示如何设置跳线。当跳帽放置在针脚上时，跳线为闭合(close)状态。否则跳线为断开(open)状态。

Pin 打开



Pin 闭合




Pin 1-2 闭合



### JCMOS1: 清空CMOS 跳线

用户可清空CMOS数据并恢复BIOS安全设置，请按照以下步骤操作以免损坏主板。

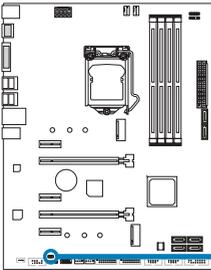

Pin 1-2 打开: 正常操作(默认)



Pin 1-2 闭合: 清空CMOS数据


#### 清空CMOS数据过程:

1. 断开AC电源。
2. 将跳线设置成1-2接脚闭合，建议可以使用一个金属物体如螺丝刀触碰1-2接脚。
3. 等待5秒钟。
4. 清空CMOS数据後，请确认跳线设置成1-2接脚打开。
5. 接通AC电源。
6. 开机然后按下<Del>键进入BIOS设置。

## 2.7 接口和插槽

### ATXPWR1: ATX电源接口


为了更好的兼容性，我们建议使用标准的ATX24-pin电源供应此接口的电源。

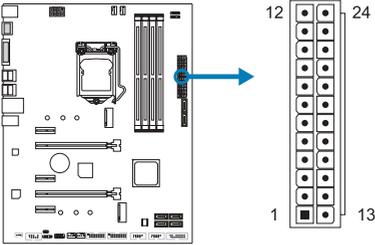

针	定义	针	定义
13	+3.3V	1	+3.3V
14	-12V	2	+3.3V
15	接地	3	接地
16	PS_ON	4	+5V
17	接地	5	接地
18	接地	6	+5V
19	接地	7	接地
20	NC	8	PW_OK
21	+5V	9	唤醒电压+5V
22	+5V	10	+12V
23	+5V	11	+12V
24	接地	12	+3.3V

### ATX\_12V\_2X4: ATX电源接口

此接口给CPU电路提供+12V电压。若CPU电源插头为4针脚，请将其插入ATX\_12V\_2X4的1-2-5-6针脚。

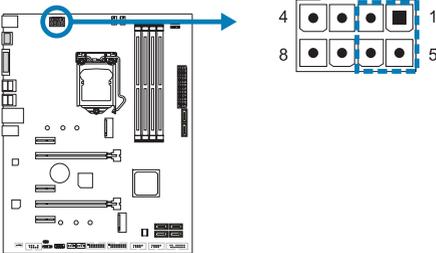


针	定义
1	+12V
2	+12V
3	+12V
4	+12V
5	接地
6	接地
7	接地
8	接地

#### 注意

- » 开机前，请确保ATXPWR1和ATX\_12V\_2X4接口都已插上电源。
- » 电压不足可能导致系统不稳或者外围设备不能正常运行。当配置使用大功率设备的系统时，建议您使用带有大功率输出的电源。

## PANEL1: 前置面板接头


此16针脚接口包含开机·重启·硬盘指示灯·电源指示灯和扬声器接口。

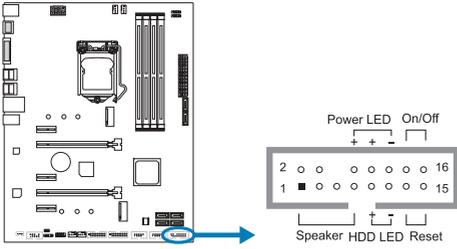

针	定义	功能	针	定义	功能
1	+5V	扬声器接口	2	N/A	N/A
3	N/A		4	N/A	
5	N/A		6	N/A	
7	扬声器	硬盘指示灯	8	Power LED (+)	电源指示灯
9	HDD LED (+)		10	Power LED (+)	
11	HDD LED (-)	重启按钮	12	Power LED (-)	开机按钮
13	接地		14	电源按钮	
15	Reset control		16	接地	

## SATA\_1/ 2/ 3/ 4/ 5/ 6: 串行ATA接口

此接口通过SATA数据线连接SATA硬盘。

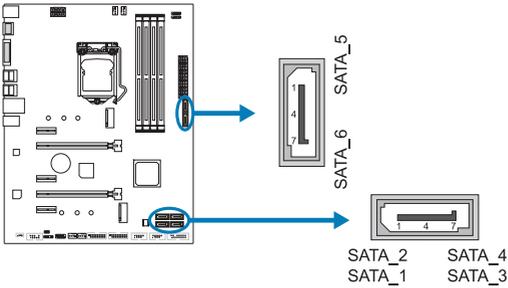


针	定义
1	接地
2	TX+
3	TX-
4	接地
5	RX-
6	RX+
7	接地

### 注意

» 当安装 SATA SSD 模块于 PCIE-M2\_1 插槽时·SATA\_6 接口将会被禁用。

## JFRONT\_USB3\_1/3\_2: 前置面板USB 3.1(Gen1)接头


PC前置面板支持附加的USB数据线·也可连接即插即用外围设备。

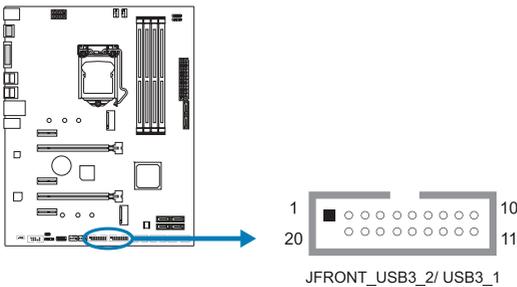

针	定义	针	定义
1	VBUS0	11	D2+
2	SSRX1-	12	D2-
3	SSRX1+	13	接地
4	接地	14	SSTX2+
5	SSTX1-	15	SSTX2-
6	SSTX1+	16	接地
7	接地	17	SSRX2+
8	D1-	18	SSRX2-
9	D1+	19	VBUS1
10	ID	20	Key

## F\_USB1/2: 前置面板USB 2.0接头


PC前置面板支持附加的USB数据线，也可连接即插即用外围设备。

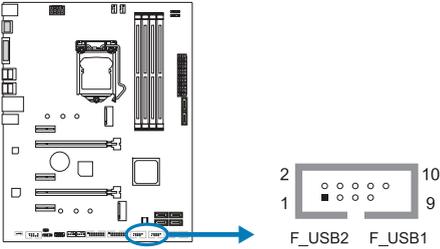

针	定义
1	+5V (fused)
2	+5V (fused)
3	USB-
4	USB-
5	USB+
6	USB+
7	接地
8	接地
9	Key
10	NC

## JSPDIFOUT1: 数字音频输出接口


此接口连接PCI支架SPDIF输出接头。

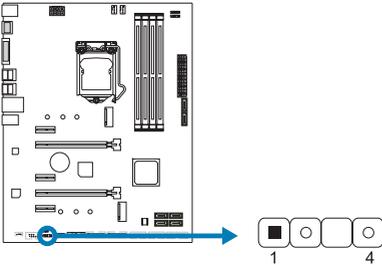

针	定义
1	接地
2	SPDIF_OUT
3	NA
4	+5V

## F\_AUDIO1: 前置面板音频接头

此接头可连接音频输出数据线，支持HD(高清)音频和AC' 97。

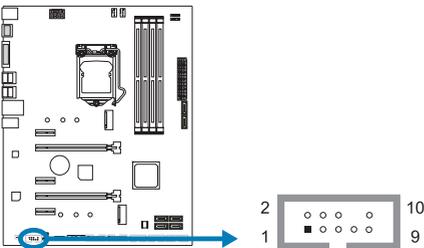


HD Audio		AC' 97	
针	定义	针	定义
1	Mic Left in	1	Mic In
2	接地	2	接地
3	Mic Right in	3	Mic Power
4	GPIO	4	Audio Power
5	Right line in	5	RT Line Out
6	Jack Sense	6	RT Line Out
7	Front Sense	7	Reserved
8	Key	8	Key
9	Left line in	9	LFT Line Out
10	Jack Sense	10	LFT Line Out

### 注意

- » 建议您连接前置高清音频插孔，享用主板高清音频功能。
- » 如果要连接AC' 97前置音频输出数据线，请关闭“前置面板插孔检测功能”。此功能在系统音频工具中可见。

## COM1: 串行端口




此主板有一串行端口，可连接至RS-232端口。

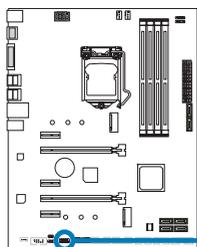

针	定义
1	Carrier detect
2	Received data
3	Transmitted data
4	Data terminal ready
5	Signal ground
6	Data set ready
7	Request to send
8	Clear to send
9	Ring indicator
10	Key

## 12V\_LED: RGB LED装置 (5050 SMD) 接头

此接头提供12V电源与RGB控制讯号，可连接RGB LED装置 (5050 SMD)。

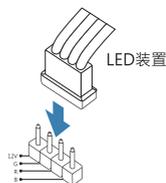

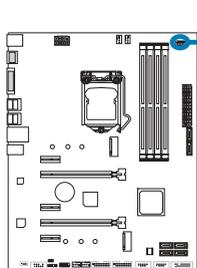


RGB LED装置接头  
(12V\_LED)

针	电缆颜色	定义
1	12V (黑色)	VCC12
2	G (绿色)	LED_GREEN
3	R (红色)	LED_RED
4	B (蓝色)	LED_BLUE

## 5V\_LED: Addressable RGB LED装置 (WS2818B) 接头

此接头提供5V电源与数据控制讯号，可连接RGB LED装置 (WS2818B)。

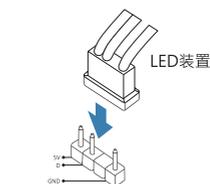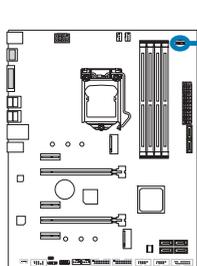

Addressable RGB LED装置接头  
(5V\_LED)

针	定义
1	VCC5
2	数据
3	N/A
4	接地


### 注意

- » 确保正确将针脚连接到LED装置，错误的连接可能会损坏您的LED装置或主板。
- » 12V\_LED接头支持5050 RGB LED灯条，最大输出功率为3A (12V)。
- » 5V\_LED接头最多可支持300个LED WS2818B Addressable RGB LED灯条，最大输出功率为3A (5V)。
- » 请使用Vivid LED DJ软件控制LED。有关详细的软件设置信息，请参阅第3.3章。

## 2.8 LED灯

### LED灯

下面的LED灯由RACING GT EVO软件控制。请参考3.3章节的软件设置。

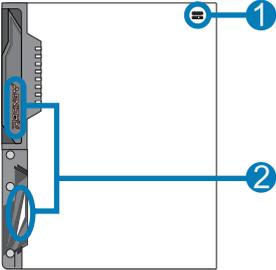

1. RGB LED 装置接头 (5V/12V)
2. Racing 盔甲LED灯

## 第三章: UEFI BIOS和软件

### 3.1 UEFI BIOS设置

- BIOS设置程序可用于查看和更改计算机的BIOS设置。开机自检时，按<DEL>键可进入BIOS设置程序。
- 更多相关UEFI BIOS设置信息，请参考网站上的UEFI BIOS手册。

### 3.2 刷新BIOS

以下任意一种工具都可以刷新BIOS:

- BIOSTAR BIO-Flasher: 使用此工具，BIOS可通过硬盘上的文件刷新，USB驱动刷新，或者CD-ROM 刷新。
- BIOSTAR BIOS刷新工具: 能够在Windows 环境下自动刷新。使用此工具，BIOS可通过硬盘上的文件刷新，USB驱动刷新，CD-ROM 刷新或者从网站上的文件地址刷新。

#### BIOSTAR BIOS Flasher


##### 注意

- » 此工具仅允许可使用FAT32/16格式化或单个分区的存储设备。
- » 刷新BIOS时如关机或重启系统将导致系统引导失败。

使用BIOSTAR BIO-Flasher刷新BIOS

1. 进入网站下载与主板相匹配的最新BIOS文件。
2. 然后保存BIOS文件到U-盘。(仅支持FAT/FAT32格式)
3. 插入包含BIOS文件的U-盘到USB接口
4. 开机或重启后，在自检过程中按<F12>键。

5. 进入自检后，屏幕会弹出BIOS-FLASHER工具。选择<fs0>搜索BIOS文件。

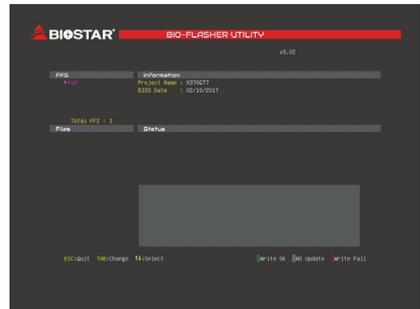

6. 选择合适的BIOS文件，并按“ Yes” 执行BIOS刷新程序。



7. BIOS刷新后会弹出是否重启系统的对话框。按<Y>重启系统



8. 系统引导并出现相关标识信息时，按<DEL>键进入BIOS设置。选择<Save & Exit>，使用<Restore Defaults>功能加载系统默认值，然后选择<Save Changes and Reset>来重启系统，完成BIOS刷新。


### BIOS刷新工具（通过网络）

1. 用DVD驱动安装BIOS Update Utility。
2. 使用此功能时，请确保电脑联网。


3. 打开BIOS刷新工具，然后点击“Online Update”按钮。




4. 屏幕弹出是否执行刷新BIOS程序的对话框，点击“ Yes”开始刷新BIOS。

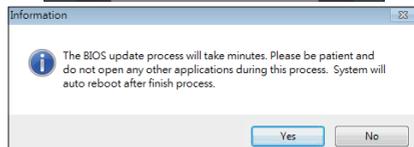


5. 如果BIOS有新版本，屏幕会弹出提示您下载最新版本的对话框。点击“ Yes”下载。

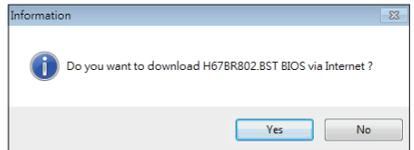

6. 完成下载后，屏幕弹出提示您刷新BIOS的对话框，点击“ Yes”开始刷新。

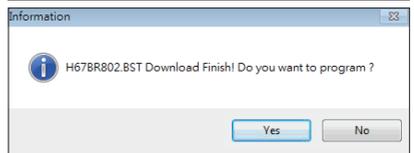

7. 刷新程序结束后，屏幕弹出提示您重启系统的对话框。点击“OK”重启系统。

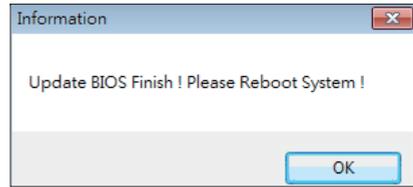

8. 系统引导并出现相关标识信息时，按<DEL>键进入BIOS设置。选择<Save & Exit>，使用<Restore Defaults>功能加载系统默认值，然后选择<Save Changes and Reset>来重启系统，完成BIOS刷新。


### BIOS刷新工具（通过BIOS文件）

1. 用DVD驱动安装BIOS刷新工具。
2. 从我们的网站[www.biostar.com.tw](http://www.biostar.com.tw)下载合适的BIOS。


3. 在主页面打开BIOS Updat Utility，然后点击“Update BIOS”按钮。




4. 屏幕弹出是否执行刷新BIOS程序的对话框，点击“OK”开始刷新BIOS。

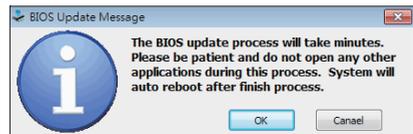

5. 选择BIOS文件的存放目录。然后选择合适的BIOS文件，点击“Open”。刷新BIOS要花几分钟时间，请耐心等待。

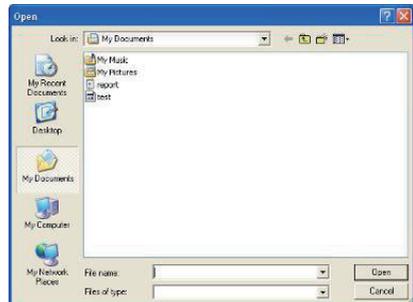


6. BIOS刷新过程结束后，点击“OK”重启系统。

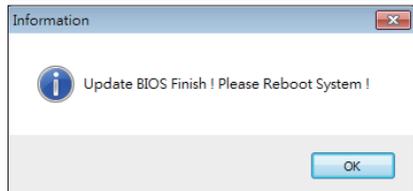

7. 系统引导并出现相关标识信息时，按<DEL>键进入BIOS设置。选择<Save & Exit>，使用<Restore Defaults>功能加载系统默认值，然后选择<Save Changes and Reset>来重启系统，完成BIOS刷新。

### BIOS备份

点击BIOS备份按钮，选择存储备份文件的合适目录，然后点击“ Save”。

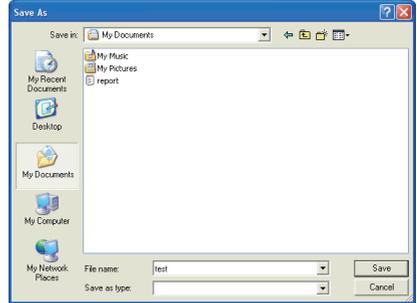

## 3.3 软件

### 安装软件

1. 将光盘放入光驱，若Autorun功能已激活，驱动安装程序将会出现。
2. 选择Software Installation，然后点击各软件图标。
3. 根据屏幕上的指令完成安装。

### 启动软件

安装程序完成后，桌面上将出现软件图标。请双击图标启动软件工具。

#### 注意

- » 所有软件的相关信息和内容若有变更，恕不另行通知。为使系统性能更佳，软件会不断升级。
- » 下面的图片和信息仅供参考，此主板的实际信息和设置可能与手册稍有差异。

### BIOScreen 工具

此实用工具可以将开机画面个性化。您可以选择BMP格式来自定义计算机开机画面。




请参照以下步骤来更新开机画面：


- 加载画面(Load Image)：选择图片作为开机画面。
- 转换(Transform)：转换图片并预览。
- 更新BIOS(Update Bios)：将图片写入BIOS内存，然后完成更新。



输入文件名，点击“Save”，系统信息将被保存至文本文件里。

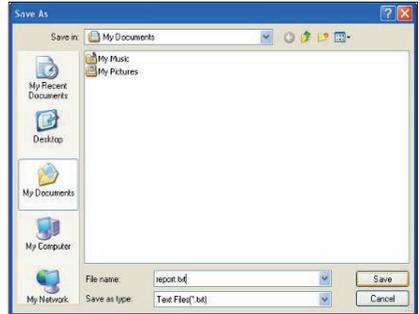

打开已保存的文本文件，显示相关系统信息（包括主板/BIOS/CPU/视频设备/OS）。这些信息当然也在已发送的邮件里。

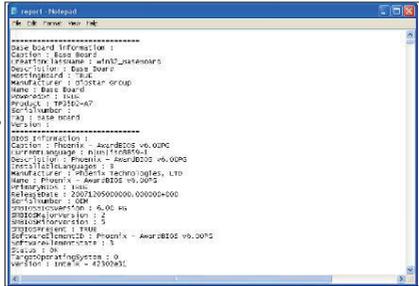

#### 注意

- » 在使用此工具前，请将Outlook Express设置为您的默认电子邮件连接程序。
- » 我们将为用户资料保密，所以使用eHot-Line服务时，请放心提供您的系统信息。
- » 若您未将Outlook Express设置为默认电子邮件连接程序，也可保存您的系统信息到文件里，然后用其它电子邮件工具发送此文件到我们的技术支持。  
请访问网站<http://www.biostar.com.tw/app/en/about/contact.php>获取我们的联系信息。

## RACING GT EVO Utility

RACING GT EVO 软件集成几个映泰的实用程序并十分易于使用，允许用户同时无缝地配置这些实用程序。

### 注意

» RACING GT EVO 软件之选单内容将略有不同，具体项目配置取决于用户所使用的主板。

## 系统信息

提供您的基本系统信息的概述。



1. 时钟频率：显示核心频率，倍频和总线速度。
2. 主板：显示主板信息。
3. 处理器：显示处理器信息。
4. 内存：显示内存信息。

## 耳放调控

耳放调控允许您控制系统音量，调整阻抗设置（低/高增益），以优化您的耳机性能。讓您可以轻松享受高品质的声音。

设置需求：

1. 带有前置音频输出插孔的机箱。
2. 耳机或头戴式耳机。
3. Windows 7 (32/64bit)/ 8.1(64bit) / 10(64bit)操作系统。

安装指南：

1. 确保机箱前置音频线正确连接至主板上的前置音频接头。
  2. 从驱动DVD上安装RACING GT EVO软件。
  3. 将耳机或头戴式耳机连接至机箱前置或后部的音频输出接口，並启用RACING软件。
- » 如果您想使用AC' 97前置音频输出线，请禁用“前置面板插孔检测功能”。此功能在系统音频工具中可见。



1. 音量：可调节音量大小。
2. 静音：可切换到静音状态。
3. 增益开关：使用低阻抗耳机时调至低（LO），使用高阻抗耳机时调至高（HI）。

## 能效控制

GT Touch允许您在Windows环境中运行RACING GT EVO程序时调整正常·ECO和运动模式。



1. 常规模式：自动平衡系统性能与电源消耗。
2. 节能模式：稍微地降低系统性能以节省能源。
3. 高性能模式：以最大限度地提高系统性能。

## 炫彩灯控

炫彩LED可供调整Racing 盔甲LED灯、RGB LED装置的灯光模式。



1. LED灯效指挥官：允许您选择LED模式。

- 默认：所有设置都恢复为默认。(蓝光)
  - RAZER：允许您连接到RAZER应用程序以同步主板灯。
    - » 使用RAZER模式时，关闭RACING GT软件，LED照明将返回默认状态。
    - » RAZER模式是通过与RAZER软件的连接实现LED照明同步。
    - » 必须安装RAZER软件才能使用RAZER模式。RAZER相关信息请到RAZER官方网站下载。
    - » 使用RAZER模式时，必须与RAZER相关设备和外围设备一起使用。
  - RGB灯效同步：允许您同步LED类型项目设置。
2. LED类型：选择LED开启区块。
- 系统：显示系统LED灯。(Racing ARMOR灯)
  - 12V LED：显示12V LED接头区块LED灯。(12V\_LED 装置)
  - 5V LED：显示5V LED接头区块LED灯。(5V\_LED 装置)
  - 内存灯效同步：显示内存灯效区块LED灯。(内存装置)
3. 打开/关闭：启用或禁用LED类型的所有项目。
4. 打开/关闭：允许您启用或禁用单个项目的LED装置。
5. 调色板：允许您自订LED灯的颜色。
6. LED明暗度：您可以调节LED的亮度。
7. 自动：LED将自动更改调色板和明暗度。
- » 使用自动模式时，调色板和LED明暗度将被禁用。
8. LED灯控模式：允许您选择LED灯的闪烁模式。
- 常亮：LED灯持续点亮。
  - 闪烁：LED灯会以一个特定的频率闪烁。
  - 动态：LED灯慢慢地点亮和熄灭。
  - 音乐闪烁：LED灯会跟随你播放的音乐做闪烁。
- » 使用RACING GT EVO程序之前，请确保您的扬声器或耳机正确连接到音频插孔。

- **流星**：LED灯以特定频率滑动。
  - **浪花**：LED灯以水波纹节奏呈现。
  - **星空**：LED灯以特定的节奏闪烁。
  - **闪电**：LED灯闪烁并以特定频率滑动。
  - **彩虹**：LED灯以炫丽多彩的节奏律动。
  - **极光**：LED灯显示柔和的光线并轻微闪烁。
9. **速度慢/快**：允许您控制闪烁速度。

---

**注意**

» 使用VIVID LED DJ，可独立控制四种LED类型区块，不同的LED类型将配置不同的闪烁模式。

---

## 智能风扇

A.I FAN实用程序允许使用者具有更多调整风扇操作模式的智能性，并自动检测不同的温度，使风扇以规定的速度运行，以获得最佳的冷却性能。



1. 温度：显示当前CPU和系统温度。
2. CPU1/2 RPM & SYSTEM1/2/3/4 RPM：单击按钮提供您设置CPU风扇和系统风扇的状态值。
3. Default：恢复默认您单个项目的更改值。
4. PWM/Temperature Panel：根据风扇PWM值对应CPU和系统温度来调节风扇转速。
  - » 此项目允许您根据自己的喜好进行调整。
5. 用户选择：设置风扇属性的选择操作。
  - 自动：允许您调整自动检测模式。
  - DC：允许您调整直流（直流）模式。
  - PWM：允许您调整脉宽调制（PWM）模式。
6. 控制模式：允许您控制风扇的转动模式。
  - 积极：启用进取模式。
  - 安静：启用安静模式。
  - 手动：启用手动模式。
  - 全开：启用全开模式。

## 硬件监测

允许您监控硬件电压、风扇转速和温度。



1. 处理器温度/系统温度：显示当前CPU和系统温度。
2. 风扇转速：显示当前风扇速度。
3. 电压：显示CPU和内存的当前电压。

## 超频超压

允许您保存或加载超频的设定参数值，以及更改系统的频率与电压设置。



1. **超频**：您可以调节超频参数值。
2. **超压**：您可以调节电压参数值。
3. **Default**：所有设置都恢复为默认。
4. **应用**：应用当前的参数值。
5. **读取**：从文件载入参数值。
6. **储存**：存储参数值以供将来使用。

### 注意

- » 并非所有类型的CPU性能都能超出理想的超频设置，因CPU类型而异。
- » 超频是一个可选程序，而非必须的；不建议无经验用户使用。因此，由于超频导致的任何硬件损坏我们不予负责。对超频性能我们也不做任何担保。

### 关于


此选单显示Racing GT EVO Utility版本信息。



## 第四章:帮助信息

### 4.1 驱动程序安装注意事项

为获得更好的系统性能，在操作系统安装完成后，请插入您的系统驱动到光驱并安装。插入DVD后，将出现如下所示窗口。

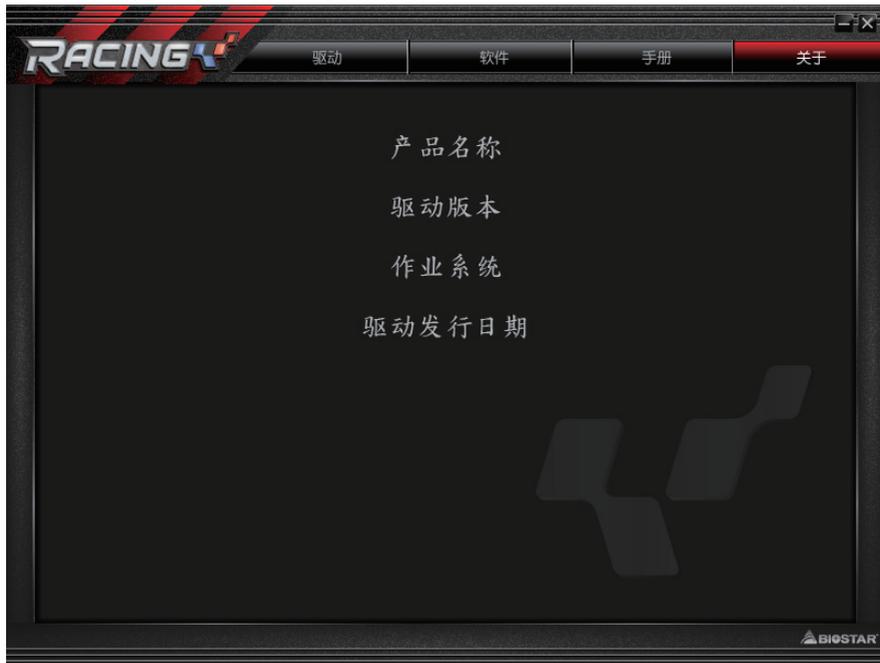

此设置向导将自动检测您的主板和操作系统。

#### A. 驱动程序安装

安装驱动程序，请点击驱动器图标。设置向导将列出主板兼容驱动和操作系统。点击各设备驱动程序，以开始安装进程。

#### B. 软件安装

安装软件，请点击软件图标。设置向导将列出系统可用软件，点击各软件名称，以开始安装进程。

#### C. 使用手册

除了书本形式的手册，我们也提供光盘形式的使用指南。点击Manual图标，浏览可用相关使用指南。

#### 注意

- » 在插入驱动之后，如此窗口未出现，请用文件浏览器查找并执行SETUP.EXE文件。
- » 若需要Acrobat Reader打开manual文件，请从网站<http://get.adobe.com/reader/>下载最新版本的Acrobat Reader软件。

## 4.2 AMI BIOS 哔声代码

### 引导模块哔声代码

哔声次数	含义
持续哔声	持续哔声

### BIOS 开机自检哔声代码

哔声次数	含义
1	系统引导成功
8	显存错误(系统视频适配器)

## 4.3 AMI BIOS 开机自检代码

代码	含义
10	PEI核心启动
11	CPU Pre-memory初始化启动
15	北桥Pre-memory初始化启动
19	南桥Pre-memory初始化启动
2B	内存初始化·读取SPD数据
2C	内存初始化·检测Memory presence
2D	内存初始化·编程内存时序信息
2E	内存初始化·配置内存
2F	内存初始化(其他)
31	内存安装完成
32	CPU post-memory初始化启动
33	CPU post-memory初始化·Cache初始化
34	CPU post-memory初始化·应用处理器初始化
35	CPU post-memory初始化·选择BSP
36	CPU post-memory初始化·系统管理模式初始化
37	北桥Post-Memory初始化启动
3B	北桥Post-Memory初始化
4F	DXE IPL启动
60	DXE核心启动
F0	固件引起的恢复条件(自动恢复)
F1	用户引起的恢复条件(强制恢复)
F2	恢复进程启动
F3	找到固件恢复图象
F4	加载固件恢复图象
E0	S3唤醒启动
E1	执行S3启动脚本
E2	重新发送影像
E3	系统S3待机导向
60	DXE内核启动
61	NVRAM初始化
62	安装南桥运行期
63	CPU DXE初始化启动
68	PCI HB初始化
69	北桥DXE初始化
6A	北桥DXE SMM初始化启动

代码	含义
70	南桥DXE初始化启动
71	南桥DXE SMM初始化启动
72	南桥设备初始化
78	南桥DXE初始化
79	ACPI模组初始化
90	引导设备选择阶段启动
91	驱动连接启动
92	PCI总线初始化启动
93	PCI总线热拔插控制器初始化
94	PCI总线列举
95	PCI总线请求资源
96	PCI总线分配资源
97	控制台输出设备连接
98	控制台输入设备连接
99	高级IO初始化
9A	USB初始化启动
9B	USB复位
9C	USB检测
9D	USB启用
A0	IDE初始化启动
A1	IDE复位
A2	IDE检测
A3	IDE启用
A4	SCSI初始化启动
A5	SCSI复位
A6	SCSI检测
A7	SCSI启用
A8	设置校对密码
A9	设置开始
AB	设置输入等待
AD	准备启动环境
AE	传统启动环境
AF	退出启动环境
B0	虚拟地址图开始
B1	虚拟地址图结束
B2	传统可选ROM初始化
B3	系统复位
B4	USB热拔插
B5	PCI总线热拔插
B6	清理NVRAM
B7	配置复位(NVRAM设置复位)

**注意**

» 如此窗若出现表格未列出的代码，请联系我们的技术支持。

## 4.4 问题解答

问题	解决方法
1. 系统没有电，电源指示灯不亮，电源风扇不转动。 2. 键盘上的指示灯不亮。	1. 确定电源线是否接好。 2. 更换线材。 3. 联系技术支持。
系统不起作用。键盘指示灯亮，电源指示灯亮，硬盘正常运作。	用力按压内存两端，确保内存安置于插槽中。
系统不能从硬盘启动，能从光盘启动。	1. 检查硬盘与主板的连线，确定各连线是否确实接好，检查标准CMOS设置中的驱动类型。 2. 硬盘随时都有可能坏掉，所以备份硬盘数据是很重要的。
系统只能从光盘启动。硬盘能被读，应用程序能被使用，但是不能从硬盘启动。	1. 备份数据和应用程序。 2. 重新格式化硬盘。用后备盘重新安装应用程序和数据。
屏幕提示“Invalid Configuration”或“CMOS Failure”。 再次检查系统设备，确定设定是否正确安装了第二个硬盘	再次检查系统设备，确定设定是否正确
安装了第二个硬盘后，系统不能启动。	1. 正确设置主/从硬盘跳线。 2. 运行安装程序，选择正确的驱动类型。与驱动器厂商联系，寻求驱动兼容性的技术支持。

### CPU过热保护系统

在开启系统数秒后如有自动关机的现象，这说明CPU保护功能已被激活。CPU过热时，防止损坏CPU，主机将自动关机，系统则无法重启。

此种情况下，请仔细检查。

1. CPU 散热器平放在CPU表面。
2. CPU风扇能正常旋转。
3. CPU风扇旋转速度与CPU运行速度相符。

确认后，请按以下步骤缓解CPU保护功能。


1. 切断电源数秒。
2. 等待几秒钟。
3. 插上电源开启系统。

或是：

1. 清除CMOS数据。(查看“Close CMOS Header: JCMOS1”部分)
2. 等待几秒钟。
3. 重启系统。

## 4.5 RAID 功能


### RAID 定义

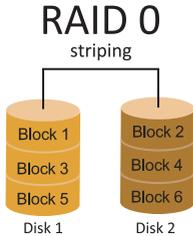

创建带区集，在同一时间内向多块磁盘写入数据，通过把数据分成多个数据块（Block）并行写入/读出多个磁盘以提高访问磁盘的速度分散到所有的硬盘中同时进行读写，在整个磁盘阵列建立过程中，以系统环境为基础，指数的大小决定了每块磁盘的容量。此技术可减少整个磁盘的存取时间和提供高速带宽。

### 性能及优点

- 驱动器: 最少2块硬盘，最多达6块或8块，取决于平台。
- Uses: 使用RAID 0来提高磁盘的性能和吞吐量，但没有冗余或错误修复能力。
- 优点: 增加磁盘的容量。
- 缺点: 整个系统是非常不可靠的，如果出现故障，无法进行任何补救，整个数据都会丢失。
- 容错: 否。

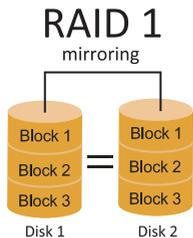


每次读写实际上是在磁盘阵列系统中(RAID 1)，通过2个磁盘驱动器并行完成的。RAID 1或镜像模式能够自动对数据进行备份，通过将一块硬盘中的数据完整复制到另外一块硬盘实现数据的冗余。假如由于硬盘的损坏，导致驱动失败，或是容量过大，RAID1可以提供一份数据备份。RAID 技术可以应用于高效方案，或者可以作为自动备份形式，代替冗长的，高价的且不稳定的备份形式。

### 性能及优点

- 驱动器: 最少2块硬盘，最多2块。
- 使用: RAID 1是理想的小型数据库储备器或应用在有容错能力和小容量方面。
- 优点: 提供100%的数据冗余。即使一个磁盘控制器出现问题，系统仍然可以使用另外一个磁盘控制器继续工作。
- 缺点: 2个驱动器替代一个驱动器储存的空间，在驱动重建期间系统的性能有所下降。
- 容错: 是。

## RAID 10 (1+0)

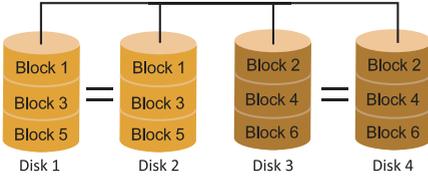


RAID 10模式是对RAID 0/ RAID 1两种不同模式的结合，可以同时支持带区集和镜像，这样既可以提升速度又可以加强数据的安全性。

### 性能及优点

- 驱动器: 最少4块硬盘，最多6或8块。
- 优点: 容量和性能的优化允许冗余的自动化。在一个阵列，可以同时使用其它的RAID，并允许剩余的磁盘。
- 缺点: 数据冗余需要两倍可用磁盘空间，与RAID1相同。
- 容错: 是。

## RAID 5

parity across disks

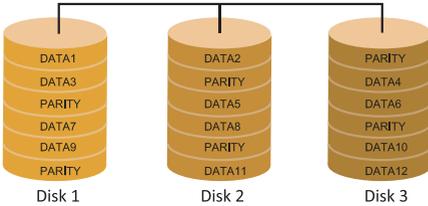

RAID 5数据块和奇偶块信息跨3块或更多块驱动器。奇偶校验数据分散分布在磁盘阵列的全部硬盘。容错的维护是由确保数据块传输奇偶块信息实现的，此信息被放置在不同于那些自身可以储存信息的驱动盘里。

### 性能及优点

- 驱动器: 最少3块硬盘。
- 使用: RAID 5被推荐用于处理交易和普通操作服务。
- 优点: 一个理想的最佳性能的结合，最佳容错，大容量和最快存储效率。
- 缺点: 个别资料区块的传输速率和单一硬盘相同，写入的效能会取决于CPU的速度。
- 容错: 是。

### 注意

- » 请访问网站[http://www.intel.com/p/en\\_US/support/highlights/chpsts/imsm](http://www.intel.com/p/en_US/support/highlights/chpsts/imsm)获取(Intel® RST)英特尔快速存储技术的相关资料。
- » PCI-E 存储设备只支援 RAID 0、1 & 5。
- » SATA RAID仅支持UEFI模式

## 4.6 英特尔® Optane 技术 (由3D XPoint内存供电)

透过英特尔® Optane™技术，您可以完全释放处理器的威力，而不只是运用一小部分而已。要突破这个瓶颈，则需要更佳的储存记忆体，具备快速、价格实惠、非挥发性的特色。英特尔® Optane 技术具有为大数据、高效能运算、虚拟化、储存、云端、游戏与其他多种应用带来革命性改变的潜力。

### 性能及优点：

- 大容量内存数据库
- 快速系统恢复
- 低延迟
- 高耐力

### 英特尔® Optane 技术的需求简介：

- 英特尔® Optane 内存或存储。
- 英特尔® 第7/8/9代核心中央处理器。
- 在支持英特尔® Optane 技术的端口中安装英特尔® Optane 内存或存储器。(详情请参考第4页)
- 安装英特尔® 快速存储技术驱动程序，并按照说明启用英特尔® Optane 技术。
- 部分使用情况下，如果未安装UEFI操作系统，则Intel Optane Technology将不可使用。

## 附录I：产品中有毒有害物质或元素的名称及含量

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
PCB板	○	○	○	○	○	○
结构件	○	○	○	○	○	○
芯片及其它主动零件	X	○	○	○	○	○
连接器	X	○	○	○	○	○
被动电子元件	X	○	○	○	○	○
焊接金属	○	○	○	○	○	○
线材	○	○	○	○	○	○
助焊剂·散热膏·标签及其它耗材	○	○	○	○	○	○

○：表示该有毒有害物质在该部件所有均质材料中的含量在SJ/T11363-2006标准规定的限量要求以下。

X：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363-2006标准规定的限量要求。

备注：在芯片及其它主动零件、连接器、被动电子元件Pb栏位中有打X，表示Pb在该部件的某一均质材料中的含量超出SJ/T11363-2006标准规定的限量要求，但均符合欧盟ROHS指令豁免条款。