
H55A+ Setup Manual

FCC Information and Copyright

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. There is no guarantee that interference will not occur in a particular installation.

The vendor makes no representations or warranties with respect to the contents here and specially disclaims any implied warranties of merchantability or fitness for any purpose. Further the vendor reserves the right to revise this publication and to make changes to the contents here without obligation to notify any party beforehand.

Duplication of this publication, in part or in whole, is not allowed without first obtaining the vendor's approval in writing.

The content of this user's manual is subject to be changed without notice and we will not be responsible for any mistakes found in this user's manual. All the brand and product names are trademarks of their respective companies.

Table of Contents

Chapter 1: Introduction	1
1.1 Before You Start	1
1.2 Package Checklist	1
1.3 Motherboard Features.....	2
1.4 Rear Panel Connectors	3
1.5 Motherboard Layout.....	4
Chapter 2: Hardware Installation	5
2.1 Installing Central Processing Unit (CPU).....	5
2.2 FAN Headers.....	7
2.3 Installing System Memory.....	8
2.4 Connectors and Slots	10
Chapter 3: Headers & Jumpers Setup	13
3.1 How to Setup Jumpers	13
3.2 Detail Settings.....	13
Chapter 4: Useful Help	18
4.1 Driver Installation Note.....	18
4.2 Software	19
4.3 Extra Information.....	23
4.4 AMI BIOS Beep Code	25
4.5 Troubleshooting	26
Appendix: SPEC In Other Languages	27
German.....	28
French	30
Italian.....	32
Spanish	34
Portuguese	36
Polish.....	38
Russian	40
Arabic.....	42
Japanese	44

CHAPTER 1: INTRODUCTION

1.1 BEFORE YOU START

Thank you for choosing our product. Before you start installing the motherboard, please make sure you follow the instructions below:

- Prepare a dry and stable working environment with sufficient lighting.
- Always disconnect the computer from power outlet before operation.
- Before you take the motherboard out from anti-static bag, ground yourself properly by touching any safely grounded appliance, or use grounded wrist strap to remove the static charge.
- Avoid touching the components on motherboard or the rear side of the board unless necessary. Hold the board on the edge, do not try to bend or flex the board.
- Do not leave any unfastened small parts inside the case after installation. Loose parts will cause short circuits which may damage the equipment.
- Keep the computer from dangerous area, such as heat source, humid air and water.
- The operating temperatures of the computer should be 0 to 45 degrees Celsius.

1.2 PACKAGE CHECKLIST

- ↳ Serial ATA Cable X 2
- ↳ Rear I/O Panel for ATX Case X 1
- ↳ User's Manual X 1
- ↳ Fully Setup Driver CD X 1
- ↳ FDD Cable X 1 (optional)
- ↳ USB 2.0 Cable X1 (optional)
- ↳ Serial ATA Power Cable X 1 (optional)

Note: The package contents may be different due to area or your motherboard version.

Motherboard Manual


1.3 MOTHERBOARD FEATURES

SPEC			
CPU	Socket 1156 Intel Core i7 / i5 / i3 / Pentium processor		Supports Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture-64 / Extended Memory 64 Technology / Virtualization Technology
Chipset	Intel H55		
Super I/O	ITE 8721 Provides the most commonly used legacy Super I/O functionality. Low Pin Count Interface		Environment Control initiatives, Hardware Monitor Controller Fan Speed Controller ITE's "Smart Guardian" function
Main Memory	DDR3 DIMM Slots x 4 Max Memory Capacity 16GB Each DIMM supports 512MB/ 1GB/2GB/4GB DDR3		Dual Channel Mode DDR3 memory module Supports DDR3 1600(OC)/1333/1066/800 Registered DIMM and ECC DIMM is not supported
SATA 2	Integrated Serial ATA Controller		Data transfer rates up to 3.0 Gb/s. SATA Version 2.0 specification compliant
LAN	Realtek RTL8111DL		10 / 100 Mb/s / 1Gb/s auto negotiation Half / Full duplex capability
Sound Codec	ALC662		5.1 channels audio out High Definition Audio
Slots	PCI Express Gen2 x16 Slot PCI Express Gen2 x1 Slot PCI Slot	x2 x1 x2	Supports PCI-E Gen2 x16, x4 expansion cards Supports PCI-E Gen2 x1 expansion cards Supports PCI expansion cards
On Board Connectors	Printer Port Connector Serial Port Connector SATA Connector Front Panel Connector Front Audio Connector S/PDIF out Connector CPU Fan Header System Fan Header Clear CMOS Header USB Connector	x1 x1 x6 x1 x1 x1 x1 x2 x1 x3	Each connector supports 1 Printer port Connects to RS-232 Port Each connector supports 1 SATA devices Supports front panel facilities Supports front panel audio function Supports digital audio out function CPU Fan power supply (with Smart Fan function) System Fan Power supply Restore CMOS data to factory default Each connector supports 2 front panel USB ports

H55A+

SPEC			
	Consumer IR Connector	x1	Supports infrared function
	Power Connector (24pin)	x1	Connects to Power supply
	Power Connector (4pin)	x1	Connects to Power supply
Back Panel I/O	PS/2 Keyboard / Mouse	x1	Connects to PS/2 Keyboard / Mouse
	HDMI Port	x1	Connects to HDMI cable
	VGA Port	x1	Connect to D-SUB monitor
	DVI-D Port	x1	Connect to DVI monitor
	LAN Port	x1	Connect to RJ-45 ethernet cable
	USB Port	x4	Connect to USB devices
	Audio Jack	x3	Provide Audio-In/Out and microphone connection
Board Size	225(W) x 295 (L) mm		
OS Support	Windows XP / Vista / 7		BioStar reserves the right to add or remove support for any OS with or without notice

1.4 REAR PANEL CONNECTORS

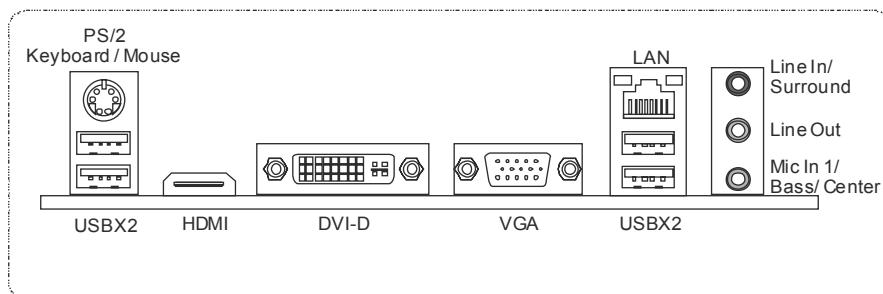

NOTE: HDMI / DVI-D / VGA Output require an Intel Core family processor with Intel Graphics Technology.

NOTE: Maximum resolution:
HDMI: 1920 x 1200 @60Hz
DVI: 1920 x 1200 @60Hz
VGA: 2048 x 1536 @75Hz

NOTE: This motherboard supports Multiple VGA output, and the configuration is as below:
(HDMI is not supported under DOS and BIOS setup.)


Display Devices	VGA + HDMI	VGA + DVI-D	HDMI + DVI-D
Enabled	O	O	X



Caution: HDMI / DVI-D can not be plugged at the same time, or there will be no video output.

Motherboard Manual


1.5 MOTHERBOARD LAYOUT

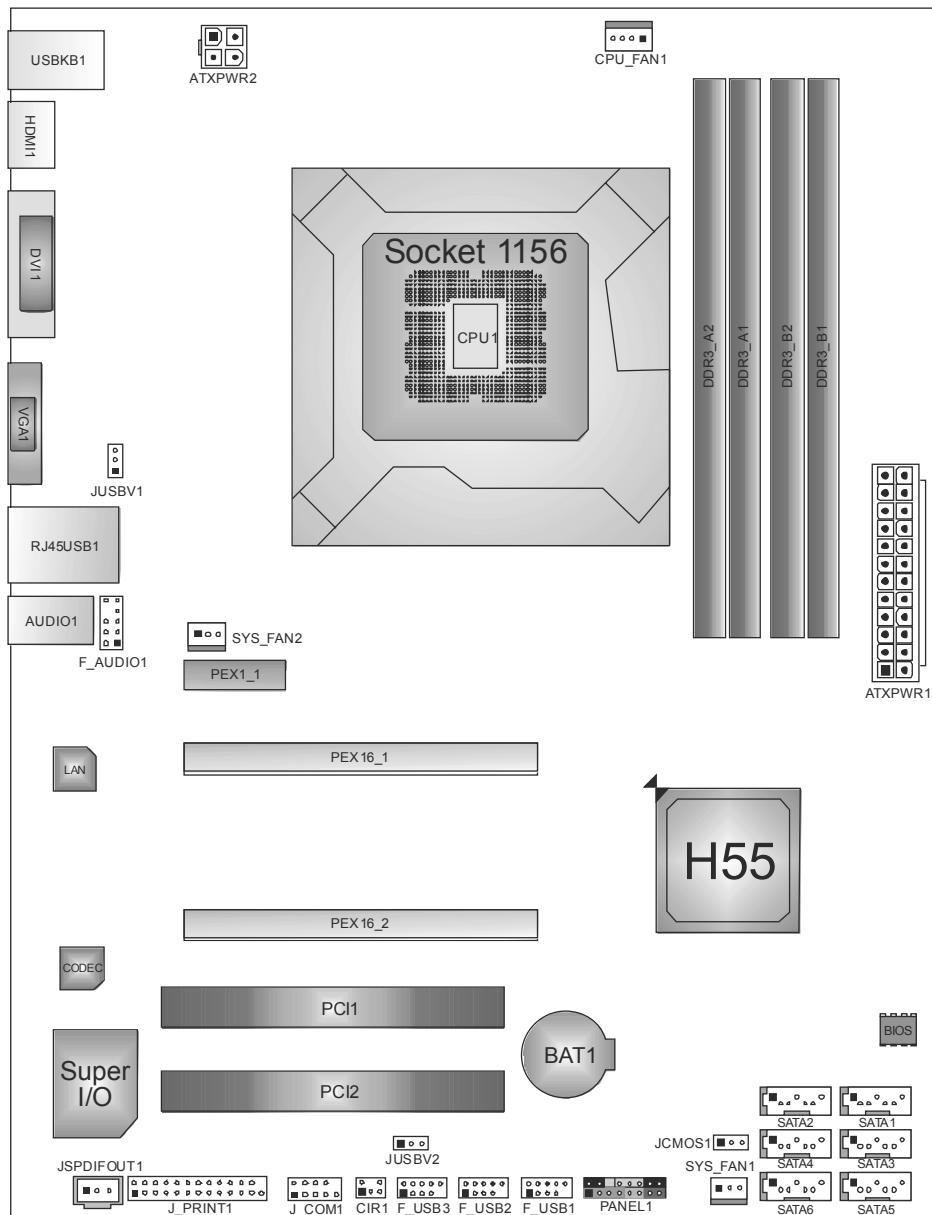

Note: ■ represents the 1st pin.

CHAPTER 2: HARDWARE INSTALLATION


2.1 INSTALLING CENTRAL PROCESSING UNIT (CPU)

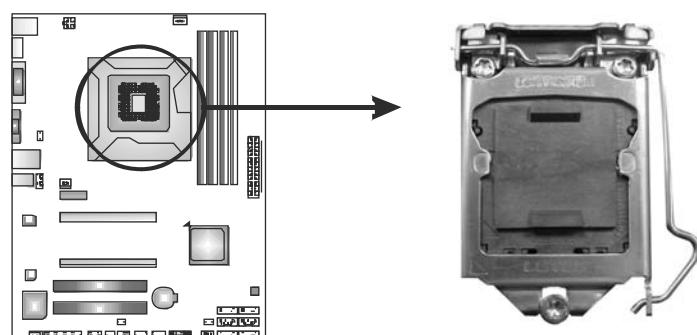


Special Notice:

Remove Pin Cap before installation, and make good preservation for future use. When the CPU is removed, cover the Pin Cap on the empty socket to ensure pin legs won't be damaged.

Step 1: Pull the socket locking lever out from the socket and then raise the lever up.

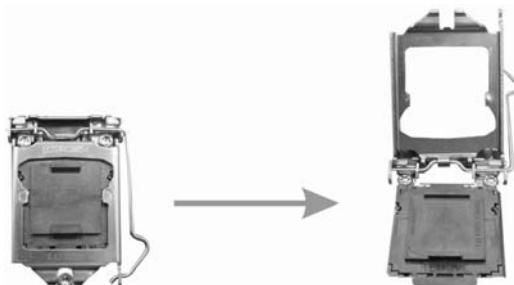


Step 2: Remove the Pin Cap.

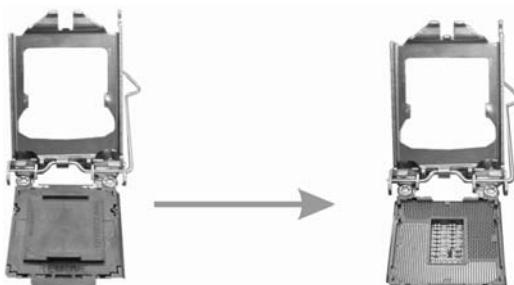

Motherboard Manual

Step 3: Look for the triangular cut edge on socket, and the golden dot on CPU should point forwards this triangular cut edge. The CPU will fit only in the correct orientation.

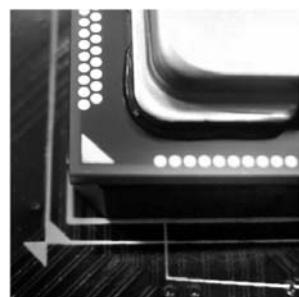

Step 4: Hold the CPU down firmly, and then lower the lever to locked position to complete the installation.




Step 5: Put the CPU Fan and heatsink assembly on the CPU and buckle it on the retention frame. Connect the CPU FAN power cable into the CPU_FAN1 to complete the installation.


2.2 FAN HEADERS

These fan headers support cooling-fans built in the computer. The fan cable and connector may be different due to the fan manufacturer. Connect the fan cable to the connector while matching the black wire to pin#1.

CPU_FAN1: CPU Fan Header

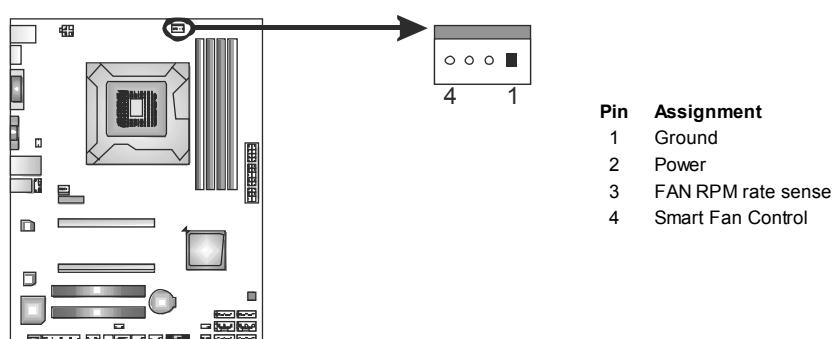

SYS_FAN1: System Fan Header

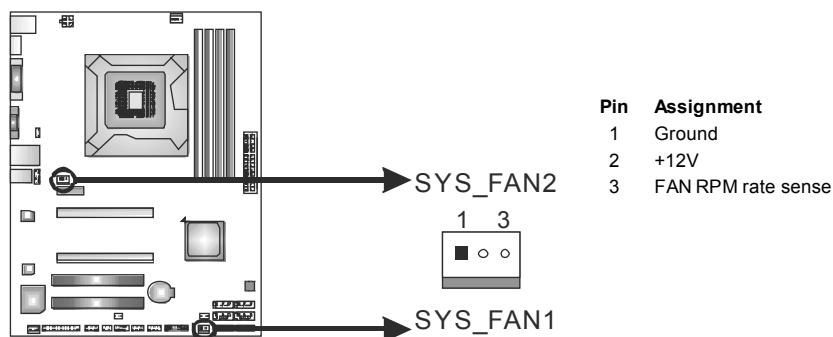


Note:


CPU_FAN1 supports 4-pin head connector; SYS_FAN1/2, 3-pin head one. When connecting with wires onto connectors, please note that the red wire is the positive and should be connected to pin#2, and the black wire is Ground and should be connected to GND.

2.3 INSTALLING SYSTEM MEMORY


A. DDR3 module

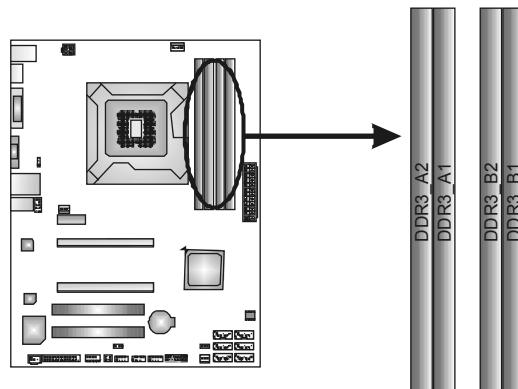

1. Unlock a DIMM slot by pressing the retaining clips outward. Align a DIMM on the slot such that the notch on the DIMM matches the break on the Slot.

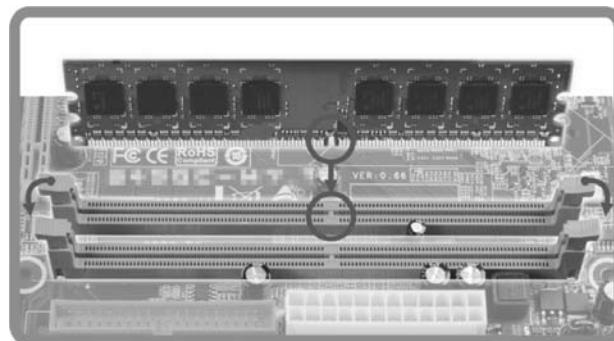

2. Insert the DIMM vertically and firmly into the slot until the retaining chip snap back in place and the DIMM is properly seated.

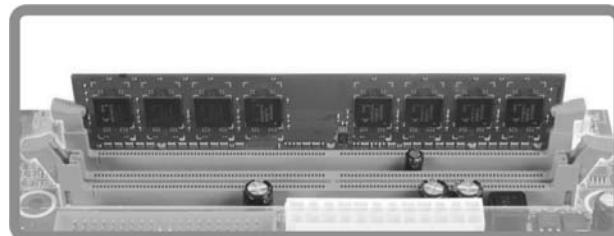

B. Memory Capacity

DIMM Socket Location	DDR3 Module	Total Memory Size
DDR3_A2	512MB/1GB/2GB/4GB	Max is 16GB.
DDR3_A1	512MB/1GB/2GB/4GB	
DDR3_B2	512MB/1GB/2GB/4GB	
DDR3_B1	512MB/1GB/2GB/4GB	

C. Dual Channel Memory Installation

Please refer to the following requirements to activate Dual Channel function:

Install memory module of the same density in pairs, shown in the table.

Dual Channel Status	DDR3_A2	DDR3_A1	DDR3_B2	DDR3_B1
Enabled	X	O	X	O
Enabled	O	O	O	O

(O means memory installed, X means memory not installed.)

The DRAM bus width of the memory module must be the same (x8 or x16)


Note:

Memory module must be installed in DDR3-A1 or DDR3-B1 to boot the system.

2.4 CONNECTORS AND SLOTS


SATA1~SATA6: Serial ATA Connectors

The motherboard has a PCI to SATA Controller with 6channels SATA interface, it satisfies the SATA 2.0 spec and with transfer rate of 3Gb/s.

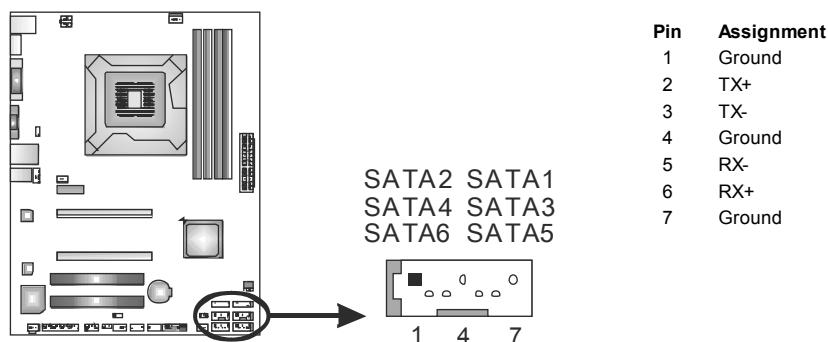

ATXPWR1: ATX Power Source Connector


This connector is for 24-pin power connector on the ATX power supply.

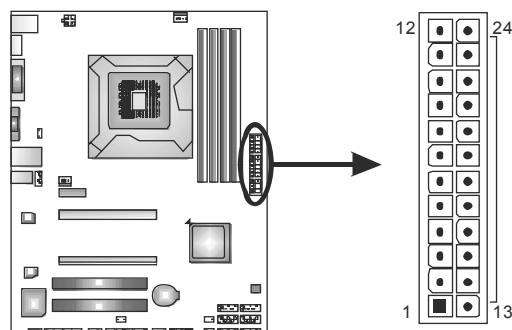

Pin	Assignment	Pin	Assignment
13	+3.3V	1	+3.3V
14	-12V	2	+3.3V
15	Ground	3	Ground
16	PS_ON	4	+5V
17	Ground	5	Ground
18	Ground	6	+5V
19	Ground	7	Ground
20	NC	8	PW_OK
21	+5V	9	Standby Voltage+5V
22	+5V	10	+12V
23	+5V	11	+12V
24	Ground	12	+3.3V

ATXPWR2: ATX Power Source Connector

Connecting this connector provides +12V to CPU power circuit.

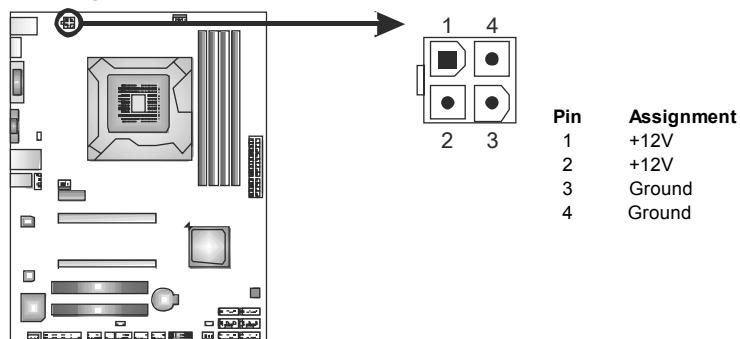


Note:

Before you power on the system, please make sure that both ATXPWR1 and ATXPWR2 connectors have been plugged-in.

PCI1/PCI2: Peripheral Component Interconnect Slots

This motherboard is equipped with 2 standard PCI slots. PCI stands for Peripheral Component Interconnect, and it is a bus standard for expansion cards. This PCI slot is designated as 32 bits.

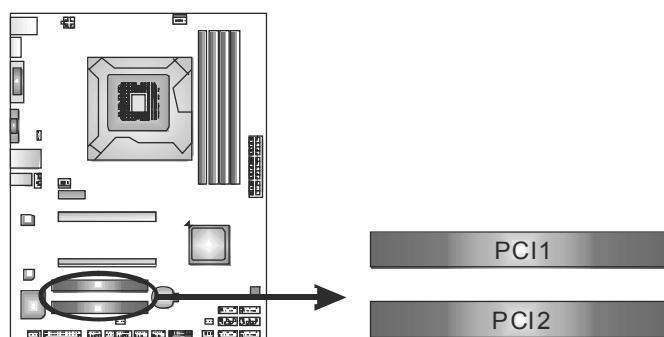

PEX16_1: PCI-Express Gen2 x16 Slot


- PCI-Express 2.0 compliant.
- Maximum theoretical realized bandwidth of 8GB/s simultaneously per direction, for an aggregate of 16GB/s totally.
- PCI-Express Gen2 supports a raw bit-rate of 5.0Gb/s on the data pins.

PEX16_2: PCI-Express Gen2 x4 Slot

- PCI-Express 2.0 compliant.
- Maximum theoretical realized bandwidth of 1GB/s simultaneously per direction, for an aggregate of 2GB/s totally.

PEX1_1: PCI-Express Gen2 x1 Slot

- PCI-Express 2.0 compliant.
- Data transfer bandwidth up to 250MB/s per direction; 500MB/s in total.
- PCI-Express supports a raw bit-rate of 2.5Gb/s on the data pins.

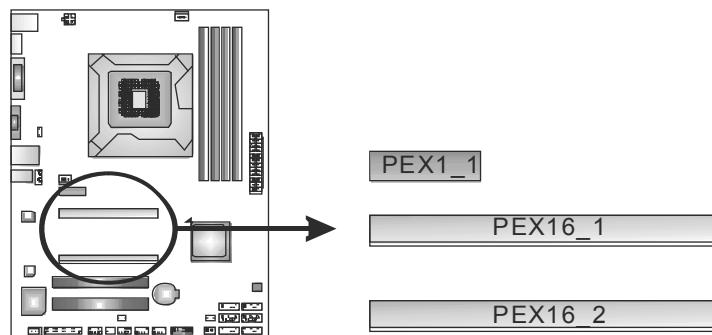

CHAPTER 3: HEADERS & JUMPERS SETUP

3.1 HOW TO SETUP JUMPERS


The illustration shows how to set up jumpers. When the jumper cap is placed on pins, the jumper is “close”, if not, that means the jumper is “open”.



3.2 DETAIL SETTINGS

PANEL1: Front Panel Header

This 16-pin connector includes Power-on, Reset, HDD LED, Power LED, and speaker connection. It allows user to connect the PC case’s front panel switch functions.

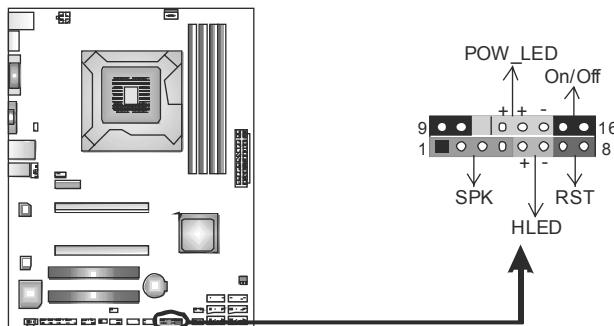


Pin	Assignment	Function	Pin	Assignment	Function
1	+5V	Speaker Connector	9	N/A	N/A
2	N/A		10	N/A	
3	N/A		11	N/A	
4	Speaker	Hard drive LED	12	Power LED (+)	Power LED
5	HDD LED (+)		13	Power LED (+)	
6	HDD LED (-)		14	Power LED (-)	
7	Ground		15	Power button	
8	Reset control	Reset button	16	Ground	Power-on button

Motherboard Manual

F_USB1/F_USB2/F_USB3: Headers for USB 2.0 Ports at Front Panel

This motherboard provides 3 USB 2.0 headers, which allows user to connect additional USB cable on the PC front panel, and also can be connected with internal USB devices, like USB card reader.

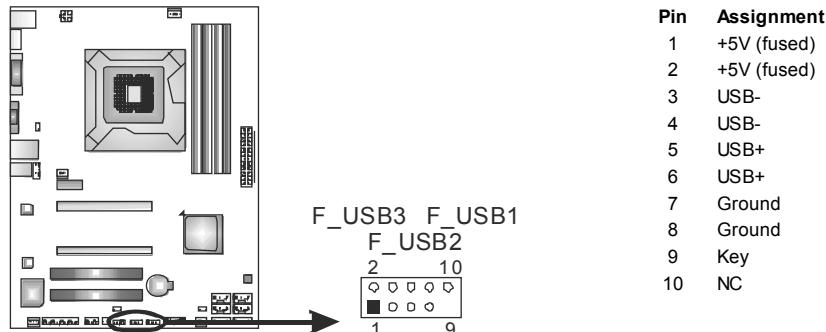

JUSBV1/JUSBV2: Power Source Headers for USB Ports

Pin 1-2 Close:


JUSBV1: +5V for USB ports at USBKB1/RJ45USB1.

JUSBV2: +5V for USB ports at F_USB1/F_USB2/F_USB3.

Pin 2-3 Close:


JUSBV1: +5V STB for USB ports at USBKB1/RJ45USB1.

JUSBV2: +5V STB for USB ports at F_USB1/F_USB2/F_USB3.

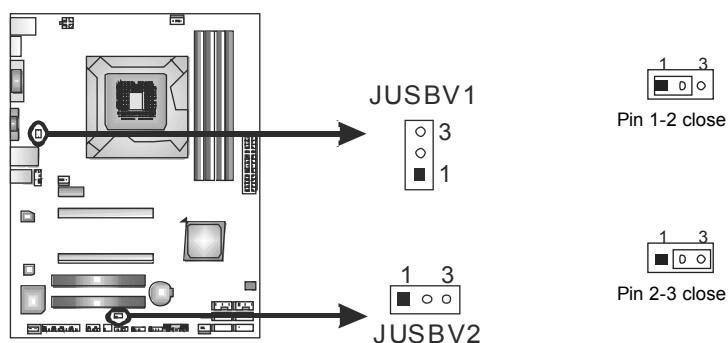


F_AUDIO1: Front Panel Audio Header

This header allows user to connect the front audio output cable with the PC front panel. This header allows only HD audio front panel connector, not AC'97.

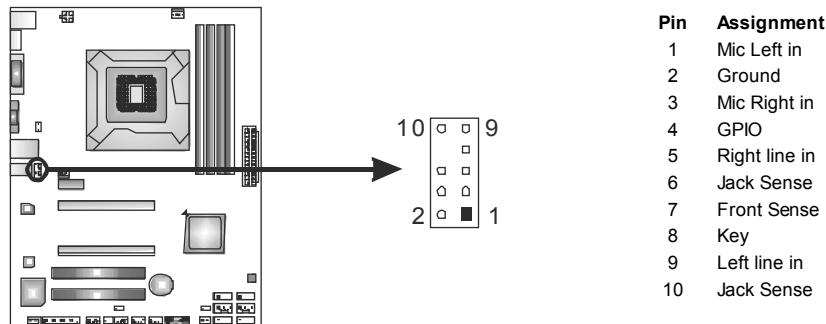**JSPDIFOUT1: Digital Audio-out Connector**


This connector allows user to connect the PCI bracket SPDIF output header.

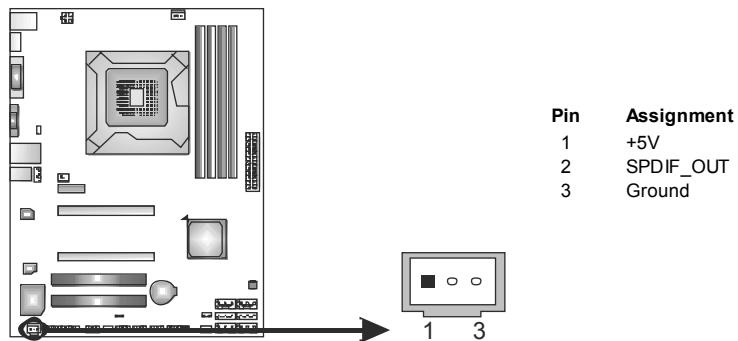

Motherboard Manual

J_PRINT1: Printer Port Connector


This header allows you to connector printer on the PC.

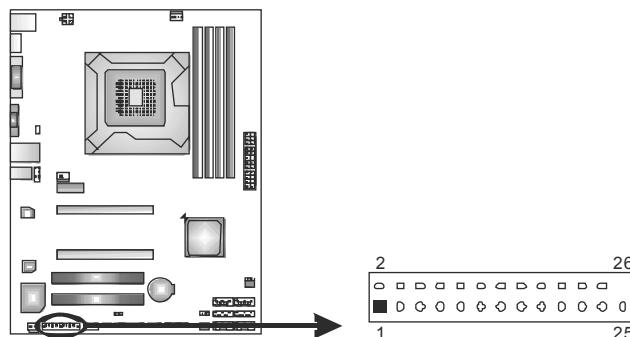

Pin	Assignment	Pin	Assignment
1	-Strobe	14	Ground
2	-ALF	15	Data 6
3	Data 0	16	Ground
4	-Error	17	Data 7
5	Data 1	18	Ground
6	-Init	19	-ACK
7	Data 2	20	Ground
8	-Scltin	21	Busy
9	Data 3	22	Ground
10	Ground	23	PE
11	Data 4	24	Ground
12	Ground	25	SCLT
13	Data 5	26	Key


J_COM1: Serial port Connector

The motherboard has a Serial Port Connector for connecting RS-232 Port.

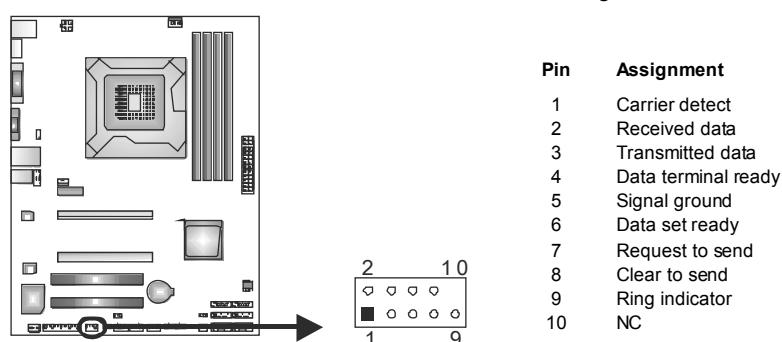

JCMOS1: Clear CMOS Header

Placing the jumper on pin2-3 allows user to restore the BIOS safe setting and the CMOS data. Please carefully follow the procedures to avoid damaging the motherboard.

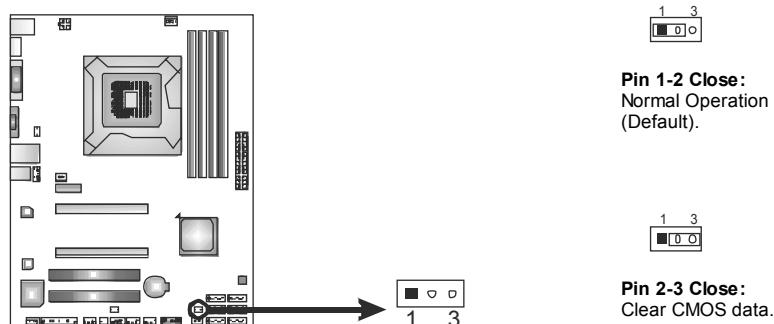


※ Clear CMOS Procedures:

1. Remove AC power line.
2. Set the jumper to “Pin 2-3 close”.
3. Wait for five seconds.
4. Set the jumper to “Pin 1-2 close”.
5. Power on the AC.
6. Reset your desired password or clear the CMOS data.

CIR1: Consumer IR Connector

This header is for infrared remote control and communication.

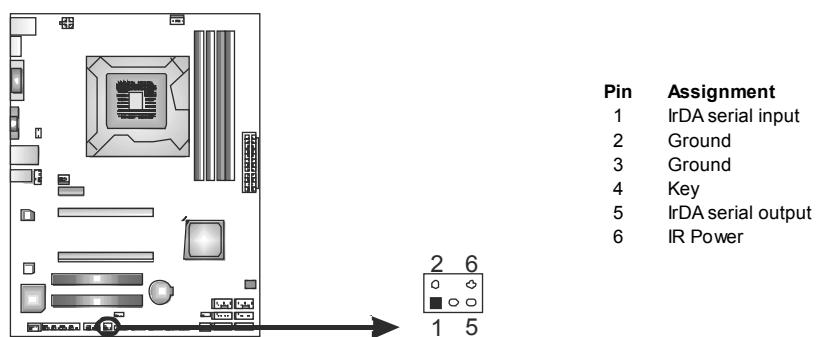

CHAPTER 4: USEFUL HELP

4.1 DRIVER INSTALLATION NOTE

After you installed your operating system, please insert the Fully Setup Driver CD into your optical drive and install the driver for better system performance.

You will see the following window after you insert the CD



The setup guide will auto detect your motherboard and operating system.

Note:

If this window didn't show up after you insert the Driver CD, please use file browser to locate and execute the file **SETUP.EXE** under your optical drive.

A. Driver Installation

To install the driver, please click on the Driver icon. The setup guide will list the compatible driver for your motherboard and operating system. Click on each device driver to launch the installation program.

B. Software Installation

To install the software, please click on the Software icon. The setup guide will list the software available for your system, click on each software title to launch the installation program.

C. Manual

Aside from the paperback manual, we also provide manual in the Driver CD. Click on the Manual icon to browse for available manual.

Note:

You will need Acrobat Reader to open the manual file. Please download the latest version of Acrobat Reader software from
<http://www.adobe.com/products/acrobat/readstep2.html>

4.2 SOFTWARE

Installing Software

1. Insert the Setup CD to the optical drive. The drivers installation program would appear if the Autorun function has been enabled.
2. Select **Software Installation**, and then click on the respective software title.
3. Follow the on-screen instructions to complete the installation.

Launching Software

After the installation process, you will see the software icon “eHOT Line” / “BIOS Update” appears on the desktop. Double-click the icon to launch the utility.

eHot-Line (Optional)

eHot-Line is a convenient utility that helps you to contact with our Tech-Support system. This utility will collect the system information which is useful for analyzing the problem you may have encountered, and then send these information to our tech-support department to help you fix the problem.




Before you use this utility, please set Outlook Express as your default e-mail client application program.

*represents important information that you must provide. Without this information, you may not be able to send out the mail.

This block will show the information which would be collected in the mail.

*Describe condition of your system.

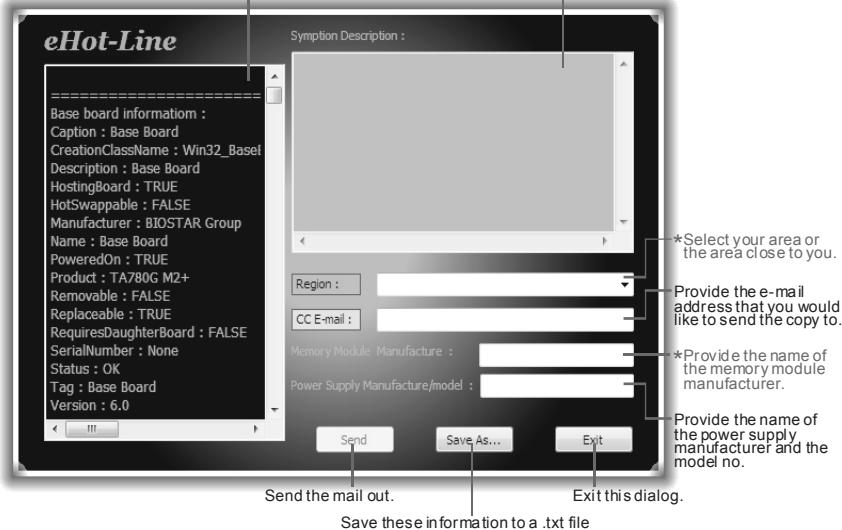

Send the mail out.
Save these information to a .txt file
Exit this dialog.


Motherboard Manual

After filling up this information, click “**Send**” to send the mail out. A warning dialog would appear asking for your confirmation; click “**Send**” to confirm or “**Do Not Send**” to cancel.



If you want to save this information to a .txt file, click “**Save As...**” and then you will see a saving dialog appears asking you to enter file name.

Enter the file name and then click “**Save**”. Your system information will be saved to a .txt file.

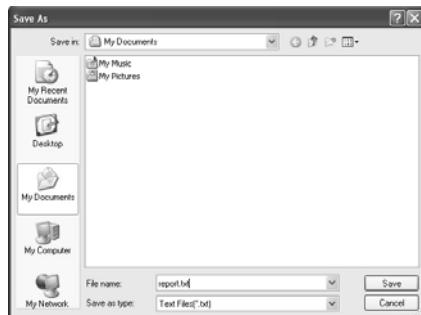

```
report - Notepad
File Edit Format View Help
=====
[REDACTED]
Caption : Base Board
CaptionLang : 0
Description : Base Board
Manufacturer : Biostar Group
Model : P35BAC05 BS
PowerOn : TRUE
Processor : Intel(R) Pentium(R) 4 Processor
SerialNumber : 1
Tag : Phoenix Award
Version : 1.0
=====
BIOS Information :
BIOS Version : Phoenix - AwardBIOS v6.00G
CurrentLanguage : English
InstallableLanguages : 1
Manufacturer : Phoenix Technologies, LTD
Name : Phoenix - AwardBIOS v6.00G
PartNumber : 20072205000000.00000+000
ReleaseDate : 2007/2/25 00:00:00
SMBIOSBIOSVersion : 6.00 PG
SMBIOSVersion : 1
SoftwareLevel : 1
SoftwareLevelName : Phoenix - AwardBIOS v6.00G
SoftwareLevelState : 1
Status : OK
TargetPortAtRuntime : 43324831
[REDACTED]
```

Open the saved .txt file, you will see your system information including motherboard/BIOS/CPU/video/device/OS information. This information is also concluded in the sent mail.




We will not share customer's data with any other third parties, so please feel free to provide your system information while using eHot-Line service.



If you are not using Outlook Express as your default e-mail client application, you may need to save the system information to a .txt file and send the file to our tech support with other e-mail application. Go to the following web <http://www.biostar.com.tw/app/en-us/about/contact.php> for getting our contact information.


BIOS Update

BIOS Update is a convenient utility which allows you to update your motherboard BIOS under Windows system.

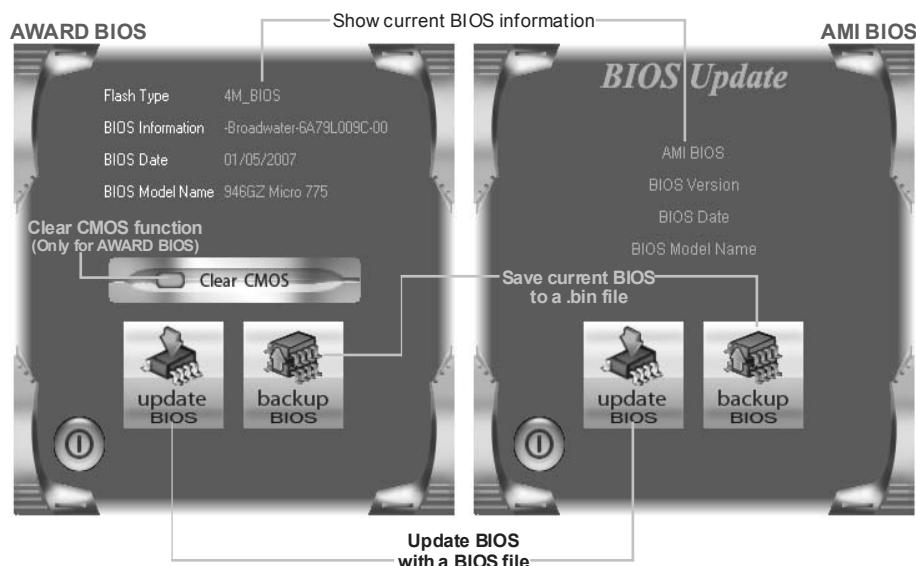

<Backup BIOS>

Once click on this button, the saving dialog will show. Choose the position to save file and enter file name. (We recommend that the file name should be English/number and no longer than 7 characters.)
Then click **Save**.

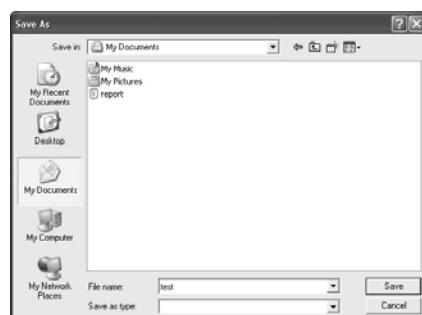


Motherboard Manual

<Update BIOS>



Before doing this, please download the proper BIOS file from the website.

For AWARD BIOS, update BIOS procedure should be run with Clear CMOS function, so please check on Clear CMOS first.

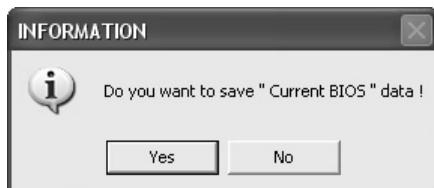


Then click Update BIOS button, a dialog will show for asking you backup current BIOS. Click **Yes** for BIOS backup and refer to the Backup BIOS procedure; or click **No** to skip this procedure.

After the BIOS Backup procedure, the open dialog will show for requesting the BIOS file which is going to be updated. Please choose the proper BIOS file for updating, then click on **Open**.

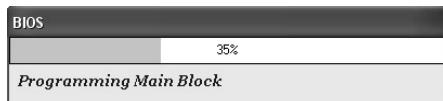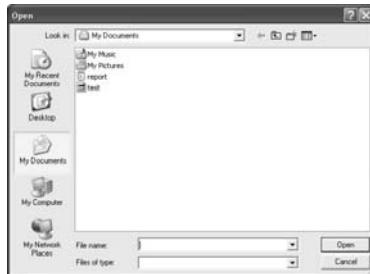

The utility will update BIOS with the proper BIOS file, and this process may take minutes. Please do not open any other applications during this process.

After the BIOS Update process, click on **OK** to restart the system.

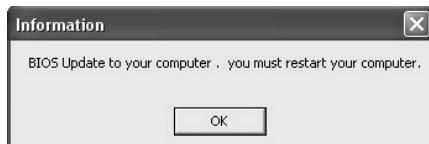

While the system boots up and the full screen logo shows, press **Del** <Delete> key to enter BIOS setup.

In the BIOS setup, use the **Load Optimized Defaults** function and then **Save and Exit Setup** to exit BIOS setup. BIOS Update is completed.



All the information and content above about the software are subject to be changed without notice. For better performance, the software is being continuously updated. The information and pictures described above are for your reference only. The actual information and settings on board may be slightly different from this manual.

4.3 EXTRA INFORMATION

CPU Overheated

If the system shutdown automatically after power on system for seconds, that means the CPU protection function has been activated.

When the CPU is over heated, the motherboard will shutdown automatically to avoid a damage of the CPU, and the system may not power on again.

In this case, please double check:

1. The CPU cooler surface is placed evenly with the CPU surface.
2. CPU fan is rotated normally.
3. CPU fan speed is fulfilling with the CPU speed.

After confirmed, please follow steps below to relief the CPU protection function.

1. Remove the power cord from power supply for seconds.
2. Wait for seconds.
3. Plug in the power cord and boot up the system.

Or you can:

1. Clear the CMOS data.
(See “Close CMOS Header: JCMOS1” section)
2. Wait for seconds.
3. Power on the system again.

BIO-Flasher

BIO-Flasher is a BIOS flashing utility providing you an easy and simple way to update your BIOS via USB pen drive or floppy disk.

The BIO-Flasher is built in the BIOS chip. To enter the utility, **press <F12> during the Power-On Self Tests (POST) procedure while booting up.**

Updating BIOS with BIO-Flasher

1. Go to the website to download the latest BIOS file for the motherboard.
2. Then, save the BIOS file into a USB pen drive or a floppy disk.
3. Insert the USB pen drive or the floppy disk that contains the BIOS file to the USB port or the floppy disk drive.
4. Power on or reset the computer and then press **<F12>** during the **POST** process.
A select dialog as the picture on the right appears.
Select the device contains the BIOS file and press **<Enter>** to enter the utility.



5. The utility will show the BIOS files and their respective information. Select the proper BIOS file and press **<Enter>** then **<Y>** to perform the BIOS update process.

6. After the update process, the utility will ask you to reboot the system. Press **<Y>** to proceed. BIOS update completes.



- This utility only allows storage device with FAT32/16 format and single partition.
- Shutting down or resetting the system while updating the BIOS will lead to system boot failure.

4.4 AMI BIOS BEEP CODE

Boot Block Beep Codes

Number of Beeps	Description
1	No media present. (Insert diskette in floppy drive A:)
2	"AMIBOOT.ROM" file not found in root directory of diskette in A:
3	Insert next diskette if multiple diskettes are used for recovery
4	Flash Programming successful
5	File read error
7	No Flash EPROM detected
10	Flash Erase error
11	Flash Program error
12	"AMIBOOT.ROM" file size error
13	BIOS ROM image mismatch (file layout does not match image present in flash device)

POST BIOS Beep Codes

Number of Beeps	Description
1	Memory refresh timer error
3	Base memory read/write test error
6	Keyboard controller BAT command failed
7	General exception error (processor exception interrupt error)
8	Display memory error (system video adapter)

Troubleshooting POST BIOS Beep Codes

Number of Beeps	Troubleshooting Action
1, 3	Reseat the memory, or replace with known good modules.
6, 7	Fatal error indicating a serious problem with the system. Consult your system manufacturer. Before declaring the motherboard beyond all hope, eliminate the possibility of interference by a malfunctioning add-in card. Remove all expansion cards except the video adapter. <ul style="list-style-type: none"> ● If beep codes are generated when all other expansion cards are absent, consult your system manufacturer's technical support. ● If beep codes are not generated when all other expansion cards are absent, one of the add-in cards is causing the malfunction. Insert the cards back into the system one at a time until the problem happens again. This will reveal the malfunctioning card.
8	If the system video adapter is an add-in card, replace or reseat the video adapter. If the video adapter is an integrated part of the system board, the board may be faulty.

4.5 TROUBLESHOOTING

Probable	Solution
1. There is no power in the system. Power LED does not shine; the fan of the power supply does not work 2. Indicator light on keyboard does not shine.	1. Make sure power cable is securely plugged in. 2. Replace cable. 3. Contact technical support.
System is inoperative. Keyboard lights are on, power indicator lights are lit, and hard drives are running.	Using even pressure on both ends of the DIMM, press down firmly until the module snaps into place.
System does not boot from a hard disk drive, but can be booted from optical drive.	1. Check cable running from disk to disk controller board. Make sure both ends are securely plugged in; check the drive type in the standard CMOS setup. 2. Backing up the hard drive is extremely important. All hard disks are capable of breaking down at any time.
System only boots from an optical drive. Hard disks can be read, applications can be used, but system fails to boot from a hard disk.	1. Back up data and applications files. 2. Reformat the hard drive. Re-install applications and data using backup disks.
Screen message shows "Invalid Configuration" or "CMOS Failure."	Review system's equipment. Make sure correct information is in setup.
System cannot boot after user installs a second hard drive.	1. Set master/slave jumpers correctly. 2. Run SETUP program and select correct drive types. Call the drive manufacturers for compatibility with other drives.

H55A+

This page is intentionally left blank.

Motherboard Manual**APPENDIX: SPEC IN OTHER LANGUAGES****GERMAN**

Spezifikationen		
CPU	Socket 1156 Intel Core i7 / i5 / i3 / Pentium Prozessoren	Unterstützt Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture-64 / Extended Memory 64 Technology / Virtualization Technology
Chipsatz	Intel H55	
Super E/A	ITE 8721 Bietet die häufig verwendeten alten Super E/A-Funktionen. Low Pin Count-Schnittstelle	Umgebungskontrolle, Hardware-Überwachung Lüfterdrehzahl-Controller/-Überwachung "Smart Guardian"-Funktion von ITE
Arbeitsspeicher	DDR3 DIMM-Steckplätze x 4 Max. 16GB Arbeitsspeicher Jeder DIMM unterstützt 512MB/ 1GB/2GB/4GB DDR3.	Dual-Kanal DDR3 Speichermodul Unterstützt DDR3 1600(OC)/1333/1066/800 registrierte DIMMs. ECC DIMMs werden nicht unterstützt.
SATA	Integrierter Serial ATA-Controller	Datentransferrate bis zu 3.0Gb/s Konform mit der SATA-Spezifikation Version 2.0.
LAN	Realtek RTL8111DL	10 / 100 / 1000 Mb/s Auto-Negotiation Halb-/ Voll duplex-Funktion
HD Audio-Unter- stützung	ALC662	Unterstützt High-Definition Audio 5.1-Kanal-Audioausgabe
Stckplätze	PCI Express Gen2 x16 Steckplatz x2 PCI Express Gen2 x1 Steckplatz x1 PCI Steckplatz x2	
Onboard-Anschluss	Druckeranschluss Anschluss x1 Serieller Anschluss x1 SATA-Anschluss x6	Jeder Anschluss unterstützt 1 Druckeranschluss Jeder Anschluss unterstützt 1 SATA-Laufwerk

H55A+

Spezifikationen			
Fronttafelanschluss Front-Audioanschluss S/PDIF- Ausgangsanschluss CPU-Lüfter-Sockel System-Lüfter-Sockel "CMOS löschen"-Sockel USB-Anschluss Verbraucher-IR Anschluss Stromanschluss (24-polig) Stromanschluss (4-polig)	x1	Unterstützt die Fronttafel-funktionen	
	x1	Unterstützt die Fronttafel-Audioanschlussfunktion	
	x1	Unterstützt die digitale Audioausgabefunktion	
	x1	CPU-Lüfterstromversorgungsanschluss (mit Smart Fan-Funktion)	
	x2	System-Lüfter-Stromversorgungsanschluss	
	x1		
	x3	Jeder Anschluss unterstützt 2 Fronttafel-USB-Anschlüsse	
	x1		
	x1		
	x1		
Rückseiten-E/A PS/2-Tastatur / Maus HDMI-Anschluss VGA-Anschluss DVI-D-Anschluss LAN-Anschluss USB-Anschluss Audioanschluss	x1		
	x4		
	x3		
Platinengröße	225mm (B) X 295 mm (L)		
OS-Unterstützung	Windows XP / Vista / 7		Biostar behält sich das Recht vor, ohne Ankündigung die Unterstützung für ein Betriebssystem hinzuzufügen oder zu entfernen.

Motherboard Manual

FRENCH

SPEC		
UC	Socket 1156 Processeurs Intel Core i7 / i5 / i3/ Pentium	Prend en charge les technologies d'exécution de bit de désactivation / Intel SpeedStep® optimisée/ d'architecture Intel 64 / de mémoire étendue 64 / de virtualisation
Chipset	Intel H55	
Super E/S	ITE 8721 Fournit la fonctionnalité de Super E/S patrimoniales la plus utilisée. Interface à faible compte de broches	Initiatives de contrôle environnementales, Moniteur de matériel Contrôleur /moniteur de vitesse de ventilateur Fonction "Gardien intelligent" de l'ITE
Mémoire principale	Fentes DDR3 DIMM x 4 Capacité mémoire maximale de 16 Go Chaque DIMM prend en charge des DDR3 de 512Mo/1Go/2Go/4Go	Module de mémoire DDR3 à mode à double voie Prend en charge la DDR3 1600(OC)/1333/1066/800 Les DIMM à registres et DIMM avec code correcteurs d'erreurs ne sont pas prises en charge
SATA	Contrôleur Serial ATA intégré	Taux de transfert jusqu'à 3.0Go/s. Conforme à la spécification SATA Version 2.0
LAN	Realtek RTL8111DL	10 / 100 / 1000 Mb/s négociation automatique Half / Full duplex capability
Prise en charge audio HD	ALC662	Prise en charge de l'audio haute définition Sortie audio à 5.1 voies
Fentes	Fente PCI Express Gen2 x16 Fente PCI Express Gen2 x1 Fente PCI	x2 x1 x2
Connecteur embarqué	Connecteur de Port d'imprimante Port série Connecteur SATA	x1 x1 x6
		Chaque connector prend en charge 1 Port d'imprimante Chaque connecteur prend en charge 1 périphérique SATA

H55A+

SPEC			
	Connecteur du panneau avant x1	x1	Prend en charge les équipements du panneau avant
	Connecteur Audio du panneau avant x1	x1	Prend en charge la fonction audio du panneau avant
	Connecteur de sortie S/PDIF x1	x1	Prend en charge la fonction de sortie audio numérique
	Embase de ventilateur UC x1	x1	Alimentation électrique du ventilateur UC (avec fonction de ventilateur intelligent)
	Embase de ventilateur système x2	x2	Alimentation électrique du ventilateur système
	Embase d'effacement CMOS x1	x1	
	Connecteur USB x3	x3	Chaque connecteur prend en charge 2 ports USB de panneau avant
	Connecteur de IR du consommateur x1	x1	
	Connecteur d'alimentation (24 broches) x1	x1	
	Connecteur d'alimentation (4 broches) x1	x1	
E/S du panneau arrière	Clavier / Souris PS/2 x1	x1	
	Port HDMI x1	x1	
	Port VGA x1	x1	
	Port DVI-D x1	x1	
	Port LAN x1	x1	
	Port USB x4	x4	
	Fiche audio x3	x3	
Dimensions de la carte	225mm (l) X 295 mm (H)		
Support SE	Windows XP / Vista / 7		BioStar se réserve le droit d'ajouter ou de supprimer le support de SE avec ou sans préavis.

Motherboard Manual

ITALIAN

SPECIFICA		
CPU	Socket 1156 Processore Intel Core i7 / i5 / i3/ Pentium	Supporto di Execute Disable Bit / Enhanced Intel SpeedStep® / Architettura Intel 64 / Tecnologia Extended Memory 64 / Tecnologia Virtualization
Chipset	Intel H55	
Super I/O	ITE 8721 Fornisce le funzionalità legacy Super I/O usate più comunemente. Interfaccia LPC (Low Pin Count)	Funzioni di controllo dell'ambiente: Monitoraggio hardware Controller / Monitoraggio velocità ventolina Funzione "Smart Guardian" di ITE
Memoria principale	Alloggi DIMM DDR3 x 4 Capacità massima della memoria 16GB Ciascun DIMM supporta DDR3 512MB/1GB/2GB/4GB	Modulo di memoria DDR3 a canale doppio Supporto di DDR3 1600(OC)/1333/1066/800 DIMM registrati e DIMM ECC non sono supportati
SATA	Controller Serial ATA integrato	Velocità di trasferimento dei dati fino a 3.0Gb/s. Compatibile specifiche SATA Versione 2.0.
LAN	Realtek RTL8111DL	Negoziazione automatica 10 / 100 / 1000 Mb/s Capacità Half / Full Duplex
Supporto audio HD	ALC662	Supporto audio High-Definition (HD) Uscita audio 5.1 canali
Alloggi	Alloggio PCI Express Gen2 x16 x2 Alloggio PCI Express Gen2 x1 x1 Alloggio PCI x2	
Connettori su scheda	Connettore Porta stampante x1 Porta seriale x1 Connettore SATA x6 Connettore pannello frontale x1 Connettore audio frontale x1	Ciascun connettore supporta 1 Porta stampante Ciascun connettore supporta 1 unità SATA Supporta i servizi del pannello frontale Supporta la funzione audio pannello frontale

H55A+

SPECIFICA			
	Connettore output SPDIF	x1	Supporta la funzione d'output audio digitale
	Collettore ventolina CPU	x1	Alimentazione ventolina CPU (con funzione Smart Fan)
	Collettore ventolina sistema	x2	Alimentazione ventolina di sistema
	Collettore cancellazione CMOS	x1	
	Connettore USB	x3	Ciascun connettore supporta 2 porte USB pannello frontale
	Connettore IR del consumatore	x1	
	Connettore alimentazione (24 pin)	x1	
	Connettore alimentazione (4 pin)	x1	
I/O pannello posteriore	Tastiera / Mouse PS/2	x1	
	Porta HDMI	x1	
	Porta VGA	x1	
	Porta DVI-D	x1	
	Porta LAN	x1	
	Porta USB	x4	
	Connettore audio	x3	
Dimensioni scheda	225mm (larghezza) x 295 mm (altezza)		
Sistemi operativi supportati	Windows XP / Vista / 7		Biostar si riserva il diritto di aggiungere o rimuovere il supporto di qualsiasi sistema operativo senza preavviso.

Motherboard Manual

SPANISH

Especificación			
CPU	Socket 1156 Procesador Intel Core i7 / i5 / i3 / Pentium	Admite Bit de deshabilitación de ejecución / Intel SpeedStep® Mejorado / Intel Architecture-64 / Tecnología Extended Memory 64 / Tecnología de virtualización	
Conjunto de chips	Intel H55		
Súper E/S	ITE 8721 Le ofrece las funcionalidades heredadas de uso más común Súper E/S. Interfaz de cuenta Low Pin	Iniciativas de control de entorno, Monitor hardware Controlador/monitor de velocidad de ventilador Función "Guardia inteligente" de ITE	
Memoria principal	Ranuras DIMM DDR3 x 4 Capacidad máxima de memoria de 16GB Cada DIMM admite DDR de 512MB/1GB/2GB/4GB	Módulo de memoria DDR3 de canal Doble Admite DDR3 de 1600(OC)/1333/1066/800 No admite DIMM registrados o DIMM compatibles con ECC	
SATA	Controlador ATA Serie Integrado	Tasas de transferencia de hasta 3.0 Gb/s. Compatible con la versión SATA 2.0.	
Red Local	Realtek RTL8111DL	Negociación de 10 / 100 / 1000 Mb/s Funciones Half / Full dúplex	
Soporte de sonido HD	ALC662	Soporte de sonido de Alta Definición Salida de sonido de 5.1 canales	
Ranuras	Ranura PCI Express Gen2 x16 Ranura PCI express Gen2 x1 Ranura PCI	X2 X1 X2	
Conectores en placa	Conector Puerto de impresora Puerto serie Conector SATA Conector de panel frontal	X1 X1 X6 X1	Cada conector soporta 1 Puerto de impresora Cada conector soporta 1 dispositivos SATA Soporta instalaciones en el panel frontal

H55A+

Especificación			
	Conejero de sonido frontal	X1	Soporta funciones de sonido en el panel frontal
	Conejero de salida S/PDIF	X1	Soporta función de salida de sonido digital
	Cabecera de ventilador de CPU	X1	Fuente de alimentación de ventilador de CPU (con función Smart Fan)
	Cabecera de ventilador de sistema	X2	Fuente de alimentación de ventilador de sistema
	Cabecera de borrado de CMOS	X1	
	Conejero USB	X3	Cada conector soporta 2 puertos USB frontales
	Conejero de IR del consumidor	X1	
	Conejero de alimentación (24 patillas)	X1	
	Conejero de alimentación (4 patillas)	X1	
Panel trasero de E/S	Teclado / Ratón PS/2	X1	
	Ratón HDMI	X1	
	Puerto VGA	X1	
	Puerto DVI-D	X1	
	Puerto de red local	X1	
	Puerto USB	X4	
	Conejero de sonido	X3	
Tamaño de la placa	225mm. (A) X 295 Mm. (H)		
Soporte de sistema operativo	Windows XP / Vista / 7	Biostar se reserva el derecho de añadir o retirar el soporte de cualquier SO con o sin aviso previo.	

Motherboard Manual

PORTUGUESE

ESPECIFICAÇÕES			
CPU	Socket 1156 Processador Intel Core i7 / i5 / i3/ Pentium		Supostra as tecnologias Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Arquitecture -64 / Extended Memory 64 / Virtualization
Chipset	Intel H55		
Especificação Super I/O	ITE 8721 Proporciona as funcionalidades mais utilizadas em termos da especificação Super I/O. Interface LPC (Low Pin Count).		Iniciativas para controlo do ambiente Monitorização do hardware Controlador/Monitor da velocidade da ventoinha Função "Smart Guardian" da ITE
Memória principal	Ranhuras DIMM DDR3 x 4 Capacidade máxima de memória: 16 GB Cada módulo DIMM suporta uma memória DDR3 de 512MB/ 1GB/2GB/4GB		Módulo de memória DDR3 de canal duplo Suporta módulos DDR3 1600(OC)/1333/1066/800 Os módulos DIMM registados e os DIMM ECC não são suportados
SATA	Controlador Serial ATA integrado		Velocidades de transmissão de dados até 3.0 Gb/s. Compatibilidade com a especificação SATA versão 2.0.
LAN	Realtek RTL8111DL		Auto negociação de 10 / 100 / 1000 Mb/s Capacidade semi/full-duplex
Suporte para áudio de alta definição	ALC662		Supostra a especificação High-Definition Audio Saída de áudio de 5.1 canais
Ranhuras	Ranhura PCI Express Gen2 x16 Ranhura PCI Express Gen2 x1 Ranhura PCI	x2 x1 x2	
Conectores na placa	Conector da para impressora Porta série Conector SATA	x1 x1 x6	Cada conector suporta 1 Porta para impressora Cada conector suporta 1 dispositivo SATA

H55A+

ESPECIFICAÇÕES			
	Conecotor do painel frontal	x1	Para suporte de várias funções no painel frontal
	Conecotor de áudio frontal	x1	Suporta a função de áudio no painel frontal
	Conecotor de saída S/PDIF	x1	Suporta a saída de áudio digital
	Conecotor da ventoinha da CPU	x1	Alimentação da ventoinha da CPU (com a função Smart Fan)
	Conecotor da ventoinha do sistema	x2	Alimentação da ventoinha do sistema
	Conecotor para limpeza do CMOS	x1	
	Conecotor USB	x3	Cada coneccotor suporta 2 portas USB no painel frontal
	Conecotor de IR do consumidor	x1	
	Conecotor de alimentação (24 pinos)	x1	
	Conecotor de alimentação (4 pinos)	x1	
Entradas/Saídas no painel traseiro	Teclado / Rato PS/2	x1	
	Porta HDMI	x1	
	Porta VGA	x1	
	Porta DVI-D	x1	
	Porta LAN	x1	
	Porta USB	x4	
	Tomada de áudio	x3	
Tamanho da placa	225mm (L) X 295 mm (A)		
Sistemas operativos suportados	Windows XP / Vista / 7		A Biostar reserva-se o direito de adicionar ou remover suporte para qualquer sistema operativo com ou sem aviso prévio.

Motherboard Manual

POLISH

SPEC			
Procesor	Socket 1156 Procesor Intel Core i7 / i5 / i3/ Pentium	Obsługa Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture-64 / Extended Memory 64 Technology / Virtualization Technology	
Chipset	Intel H55		
Pamięć główna	Gniazda DDR3 DIMM x 4 Maks. wielkość pamięci 16GB Każde gniazdo DIMM obsługuje moduły 512MB/1GB/2GB/4GB DDR3	Moduł pamięci DDR3 z trybem podwójnego kanału Obsługa DDR3 1600(OC)/1333/1066/800 Brak obsługi Registered DIMM oraz ECC DIMM	
Super I/O	ITE 8721 Zapewnia najbardziej powszechnie funkcje Super I/O. Interfejs Low Pin Count	Funkcje kontroli warunków pracy, Monitor H/W Kontroler/Monitor prędkości wentylatora Funkcja ITE "Smart Guardian"	
SATA	Zintegrowany kontroler Serial ATA	Transfer danych do 3.0 Gb/s. Zgodność ze specyfikacją SATA w wersji 2.0.	
LAN	Realtek RTL8111DL	10 / 100 / 1000 Mb/s z automatyczną negocjacją szybkości Działanie w trybie połowicznego / pełnego dupleksu	
Obsługa audio HD	ALC662	Obsługa High-Definition Audio 5.1 kanałowe wyjście audio	
Gniazda	Gniazdo PCI Express Gen2 x16 Gniazdo PCI Express Gen2 x1 Gniazdo PCI	x2 x1 x2	
Złącza wbudowane	Złącze Port drukarki Port szeregowy Złącze SATA Złącze panela przedniego	x1 x1 x6 x1	Każde złącze obsługuje 1 Port drukarki Każde złącze obsługuje 1 urządzenie SATA Obsługa elementów panela przedniego

H55A+

SPEC			
	Przednie złącze audio x1 Złącze wyjścia S/PDIF x1 Złącze główkowe wentylatora procesora x1 Złącze główkowe wentylatora systemowego x2 Złącze główkowe kasowania CMOS x1 Złącze USB x3 Złącze Konsument IR x1 Złącze zasilania (24 pinowe) x1 Złącze zasilania (4 pinowe) x1		Obsługa funkcji audio na panelu przednim Obsługa funkcji cyfrowego wyjścia audio Zasilanie wentylatora procesora (z funkcją Smart Fan) Zasilanie wentylatora systemowego Każde złącze obsługuje 2 porty USB na panelu przednim
Back Panel I/O	Klawiatura / Mysz PS/2 x1 Port HDMI x1 Port VGA x1 Port DVI-D x1 Port LAN x1 Port USB x4 Gniazdo audio x3		
Wymiary płyty	225mm (S) X 295 mm (W)		
Obsługa systemu operacyjnego	Windows XP / Vista / 7		Biostar zastrzega sobie prawo dodawania lub odwoływania obsługi dowolnego systemu operacyjnego bez powiadomienia.

Motherboard Manual

RUSSIAN

СПЕЦ			
CPU (центральн ый процессор)	Socket 1156 Процессор Intel Core i7 / i5 / i3 / Pentium	Поддержка технологий Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture-64 / Extended Memory 64 Technology / технологии виртуализация	
Набор микросхем	Intel H55		
Основная память	Слоты DDR3 DIMM x 4 Максимальная ёмкость памяти 16 ГБ Каждый модуль DIMM поддерживает 512МБ/1ГБ/2ГБ/4ГБ DDR3	Модуль памяти с двухканальным режимом DDR3 Поддержка DDR3 1600(OC)/1333/1066/800 Не поддерживает зарегистрированные модули DIMM and ECC DIMM	
Super I/O	ITE 8721 Обеспечивает наиболее используемые действующие функциональные возможности Super I/O. Интерфейс с низким количеством выводов	Инициативы по охране окружающей среды, Аппаратный монитор Регулятор скорости вентилятора/ монитор Функция ITE "Smart Guardian" (Интеллектуальная защита)	
SATA	Встроенное последовательное устройство управления ATA	скорость передачи данных до 3.0 гигабит/с. Соответствие спецификации SATA версия 2.0.	
Локальная сеть	Realtek RTL8111DL	Автоматическое согласование 10 / 100 / 1000 Мб/с Частичная / полная дуплексная способность	
Звуковая поддержка жесткого диска	ALC662	Звуковая поддержка High-Definition 5.1канальный звуковой выход	
Слоты	Слот PCI Express Gen2 x16 Слот PCI Express Gen2 x1 Слот PCI	x2 x1 x2	
Встроенный разъём	Разъём Порт подключения принтера Последовательный порт Разъём SATA	x1 x1 x6	Каждый разъём поддерживает 1 Порт подключения принтера Каждый разъём поддерживает 1 устройство SATA

H55A+

СПЕЦ			
	Разъём на лицевой панели Входной звуковой разъём Разъём вывода для S/PDIF Контактирующее приспособление вентилятора центрального процессора Контактирующее приспособление вентилятора системы Открытое контактирующее приспособление CMOS USB-разъём Разъём едока ИКБЫЙ Разъем питания (24 вывод) Разъем питания (4 вывод)	x1 x1 x1 x1 x2 x1 x3 x1 x1 x1	Поддержка устройств на лицевой панели Поддержка звуковых функций на лицевой панели Поддержка вывода цифровой звуковой функции Источник питания для вентилятора центрального процессора (с функцией интеллектуального вентилятора) Источник питания для вентилятора системы Каждый разъём поддерживает 2 USB-порта на лицевой панели
Задняя панель средств ввода-выв ода	Клавиатура / Мыши PS/2 Порт HDMI Порт VGA Порт DVI-D Порт LAN USB-порт Гнездо для подключения наушников	x1 x1 x1 x1 x1 x4 x3	
Размер панели	225мм (Ш) X 295 мм (В)		
Поддержка OS	Windows XP / Vista / 7	Biostar сохраняет за собой право добавлять или удалять средства обеспечения для OS с или без предварительного уведомления.	

Motherboard Manual

ARABIC

المواصفات			
Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture-64 / Extended Memory 64 Technology / Virtualization Technology	Socket 1156	وحدة المعالجة المركزية	يدعم تقنيات
Intel Core i7 / i5 / i3 / Pentium ملحوظ يصل إلى	تردد DDR3 DIMM	الذاكرة الرئيسية	يدعم الذاكرة من نوع
Intel H55	مجموعة الشرائح		
منزوجة لقائة DDR3 ذاكرة 1600/1333/1066/800 ميجا (OC) ميغا 512/512 دعم كل فتحة ECC وذلك الذي لا تتوافق مع DIMM لا تدعم رقاقة الذاكرة	عدد DDR3 DIMM سعة ذاكرة قصوى 16 جيجابايت	الذاكرة الرئيسية	يدعم تقنية
وسلل الحكم في البيئة: مراقب لمعرفة حالة الأجهزة مراقب في سرعة المروحة وظيفة "Smart Guardian" من ITE	ITE 8721 Super I/O	Super I/O	الاكثر استخداماً، توفر وظيفة Low Pin Count Interface
جيجلب/ثانية 3.0، قفل البيانات بسرعات تصل إلى 2.0.	متقابل Serial ATA تحكم	SATA	
تقاضن ثلاثي 100/10 ميجابايت / ثانية و 1 جيجابايت/ثانية، امكانية قفل المزدوج الكامل/النصفي	Realtek RTL8111DL	شبكة داخلية	
تدعم تقنية الصوت عالي التعريف من 5.1 قوlets لخرج الصوت	ALC662	عدم الصوت عالي التعريف	تدعم تقنية الصوت عالي التعريف من
	فتحة PCI Express Gen2 x16 عدد 2		
	فتحة PCI Express Gen2 x1 عدد 1	الفتحات	
	فتحة PCI عدد 2		
يدعم كل منفذ واحد من أجهزة SATA	منفذ طباعة عدد 1	المنفذ على سطح اللوحة	منفذ تسلسلي
يدعم تجهيزات اللوحة الألمانية	منفذ SATA عدد 6	منفذ اللوحة الألمانية	
يدعم وظيفة الصوت باللوحة الألمانية	منفذ الصوت الألماني عدد 1	منفذ الصوت الألماني	

H55A+

الموصفات			
يدعم وظيفة خرج الصوت الرقمي لتوصيل الطاقة لمروحة وحدة المعالجة مع وظيفة باللوحة الأمامية USB ليدعم كل منفذ حتى لتوصيل الطاقة لمروحة النظام	عدد 1 عدد 1 عدد 2 عدد 1 عدد 3 عدد 1 عدد 1 عدد 1	S/PDIF وصلة مروحة وحدة المعالجة المركزية وصلة مروحة النظام وصلة ممسح CMOS منفذ USB منفذ الأحمر تحت مستهلكة منفذ توسيع الطاقة (24 جبوس) ع منفذ توسيع الطاقة (4 جبوس)	منفذ خرج وصلة مروحة وحدة المعالجة المركزية وصلة مروحة النظام وصلة ممسح CMOS منفذ USB منفذ الأحمر تحت مستهلكة منفذ توسيع الطاقة (24 جبوس) ع منفذ توسيع الطاقة (4 جبوس)
	عدد 1 عدد 1 عدد 1 عدد 1 عدد 4 عدد 3	لوحة مفاتيح / ملوس PS/2 منافذ HDMI منافذ VGA منافذ DVI-D منفذ شبكة اتصال محلية منافذ USB مقبس صوت	منفذ دخل/خرج لوحة الخلفية
	حجم الورقة 225 مم (عرض) X 295 مم (ارتفاع)		
بحقها في إضافة أو إزالة الدعم لأي نظام شغيل بخطير أو بدون Biostar حفظ خطير.	Windows XP / Vista / 7 نعم أنظمة التشغيل		

Motherboard Manual

JAPANESE

仕様			
CPU	Socket 1156 Intel Core i7 / i5 / i3 / Pentium プロセッサ	Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture-64 / Extended Memory 64 Technology / Virtualization Technologyをサポートします	
チップセット	Intel H55		
メインメモリ	DDR3 DIMMスロット x 4 最大メモリ容量16GB 各DIMMは 512MB/1GB/2GB/4GB DDR3を サポート	デュアル チャンネルモードDDR3メモリモジュール DDR3 1600(OC)/1333/1066/800をサポート 登録済みDIMMとECC DIMMはサポートされません	
Super I/O	ITE 8721 もつとも一般に使用されるレガシーSuper I/O 機能を採用しています。 低ピンカウントインターフェイス	環境コントロールイニシアチブ、 H/Wモニター ファン速度コントローラ/ モニター ITEの「スマートガーディアン」機能	
SATA	統合シリアルATAコントローラ	最高3.0 Gb/秒のデータ転送速度 SATAバージョン2.0仕様に準拠。	
LAN	Realtek RTL8111DL	10 / 100 / 1000 Mb/秒のオートネゴシエーション 半/全二重機能	
HDオーディ オのサポート	ALC662	ハイデフィニションオーディオのサポート 5.1 チャンネルオーディオアウト	
スロット	PCI Express Gen2 x16スロット PCI Express Gen2 x1スロット PCIスロット	x2 x1 x2	
オンボードコ ネクタ	プリンタポートコネクタ シリアルポート SATAコネクタ フロントパネルコネクタ フロントオーディオコネクタ	x1 x1 x6 x1 x1	各コネクタは1つのプリンタポートをサポートします 各コネクタは1つのSATAデバイスをサポートします フロントパネル機能をサポートします フロントパネルオーディオ機能をサポートします

H55A+

仕様			
	S/PDIFアウトコネクタ	x1	デジタルオーディオアウト機能をサポートします
	CPUファンヘッダ	x1	CPUファン電源装置(スマートファン機能を搭載)
	システムファンヘッダ	x2	システムファン電源装置
	CMOSクリアヘッダ	x1	
	USBコネクタ	x3	各コネクタは2つのフロントパネルUSBポートをサポートします
	消費者IRコネクタ	x1	
	電源コネクタ(24ピン)	x1	
	電源コネクタ(4ピン)	x1	
背面パネル I/O	PS/2キーボード / マウス	x1	
	HDMIポート	x1	
	VGAポート	x1	
	DVI-Dポート	x1	
	LANポート	x1	
	USBポート	x4	
	オーディオジャック	x3	
ボードサイズ	225mm (幅) X 295 mm (高さ)		
OSサポート	Windows XP / Vista / 7		Biostarは事前のサポートなしにOSサポートを追加または削除する権利を留保します。

2010/04/01