

B75MU3+ Setup Manual

FCC Information and Copyright

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. There is no guarantee that interference will not occur in a particular installation.

The vendor makes no representations or warranties with respect to the contents here and specially disclaims any implied warranties of merchantability or fitness for any purpose. Further the vendor reserves the right to revise this publication and to make changes to the contents here without obligation to notify any party beforehand.

Duplication of this publication, in part or in whole, is not allowed without first obtaining the vendor's approval in writing.

The content of this user's manual is subject to be changed without notice and we will not be responsible for any mistakes found in this user's manual. All the brand and product names are trademarks of their respective companies.



**Dichiarazione di conformità
sintetica**
Ai sensi dell'art. 2 comma 3 del D.M.
275 del 30/10/2002
Si dichiara che questo prodotto è
conforme alle normative vigenti e
soddisfa i requisiti essenziali richiesti
dalle direttive
2004/108/CE, 2006/95/CE e
1999/05/CE
quando ad esso applicabili

Short Declaration of conformity
We declare this product is complying
with the laws in force and meeting all
the essential requirements as specified
by the directives
2004/108/CE, 2006/95/CE and
1999/05/CE
whenever these laws may be applied

Table of Contents

Chapter 1: Introduction	1
1.1 Before You Start.....	1
1.2 Package Checklist	1
1.3 Motherboard Features.....	2
1.4 Rear Panel Connectors.....	4
1.5 Motherboard Layout.....	5
Chapter 2: Hardware Installation	6
2.1 Installing Central Processing Unit (CPU)	6
2.2 FAN Headers.....	8
2.3 Installing System Memory	9
2.4 Connectors and Slots.....	11
Chapter 3: Headers & Jumpers Setup	14
3.1 How to Setup Jumpers.....	14
3.2 Detail Settings	14
Chapter 4: Useful Help	19
4.1 Driver Installation Note.....	19
4.2 Software	20
4.3 Extra Information.....	26
4.4 AMI BIOS Beep Code	27
4.5 Troubleshooting	28
Appendix: SPEC In Other Languages	30
German.....	30
French	32
Italian.....	34
Spanish	36
Portuguese	38
Polish.....	40
Russian	42
Arabic.....	44
Japanese	46

CHAPTER 1: INTRODUCTION

1.1 BEFORE YOU START

Thank you for choosing our product. Before you start installing the motherboard, please make sure you follow the instructions below:

- Prepare a dry and stable working environment with sufficient lighting.
- Always disconnect the computer from power outlet before operation.
- Before you take the motherboard out from anti-static bag, ground yourself properly by touching any safely grounded appliance, or use grounded wrist strap to remove the static charge.
- Avoid touching the components on motherboard or the rear side of the board unless necessary. Hold the board on the edge, do not try to bend or flex the board.
- Do not leave any unfastened small parts inside the case after installation. Loose parts will cause short circuits which may damage the equipment.
- Keep the computer from dangerous area, such as heat source, humid air and water.
- The operating temperatures of the computer should be 0 to 45 degrees Celsius.

1.2 PACKAGE CHECKLIST

- ↳ Serial ATA Cable X 2
- ↳ Rear I/O Panel for ATX Case X 1
- ↳ User's Manual X 1
- ↳ Fully Setup Driver DVD X 1

Note: The package contents may be different due to area or your motherboard version.

Motherboard Manual

1.3 MOTHERBOARD FEATURES


SPEC		
CPU	Socket 1155 Intel Core i7 / i5 / i3 / Pentium / Celeron processor	Supports Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture-64 / Extended Memory 64 Technology / Virtualization Technology / Hyper Threading
Chipset	Intel B75	
Super I/O	IT8728 Provides the most commonly used legacy Super I/O functionality. Low Pin Count Interface	Environment Control initiatives, Hardware Monitor Controller Fan Speed Controller ITE's "Smart Guardian" function
Main Memory	DDR3 DIMM Slots x 4 Max Memory Capacity 32GB Each DIMM supports 512MB/ 1GB/2GB/4GB/8GB DDR3	Dual Channel Mode DDR3 memory module Supports DDR3 1066 / 1333 Supports DDR3 1600 (Depending on CPU) Registered DIMM and ECC DIMM is not supported
SATA 2 & 3	Integrated Serial ATA Controller	Data transfer rates up to 3.0 Gb/s / 6.0 Gb/s. SATA Version 2.0 / 3.0 specification compliant
LAN	Realtek RTL 8111F	10 / 100 Mb/s / 1Gb/s auto negotiation Half / Full duplex capability
Sound Codec	ALC662	5.1 channels audio out High Definition Audio
USB3.0	B75	Data transfer rates up to 600 MB/s
Slots	PCI Express Gen3 x 16 slot (Depending on CPU) PCI slot PCI Express Gen2 x 1 slot	x1 x2 x1 Supports PCI-E Gen3 x16 expansion card Supports PCI expansion cards Supports PCI-E Gen2 x1 expansion cards
On Board Connectors	SATA3 Connector SATA2 Connector Front Panel Connector Front Audio Connector	x1 x5 x1 x1 Each connector supports 1 SATA3 devices Each connector supports 1 SATA2 devices Supports front panel facilities Supports front panel audio function

B75MU3+

SPEC			
CPU Fan Header System Fan Header Clear CMOS Header USB2.0 Connector USB3.0 Connector Consumer IR Connector Printer Port Connector Serial Port Connector S/PDIF out Connector Power Connector (24pin) Power Connector (4pin)	x1	CPU Fan power supply (with Smart Fan function)	
	x1	System Fan Power supply	
	x1	Restore CMOS data to factory default	
	x2	Each connector supports 2 front panel USB2.0 ports	
	x1	Each connector supports 2 front panel USB3.0 ports	
	x1	Supports infrared function	
	x1	Each connector supports 1 Printer port	
	x1	Connects to RS-232 Port	
	x1	Supports digital audio out function	
	x1	Connects to Power supply	
Back Panel I/O	PS/2 Keyboard	x1	Connects to PS/2 Keyboard
	HDMI Port	x1	Connects to HDMI cable
	VGA Port	x1	Connect to D-SUB monitor
	DVI Port	x1	Connect to DVI monitor
	LAN port	x1	Connect to RJ-45 ethernet cable
	USB2.0 Port	x2	Connect to USB2.0 devices
	USB3.0 Port	x2	Connect to USB3.0 devices
	Audio Jack	x3	Provide Audio-In/Out and Mic. connection
Board Size	220 (W) x 244 (L) mm	ATX	
OS Support	Windows XP / Vista / 7	Biostar reserves the right to add or remove support for any OS with or without notice	

Motherboard Manual

1.4 REAR PANEL CONNECTORS

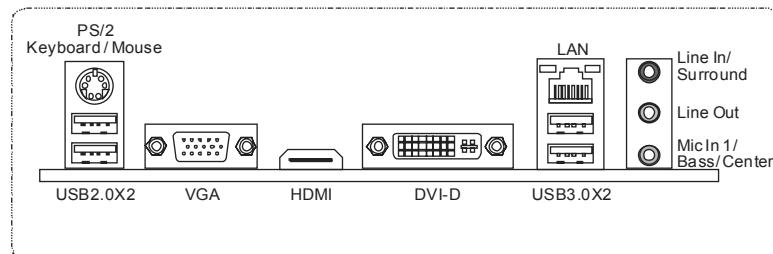

NOTE: HDMI, DVI-D & VGA ports only work with an Intel integrated Graphics Processor.

NOTE: USB3.0 (only supported by Windows 7) ports are backward compatible with USB2.0/USB1.X devices.


NOTE: Maximum resolution:
HDMI: 1920 x 1200 @60Hz, compliant with HDMI 1.4a
DVI: 1920 x 1200 @60Hz
VGA: 2048 x 1536 @75Hz

NOTE: This motherboard supports Multiple VGA output:

Display Devices	VGA	DVI-D	HDMI
VGA	X	A	A
DVI-D	A	X	S ¹ , C, E
HDMI	A	S ¹ , C, E	X

● A = Single Pipe Single Display, Intel® Dual Display Clone (Only 24-bpp), or Extended Desktop Mode
● C = Clone Mode
● E = Extended Desktop Mode
● S¹ = Single Pipe Single Display With One Display Device Disabled
● X = Unsupported / Note Applicable


1.5 MOTHERBOARD LAYOUT

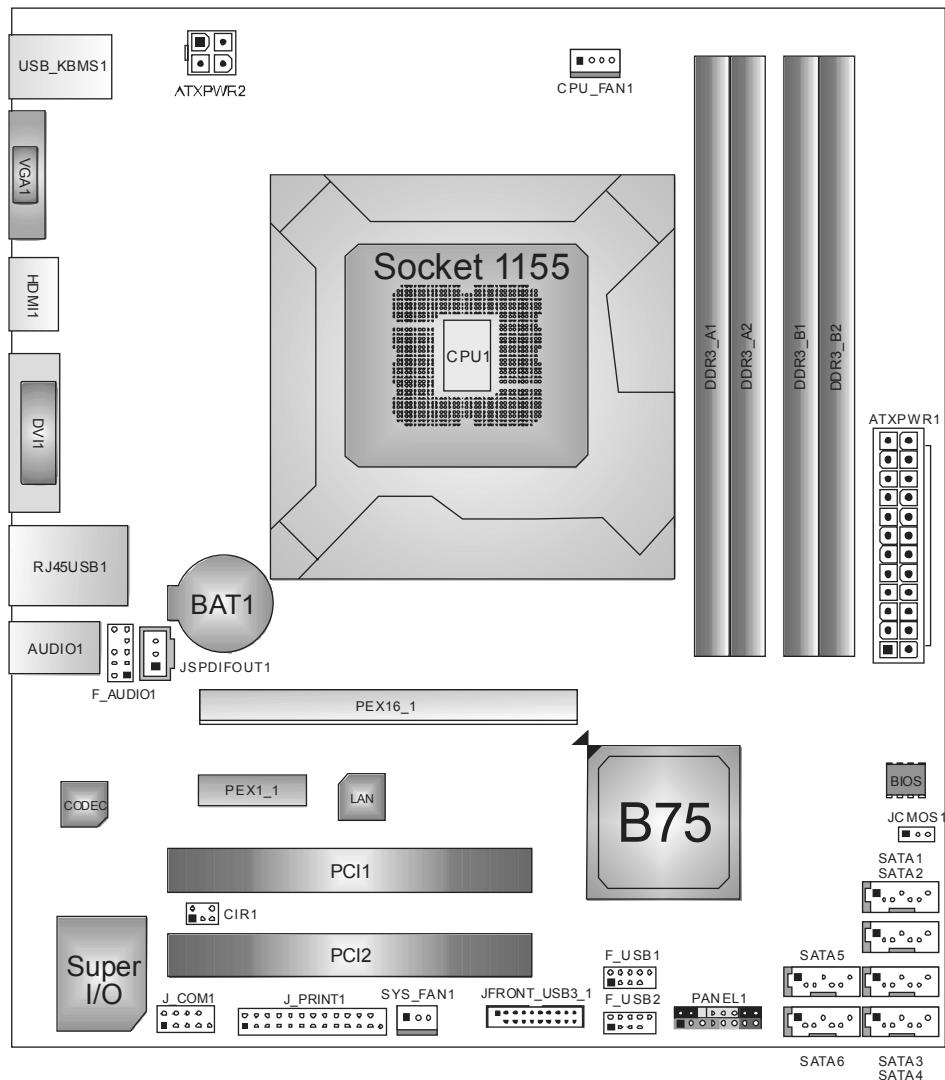

Note: ■ represents the 1st pin.

CHAPTER 2: HARDWARE INSTALLATION

2.1 INSTALLING CENTRAL PROCESSING UNIT (CPU)

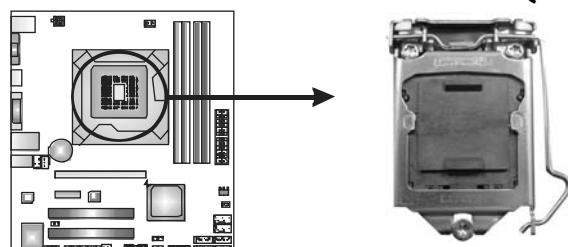


Notice:


1. Remove Pin Cap before installation, and make good preservation for future use. When the CPU is removed, cover the Pin Cap on the empty socket to ensure pin legs won't be damaged.
2. The motherboard might equip with two different types of pin cap. Please refer below instruction to remove the pin cap.

Step 1: Pull the socket locking lever out from the socket and then raise the lever up.

Type A

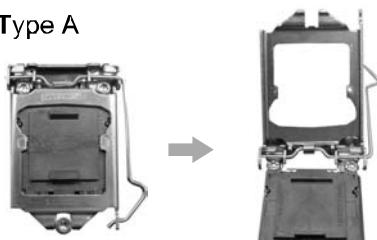


Type B

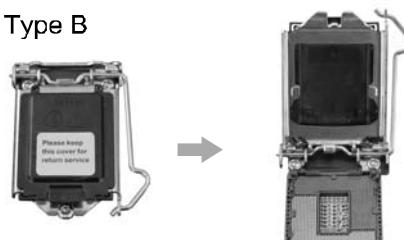


Step 2: Remove the Pin Cap.

Type A

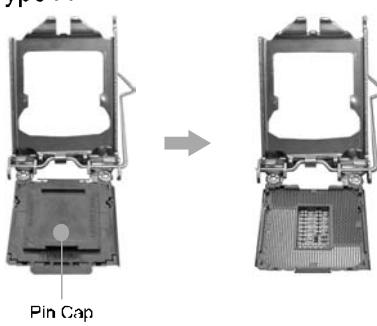


Type B

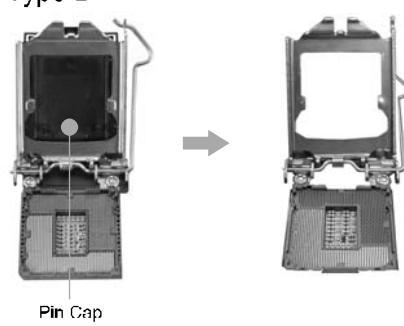

B75MU3+


Step 3: Look for the triangular cut edge on socket, and the golden dot on CPU should point forwards this triangular cut edge. The CPU will fit only in the correct orientation.

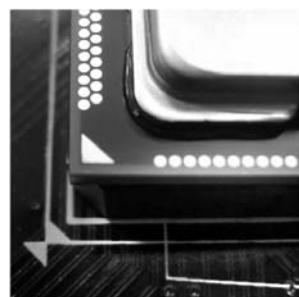

Step 4: Hold the CPU down firmly, and then lower the lever to locked position to complete the installation.




Step 5: Put the CPU Fan and heatsink assembly on the CPU and buckle it on the retention frame. Connect the CPU FAN power cable into the CPU_FAN1 to complete the installation.

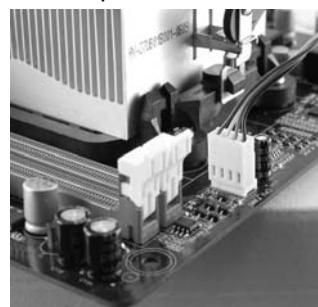


2.2 FAN HEADERS

These fan headers support cooling-fans built in the computer. The fan cable and connector may be different according to the fan manufacturer. Connect the fan cable to the connector while matching the black wire to pin#1.

CPU_FAN1: CPU Fan Header

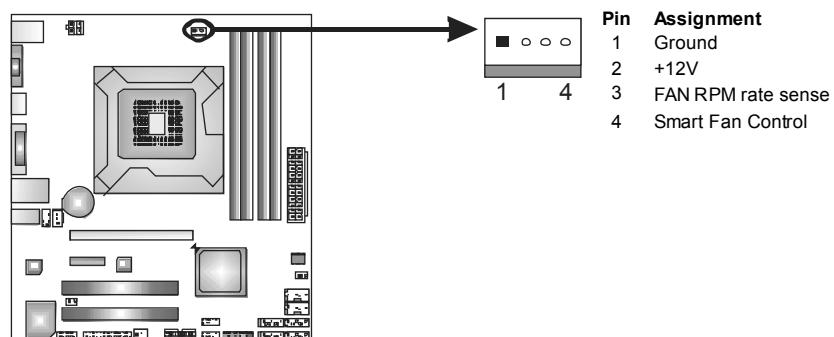

SYS_FAN1: System Fan Header

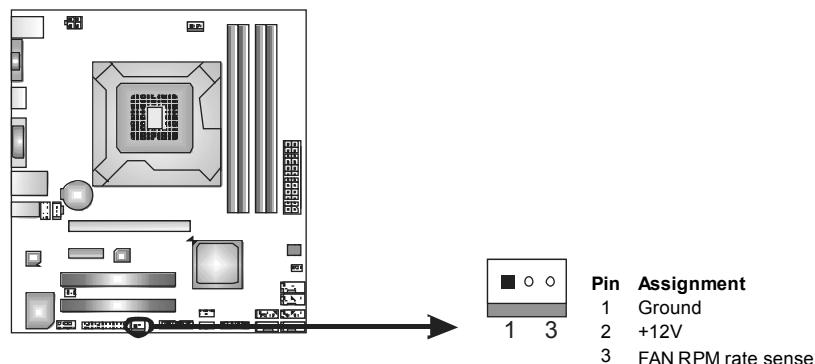


Note:


The SYS_FAN1 supports 3-pin head connector; the CPU_FAN1 supports 4-pin head connector. When connecting with wires onto connectors, please note that the red wire is the positive and should be connected to pin#2, and the black wire is Ground and should be connected to GND.

2.3 INSTALLING SYSTEM MEMORY


A. Memory Modules

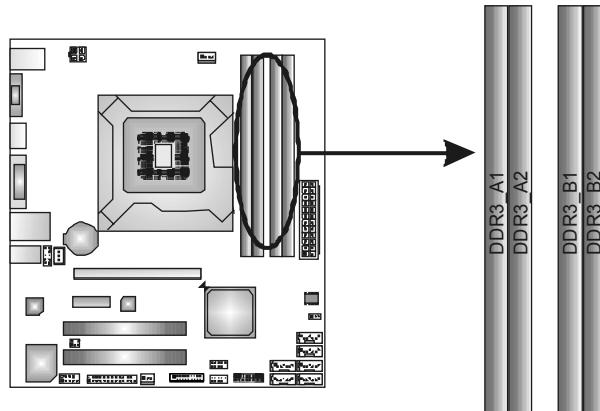

1. Unlock a DIMM slot by pressing the retaining clips outward. Align a DIMM on the slot such that the notch on the DIMM matches the break on the Slot.

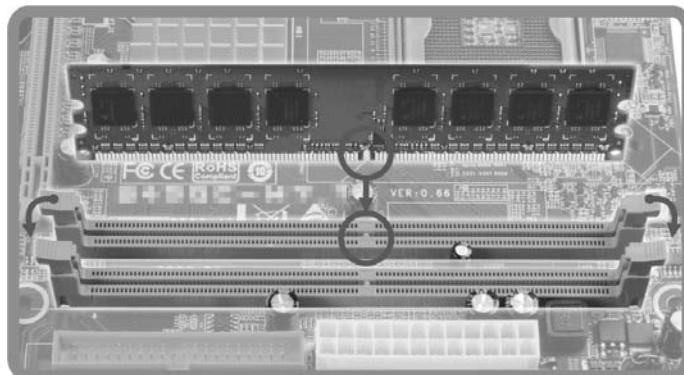

2. Insert the DIMM vertically and firmly into the slot until the retaining chip snap back in place and the DIMM is properly seated.

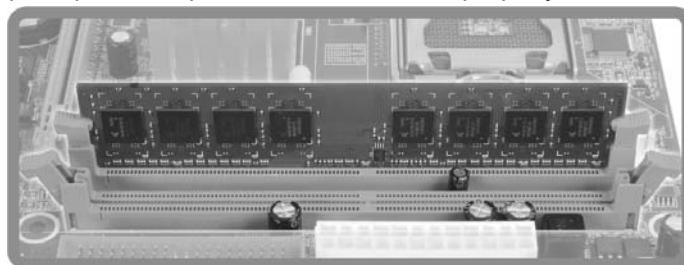

B. Memory Capacity

DIMM Socket Location	DDR3 Module	Total Memory Size
DDR3_A1	512MB/1GB/2GB/4GB/8GB	Max is 32GB.
DDR3_A2	512MB/1GB/2GB/4GB/8GB	
DDR3_B1	512MB/1GB/2GB/4GB/8GB	
DDR3_B2	512MB/1GB/2GB/4GB/8GB	

C. Dual Channel Memory Installation

Please refer to the following requirements to activate Dual Channel function:

Install memory module of the same density in pairs, shown in the table.

Dual Channel Status	DDR3_A1	DDR3_A2	DDR3_B1	DDR3_B2
Enabled	O	X	O	X
Enabled	X	O	X	O
Enabled	O	O	O	O


(O means memory installed, X means memory not installed.)

The DRAM bus width of the memory module must be the same (x8 or x16)

2.4 CONNECTORS AND SLOTS

SATA1: Serial ATA3.0 Connectors


The motherboard has a PCI to SATA Controller with 1 channels SATA interface, it satisfies the SATA3.0 spec and with transfer rate of 6.0Gb/s.

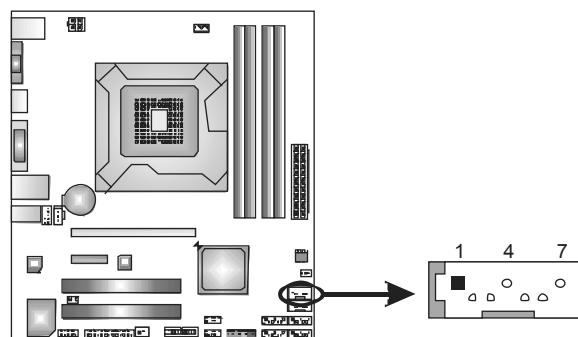

Pin	Assignment
1	Ground
2	TX+
3	TX-
4	Ground
5	RX-
6	RX+
7	Ground

SATA2 ~ 6: Serial AT A2.0 Connectors

The motherboard has a PCI to SATA Controller with 5 channels SATA2 interface, it satisfies the SATA2.0 spec and with transfer rate of 3.0Gb/s.

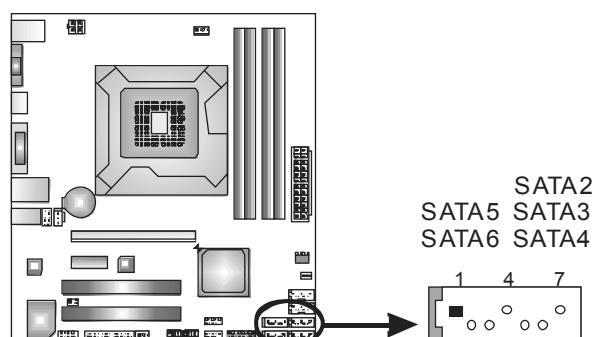

Pin	Assignment
1	Ground
2	TX+
3	TX-
4	Ground
5	RX-
6	RX+
7	Ground


Motherboard Manual

PEX16_1: PCI-Express Gen3 x16 Slot

- PCI-Express 3.0 compliant.
- Maximum theoretical realized bandwidth of 16GB/s simultaneously per direction, for an aggregate of 32GB/s totally.
- PCI-Express Gen3 supports a raw bit-rate of 8.0Gb/s on the data pins.
- PCI-E 3.0 is supported by Core i7-3xxx / i5-3xxx CPU.


PEX1_1: PCI-Express Gen2 x1 Slot

- PCI-Express 2.0 compliant.
- Data transfer bandwidth up to 500MB/s per direction; 1GB/s in total.
- PCI-Express supports a raw bit-rate of 2.5Gb/s on the data pins.
- 2X bandwidth over the traditional PCI architecture.

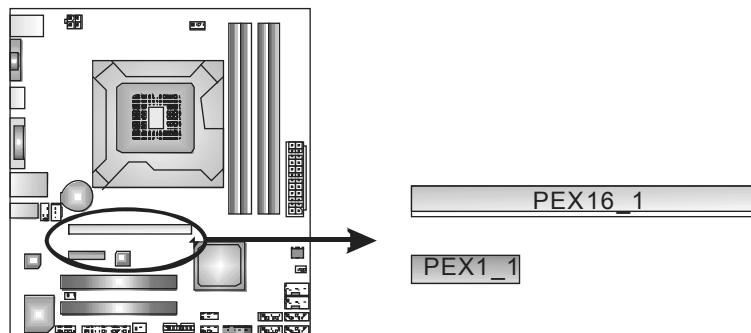


PCI1/PCI2: Peripheral Component Interconnect Slots

This motherboard is equipped with 2 standard PCI slots. PCI stands for Peripheral Component Interconnect, and it is a bus standard for expansion cards. This PCI slot is designated as 32 bits.

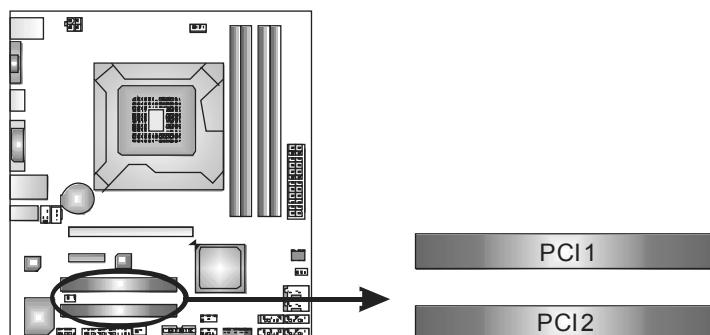

ATXPWR1: ATX Power Source Connector


This connector allows user to connect 24-pin power connector on the ATX power supply.

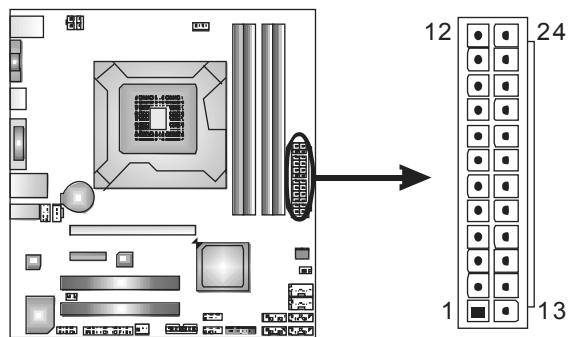

Pin	Assignment	Pin	Assignment
13	+3.3V	1	+3.3V
14	-12V	2	+3.3V
15	Ground	3	Ground
16	PS_ON	4	+5V
17	Ground	5	Ground
18	Ground	6	+5V
19	Ground	7	Ground
20	NC	8	PW_OK
21	+5V	9	Standby Voltage+5V
22	+5V	10	+12V
23	+5V	11	+12V
24	Ground	12	+3.3V

ATXPWR2: ATX Power Source Connector

This connector provides +12V to CPU power circuit.

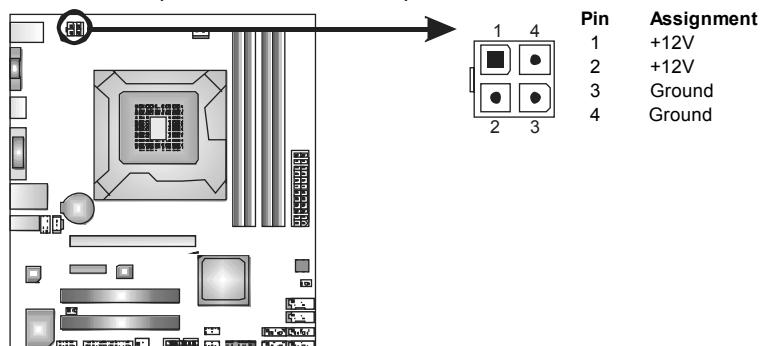


Note:

Before you power on the system, please make sure that ATXPWR1 and ATXPWR2 connectors have been well plugged-in.

CHAPTER 3: HEADERS & JUMPERS SETUP

3.1 HOW TO SETUP JUMPERS


The illustration shows how to set up jumpers. When the jumper cap is placed on pins, the jumper is “close”, if not, that means the jumper is “open”.

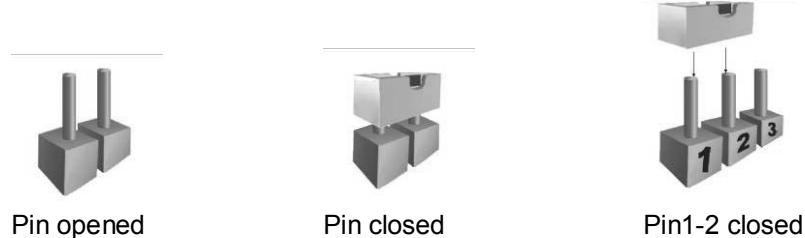

3.2 DETAIL SETTINGS

PANEL1: Front Panel Header


This 16-pin connector includes Power-on, Reset, HDD LED, Power LED, and speaker connection. It allows user to connect the PC case’s front panel switch functions.

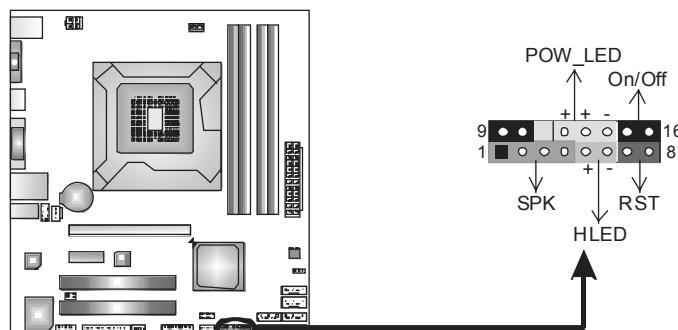

Pin	Assignment	Function	Pin	Assignment	Function
1	+5V	Speaker Connector	9	N/A	N/A
2	N/A		10	N/A	N/A
3	N/A		11	N/A	N/A
4	Speaker		12	Power LED (+)	Power LED
5	HDD LED (+)	Hard drive LED	13	Power LED (+)	
6	HDD LED (-)	LED	14	Power LED (-)	
7	Ground	Reset button	15	Power button	Power-on button
8	Reset control		16	Ground	


F_USB1/F_USB2: Headers for USB 2.0 Ports at Front Panel

These headers allow user to connect additional USB cable on the PC front panel, and also can be connected with internal USB devices, like USB card reader.

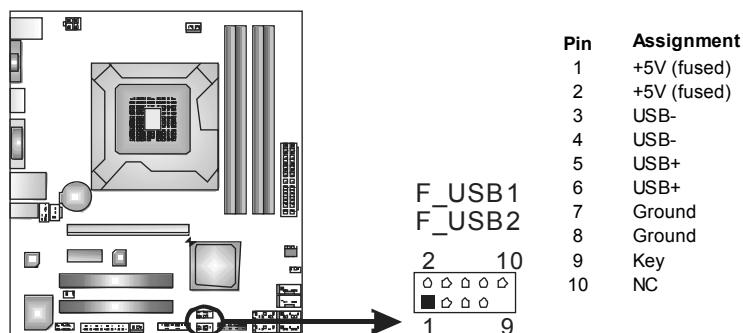

JFRONT_USB3_1: Header for USB 3.0 Ports at Front Panel

This header allows user to connect additional USB cable on the PC front panel, and also can be connected with internal USB devices, like USB card reader.

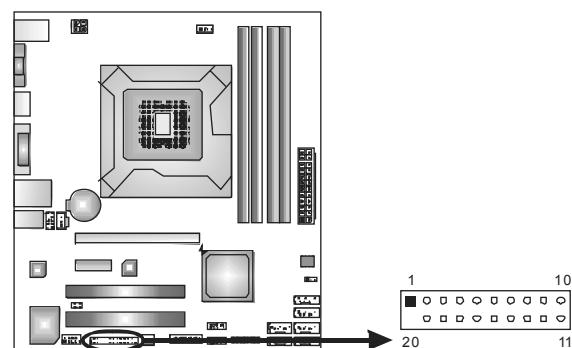


Pin	Assignment	Pin	Assignment
1	VBUS0	11	D2+
2	SSRX1-	12	D2-
3	SSRX1+	13	Ground
4	Ground	14	SSTX2+
5	SSTX1-	15	SSTX2-
6	SSTX1+	16	Ground
7	Ground	17	SSRX2+
8	D1-	18	SSRX2-
9	D1+	19	VBUS1
10	ID	20	Key

NOTE: USB3.0 is only supported by Windows 7.


F_AUDIO1: Front Panel Audio Header

This header allows user to connect the front audio output cable with the PC front panel. This header supports HD and AC'97 audio front panel connector.

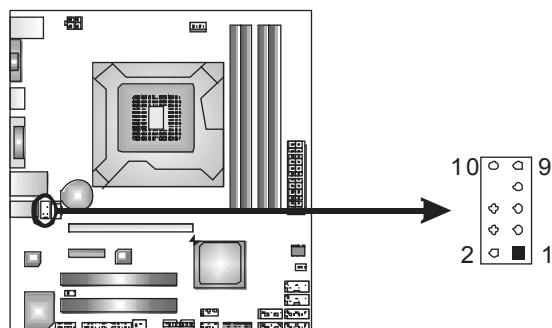


JSPDIFOUT1: Digital Audio-out Connector

This connector allows user to connect the PCI bracket SPDIF output header.

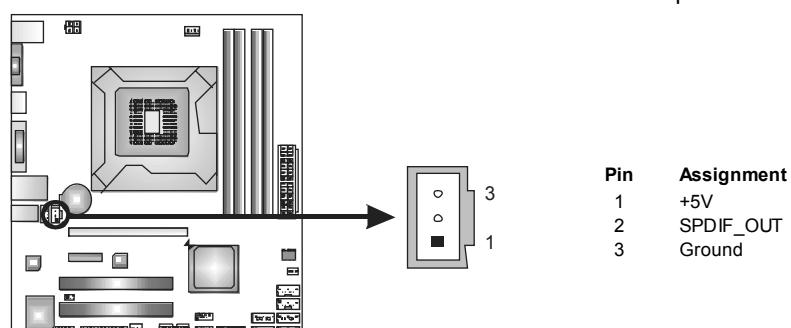


CIR1: Consumer IR Connector

This header is for infrared remote control and communication.

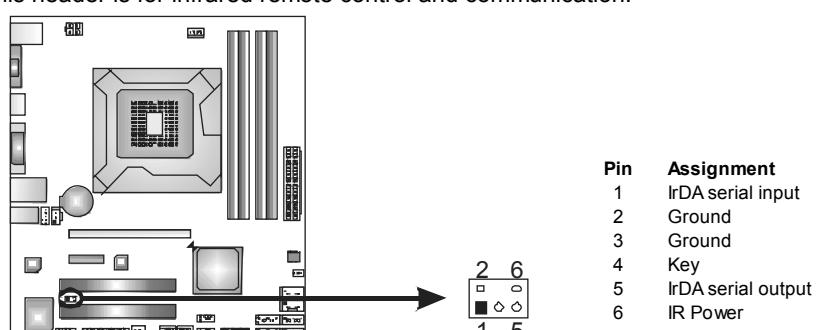

JCMOS1: Clear CMOS Header

Placing the jumper on pin2-3 allows user to restore the BIOS safe setting and the CMOS data. Please carefully follow the procedures to avoid damaging the motherboard.

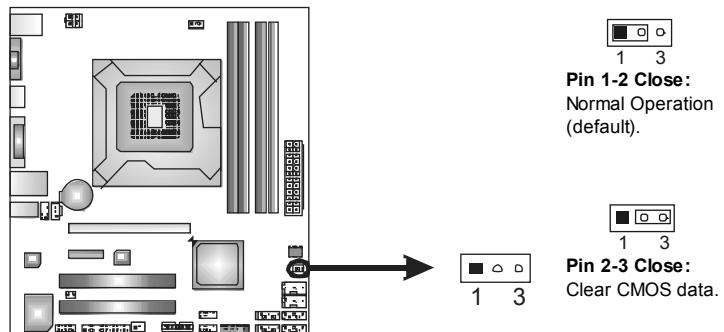


※ Clear CMOS Procedures:

1. Remove AC power line.
2. Set the jumper to “Pin 2-3 close”.
3. Wait for five seconds.
4. Set the jumper to “Pin 1-2 close”.
5. Power on the AC.
6. Reset your desired password or clear the CMOS data.


J_COM1: Serial Port Connector

The motherboard has a Serial Port Connector for connecting RS-232 Port.

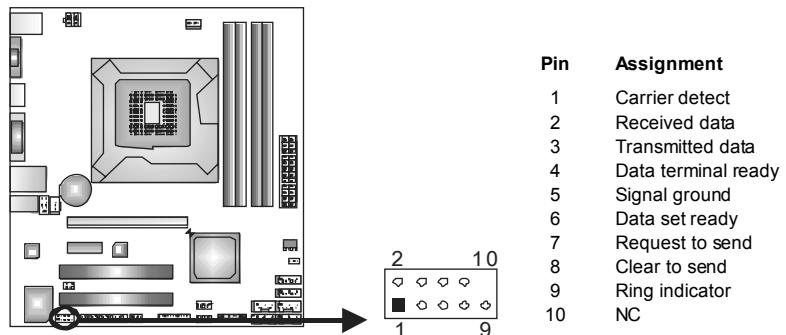

J_PRINT1: Printer Port Connector

This header allows you to connector printer on the PC.

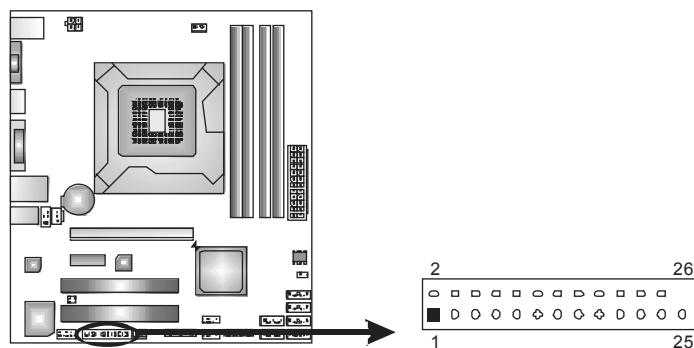

Pin	Assignment	Pin	Assignment
1	-Strobe	14	Ground
2	-ALF	15	Data 6
3	Data 0	16	Ground
4	-Error	17	Data 7
5	Data 1	18	Ground
6	-Init	19	-ACK
7	Data 2	20	Ground
8	-Scltin	21	Busy
9	Data 3	22	Ground
10	Ground	23	PE
11	Data 4	24	Ground
12	Ground	25	SCLT
13	Data 5	26	Key

CHAPTER 4: USEFUL HELP

4.1 DRIVER INSTALLATION NOTE

After you installed your operating system, please insert the Fully Setup Driver CD into your optical drive and install the driver for better system performance.

You will see the following window after you insert the CD



The setup guide will auto detect your motherboard and operating system.

Note:

If this window didn't show up after you insert the Driver CD, please use file browser to locate and execute the file **SETUP.EXE** under your optical drive.

A. Driver Installation

To install the driver, please click on the Driver icon. The setup guide will list the compatible driver for your motherboard and operating system. Click on each device driver to launch the installation program.

B. Software Installation

To install the software, please click on the Software icon. The setup guide will list the software available for your system, click on each software title to launch the installation program.

C. Manual

Aside from the paperback manual, we also provide manual in the Driver CD. Click on the Manual icon to browse for available manual.

Note:

You will need Acrobat Reader to open the manual file. Please download the latest version of Acrobat Reader software from
<http://www.adobe.com/products/acrobat/readstep2.html>

4.2 SOFTWARE

Installing Software

1. Insert the Setup CD to the optical drive. The drivers installation program would appear if the Autorun function has been enabled.
2. Select **Software Installation**, and then click on the respective software title.
3. Follow the on-screen instructions to complete the installation.

Launching Software

After the installation process, you will see the software icon “eHOT Line” / “BIOS Update” appears on the desktop. Double-click the icon to launch the utility.

eHot-Line (Optional)

eHot-Line is a convenient utility that helps you to contact with our Tech-Support system. This utility will collect the system information which is useful for analyzing the problem you may have encountered, and then send these information to our tech-support department to help you fix the problem.




Before you use this utility, please set Outlook Express as your default e-mail client application program.

*represents important information that you must provide. Without this information, you may not be able to send out the mail.

This block will show the information which would be collected in the mail.


*Describe condition of your system.

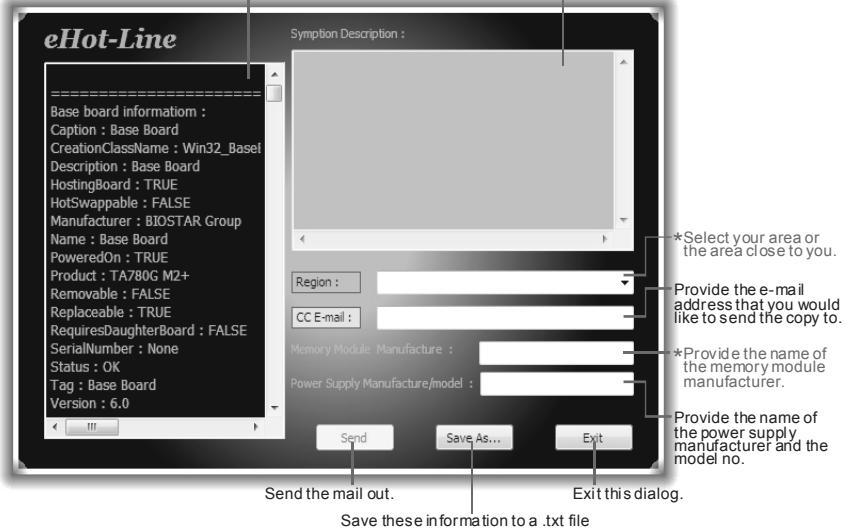



After filling up this information, click “**Send**” to send the mail out. A warning dialog would appear asking for your confirmation; click “**Send**” to confirm or “**Do Not Send**” to cancel.

If you want to save this information to a .txt file, click “**Save As...**” and then you will see a saving dialog appears asking you to enter file name.

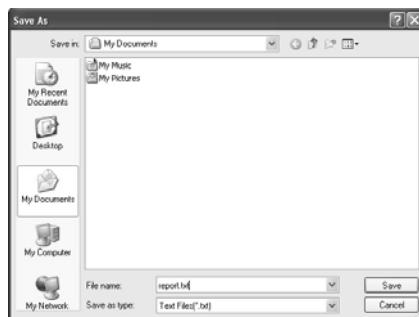

Enter the file name and then click “**Save**”. Your system information will be saved to a .txt file.



Open the saved .txt file, you will see your system information including motherboard/BIOS/CPU/video/device/OS information. This information is also concluded in the sent mail.



We will not share customer's data with any other third parties, so please feel free to provide your system information while using eHot-Line service.




If you are not using Outlook Express as your default e-mail client application, you may need to save the system information to a .txt file and send the file to our tech support with other e-mail application. Go to the following web <http://www.biostar.com.tw/app/en-us/about/contact.php> for getting our contact information.

Motherboard Manual

BIOS Update


BIOS Update is a convenient utility which allows you to update your motherboard BIOS under Windows system.

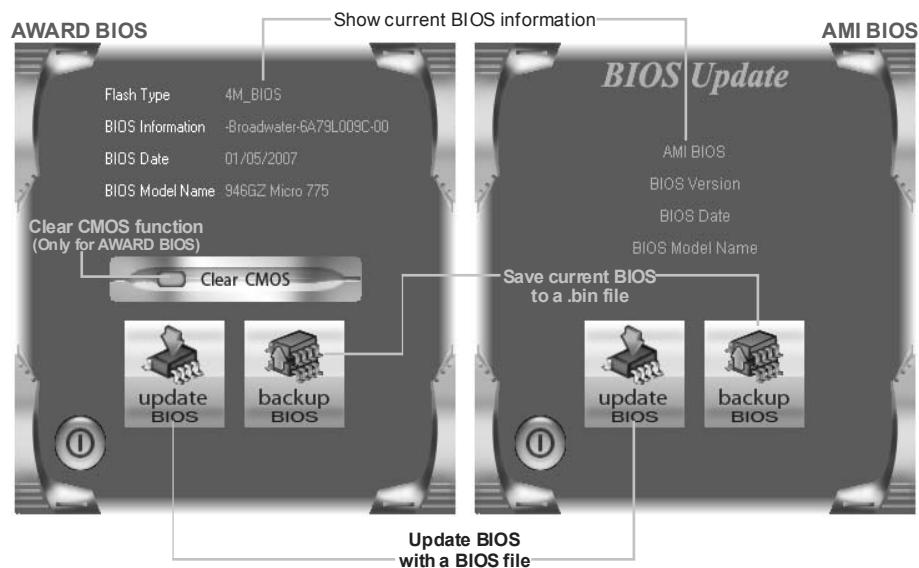

<Backup BIOS>

Once click on this button, the saving dialog will show. Choose the position to save file and enter file name. (We recommend that the file name should be English/number and no longer than 7 characters.)


Then click **Save**.

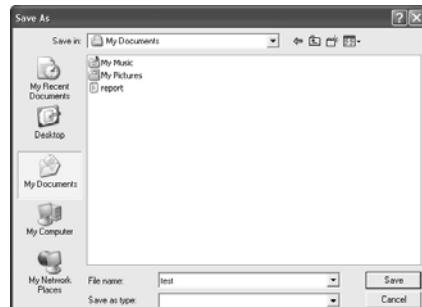

<Update BIOS>


Before doing this, please download the proper BIOS file from the website.

For AWARD BIOS, update BIOS procedure should be run with Clear CMOS function, so please check on Clear CMOS first.

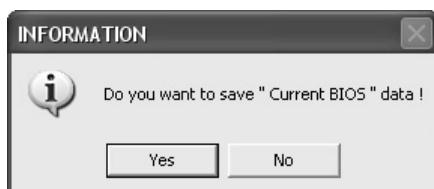


Then click Update BIOS button, a dialog will show for asking you backup current BIOS. Click **Yes** for BIOS backup and refer to the Backup BIOS procedure; or click **No** to skip this procedure.


After the BIOS Backup procedure, the open dialog will show for requesting the BIOS file which is going to be updated. Please choose the proper BIOS file for updating, then click on **Open**.

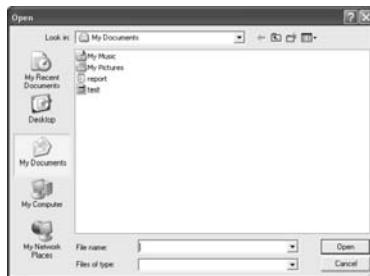

The utility will update BIOS with the proper BIOS file, and this process may take minutes. Please do not open any other applications during this process.

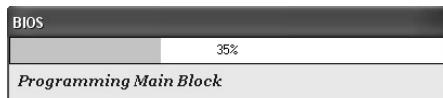

After the BIOS Update process, click on **OK** to restart the system.

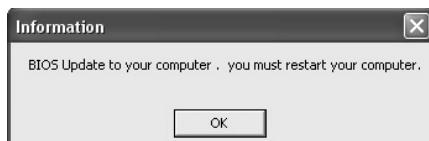

While the system boots up and the full screen logo shows, press **Del** <Delete> key to enter BIOS setup.

In the BIOS setup, use the **Load Optimized Defaults** function and then **Save and Exit Setup** to exit BIOS setup. BIOS Update is completed.



All the information and content above about the software are subject to be changed without notice. For better performance, the software is being continuously updated. The information and pictures described above are for your reference only. The actual information and settings on board may be slightly different from this manual.

Motherboard Manual

Intel® Small Business Advantage

Intel Small Business Advantage (Intel SBA) provides an out-of-the-box hardware-based security and productivity suite designed for the small business user.


Supported Operating Systems:

- Windows 7 Professional 64-bit and 32-bit
- Windows 7 Enterprise 64-bit

Installing Intel SBA


This procedure describes how to install Intel SBA.

1. Logon to the computer with a user that has administrator privileges.
2. Copy the Setup.exe file to the computer.
3. Double-click Setup.exe.
The Welcome to the Setup Program window opens.

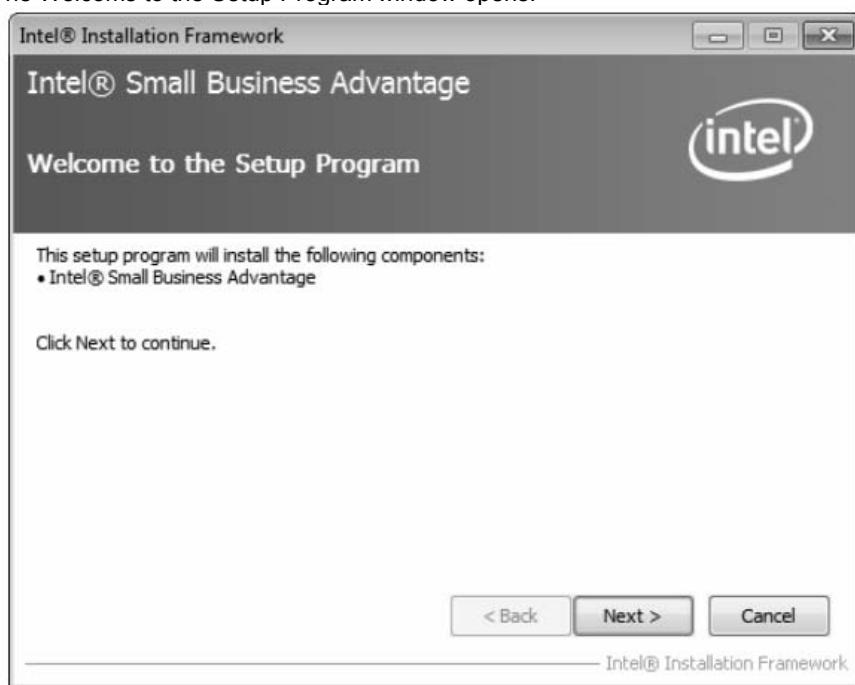

B75MU3+

4. Click Next. The installer starts the installation and the Setup Progress window opens showing the progress of the installation. When installation is complete, the installer starts the Intel SBA service and the Next button is enabled.

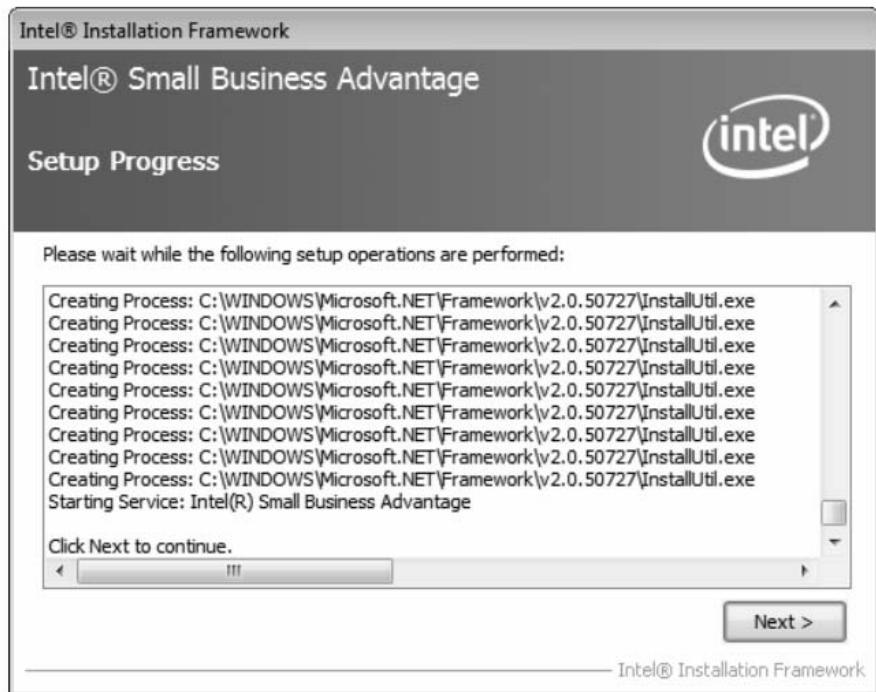

5. Click Next. The Setup Is Complete window opens.
6. Click Finish. The installer closes.

4.3 EXTRA INFORMATION

CPU Overheated

If the system shuts down automatically after system is powered on for seconds, the phenomenon means the CPU protection function has been activated.

When the CPU is over heated, the motherboard will shutdown automatically to avoid a damage of the CPU, and the system may not power on again.

In this case, please double check:

1. The CPU cooler surface is placed evenly with the CPU surface.
2. CPU fan is rotated normally.
3. CPU fan speed is fulfilling with the CPU speed.

After confirmed, please follow steps below to relief the CPU protection function.

1. Remove the power cord from power supply for seconds.
2. Wait for seconds.
3. Plug in the power cord and boot up the system.

Or you can:

1. Clear the CMOS data.
(See “Close CMOS Header: JCMOS1” section)
2. Wait for seconds.
3. Power on the system again.

4.4 AMI BIOS BEEP CODE

Boot Block Beep Codes

Number of Beeps	Description
1	No media present. (Insert diskette in floppy drive A:)
2	"AMIBOOT.ROM" file not found in root directory of diskette in A:
3	Insert next diskette if multiple diskettes are used for recovery
4	Flash Programming successful
5	File read error
7	No Flash EPROM detected
10	Flash Erase error
11	Flash Program error
12	"AMIBOOT.ROM" file size error
13	BIOS ROM image mismatch (file layout does not match image present in flash device)

POST BIOS Beep Codes

Number of Beeps	Description
1	Memory refresh timer error
3	Base memory read/write test error
6	Keyboard controller BAT command failed
7	General exception error (processor exception interrupt error)
8	Display memory error (system video adapter)

Troubleshooting POST BIOS Beep Codes

Number of Beeps	Troubleshooting Action
1, 3	Reseat the memory, or replace with known good modules.
6, 7	Fatal error indicating a serious problem with the system. Consult your system manufacturer. Before declaring the motherboard beyond all hope, eliminate the possibility of interference by a malfunctioning add-in card. Remove all expansion cards except the video adapter. <ul style="list-style-type: none">● If beep codes are generated when all other expansion cards are absent, consult your system manufacturer's technical support.● If beep codes are not generated when all other expansion cards are absent, one of the add-in cards is causing the malfunction. Insert the cards back into the system one at a time until the problem happens again. This will reveal the malfunctioning card.
8	If the system video adapter is an add-in card, replace or reseat the video adapter. If the video adapter is an integrated part of the system board, the board may be faulty.

4.5 TROUBLESHOOTING

Probable	Solution
1. There is no power in the system. Power LED does not shine; the fan of the power supply does not work 2. Indicator light on keyboard does not shine.	1. Make sure power cable is securely plugged in. 2. Replace cable. 3. Contact technical support.
System is inoperative. Keyboard lights are on, power indicator lights are lit, and hard drives are running.	Using even pressure on both ends of the DIMM, press down firmly until the module snaps into place.
System does not boot from a hard disk drive, but can be booted from optical drive.	1. Check cable running from disk to disk controller board. Make sure both ends are securely plugged in; check the drive type in the standard CMOS setup. 2. Backing up the hard drive is extremely important. All hard disks are capable of breaking down at any time.
System only boots from an optical drive. Hard disks can be read, applications can be used, but system fails to boot from a hard disk.	1. Back up data and applications files. 2. Reformat the hard drive. Re-install applications and data using backup disks.
Screen message shows "Invalid Configuration" or "CMOS Failure."	Review system's equipment. Make sure correct information is in setup.
System cannot boot after user installs a second hard drive.	1. Set master/slave jumpers correctly. 2. Run SETUP program and select correct drive types. Call the drive manufacturers for compatibility with other drives.

B75MU3+

This page is intentionally left blank.

Motherboard Manual

APPENDIX: SPEC IN OTHER LANGUAGES

GERMAN

Spezifikationen			
CPU	Socket 1155 Intel Core i7 / i5 / i3 / Pentium / Celeron Prozessoren		Unterstützt Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture-64 / Extended Memory 64 Technology / Virtualization Technology / Hyper Threading
Chipsatz	Intel B75		
Super E/A	IT8728 Bietet die häufig verwendeten alten Super E/A-Funktionen. Low Pin Count-Schnittstelle		Umgebungskontrolle, Hardware-Überwachung Lüfterdrehzahl-Controller/-Überwachung "Smart Guardian"-Funktion von ITE
Arbeitsspeicher	DDR3 DIMM-Steckplätze x 4 Max. 32GB Arbeitsspeicher Jeder DIMM unterstützt 512MB/ 1GB/2GB/4GB/8GB DDR3.		Dual-Kanal DDR3 Speichermodul Unterstützt DDR3 1066 / 1333 Unterstützt DDR3 1600(Depending on CPU) registrierte DIMMs. ECC DIMMs werden nicht unterstützt.
SATA 2 & 3	Integrierter Serial ATA-Controller		Datentransferrate bis zu 3.0Gb/s / 6.0Gb/s. Konform mit der SATA-Spezifikation Version 2.0 / 3.0
LAN	Realtek RTL 8111F		10 / 100 / 1000 Mb/s Auto-Negotiation Halb-/ Vollduplex-Funktion
HD Audio-Unterstützung	ALC662		Unterstützt High-Definition Audio 5.1-Kanal-Audioausgabe
USB3.0	B75		Datenübertragungsraten bis zu 600 MB / s
Steckplätze	PCI Express Gen3 x16 Steckplatz	x1	
	PCI-Steckplatz	x2	
	PCI Express Gen2 x 1-Steckplatz	x1	
Onboard-Anschluss	SATA3-Anschluss	x1	Jeder Anschluss unterstützt 1 SATA3-Laufwerk
	SATA2-Anschluss	x5	Jeder Anschluss unterstützt 1 SATA2-Laufwerk
	Fronttafelanschluss	x1	Unterstützt die Fronttafelfunktionen
	Front-Audioanschluss	x1	Unterstützt die Fronttafel-Audioanschlussfunktion

B75MU3+

Spezifikationen		
	CPU-Lüfter-Sockel	x1
	System-Lüfter-Sockel	x1
	"CMOS löschen"-Sockel	x1
	USB2.0-Anschluss	x2
	USB3.0-Anschluss	x1
	Verbraucher-IR Anschluss	x1
	Druckeranschluss Anschluss	x1
	Serieller Anschluss	x1
	S/PDIF Ausgangsanschluss	x1
	Stromanschluss (24-polig)	x1
	Stromanschluss (4-polig)	x1
Rückseiten-E /A	PS/2-Tastatur	x1
	HDMI-Anschluss	x1
	VGA-Anschluss	x1
	DVI-Anschluss	x1
	LAN-Anschluss	x1
	USB2.0-Anschluss	x2
	USB3.0-Anschluss	x2
	Audioanschluss	x3
Platinengröße	220 mm (B) X 244 mm (L)	ATX
OS-Unterstützung	Windows XP / Vista / 7	Biostar behält sich das Recht vor, ohne Ankündigung die Unterstützung für ein Betriebssystem hinzuzufügen oder zu entfernen.

Motherboard Manual

FRENCH

SPEC		
UC	Socket 1155 Processeurs Intel Core i7 / i5 / i3 / Pentium / Celeron	Prend en charge les technologies d'exécution de bit de désactivation / Intel SpeedStep® optimisée/ d'architecture Intel 64 / de mémoire étendue 64 / de virtualisation / Hyper Threading
Chipset	Intel B75	
Super E/S	IT8728 Fournit la fonctionnalité de Super E/S patrimoniales la plus utilisée. Interface à faible compte de broches	Initiatives de contrôle environnementales, Moniteur de matériel Contrôleur /moniteur de vitesse de ventilateur Fonction "Gardien intelligent" de l'ITE
Mémoire principale	Fentes DDR3 DIMM x 4 Capacité mémoire maximale de 32 Go Chaque DIMM prend en charge des DDR3 de 512Mo/1Go/2Go/4Go/8Go	Module de mémoire DDR3 à mode à double voie Prend en charge la DDR3 1066 / 1333 Prend en charge la DDR3 1600 (Depending on CPU) Les DIMM à registres et DIMM avec code correcteurs d'erreurs ne sont pas prises en charge
SATA 2 & 3	Contrôleur Serial ATA intégré :	Taux de transfert jusqu'à 3.0Go/s / 6.0Go/s. Conforme à la spécification SATA Version 2.0 / 3.0
LAN	Realtek RTL 8111F	10 / 100 / 1000 Mb/s négociation automatique Half / Full duplex capability
Prise en charge audio HD	ALC662	Prise en charge de l'audio haute définition Sortie audio à 5.1 voies
USB3.0	B75	Taux de transfert de données jusqu'à 600 Mo / s
Fentes	Fente PCI Express Gen3 x16 x1 Fente PCI x2 Fente PCI Express Gen2 x1 x1	
Connecteur embarqué	Connecteur SATA3 x1	Chaque connecteur prend en charge 1 périphérique SATA3
	Connecteur SATA2 x5	Chaque connecteur prend en charge 1 périphérique SATA2
	Connecteur du panneau avant x1	Prend en charge les équipements du panneau avant

B75MU3+

SPEC		
	Connecteur Audio du panneau avant x1 Embase de ventilateur UC x1 Embase de ventilateur système x1 Embase d'effacement CMOS x1 Connecteur USB2.0 x2 Connecteur USB3.0 x1 Connecteur de IR du consommateur x1 Connecteur de Port d'imprimante x1 Port série x1 Connecteur de sortie S/PDIF x1 Connecteur d'alimentation (24 broches) x1 Connecteur d'alimentation (4 broches) x1	Prend en charge la fonction audio du panneau avant Alimentation électrique du ventilateur UC (avec fonction de ventilateur intelligent) Alimentation électrique du ventilateur système Chaque connecteur prend en charge 2 ports USB2.0 de panneau avant Chaque connecteur prend en charge 2 ports USB3.0 de panneau avant Chaque connector prend en charge 1 Port d'imprimante Prend en charge la fonction de sortie audio numérique
E/S du panneau arrière	Clavier PS/2 x1 Port HDMI x1 Port VGA x1 Port DVI x1 Port LAN x1 Port USB2.0 x2 Port USB3.0 x2 Fiche audio x3	
Dimensions de la carte	220 mm (l) X 244 mm (H)	ATX
Support SE	Windows XP / Vista / 7	Biostar se réserve le droit d'ajouter ou de supprimer le support de SE avec ou sans préavis

Motherboard Manual

ITALIAN

SPECIFICA			
CPU	Socket 1155 Processore Intel Core i7 / i5 / i3 / Pentium / Celeron	Supporto di Execute Disable Bit / Enhanced Intel SpeedStep® / Architettura Intel 64 / Tecnologia Extended Memory 64 / Tecnologia Virtualization / Hyper Threading	
Chipset	Intel B75		
Super I/O	IT8728 Fornisce le funzionalità legacy Super I/O usate più comunemente. Interfaccia LPC (Low Pin Count)	Funzioni di controllo dell'ambiente: Monitoraggio hardware Controller / Monitoraggio velocità ventolina Funzione "Smart Guardian" di ITE	
Memoria principale	Alloggi DIMM DDR3 x 4 Capacità massima della memoria 32GB Ciascun DIMM supporta DDR3 512MB/1GB/2GB/4GB/8GB	Modulo di memoria DDR3 a canale doppio Supporto di DDR3 1066 / 1333 Supporto di DDR3 1600 (Depending on CPU) DIMM registrati e DIMM ECC non sono supportati	
SATA 2 & 3	Controller Serial ATA integrato	Velocità di trasferimento dei dati fino a 3.0Gb/s / 6.0Gb/s. Compatibile specifiche SATA Versione 2.0/3.0	
LAN	Realtek RTL 8111F	Negoziazione automatica 10 / 100 / 1000 Mb/s Capacità Half / Full Duplex	
Supporto audio HD	ALC662	Supporto audio High-Definition (HD) Uscita audio 5.1 canali	
USB3.0	B75	Velocità di trasferimento dati fino a 600 MB / s	
Alloggi	Alloggio PCI Express Gen3 x16 Alloggio PCI Alloggio PCI Express Gen2 x1	x1 x2 x1	
Connettori su scheda	Connettore SATA3 Connettore SATA2 Connettore pannello frontale Connettore audio frontale	x1 x5 x1 x1	Ciascun connettore supporta 1 unità SATA3 Ciascun connettore supporta 1 unità SATA2 Supporta i servizi del pannello frontale Supporta la funzione audio pannello frontale

B75MU3+

SPECIFICA		
	Collettore ventolina CPU x1 Collettore ventolina sistema x1 Collettore cancellazione CMOS x1 Connettore USB2.0 x2 Connettore USB3.0 x1 Connettore IR del consumatore x1 Connettore Porta stampante x1 Porta seriale x1 Connettore output S/PDIF x1 Connettore alimentazione (24 pin) x1 Connettore alimentazione (4 pin) x1	Alimentazione ventolina CPU (con funzione Smart Fan) Alimentazione ventolina di sistema Ciascun connettore supporta 2 porte USB2.0 pannello frontale Ciascun connettore supporta 2 porte USB3.0 pannello frontale Ciascun connettore supporta 1 Porta stampante Supporta la funzione d'output audio digitale
I/O pannello posteriore	Tastiera PS/2 x1 Porta HDMI x1 Porta VGA x1 Porta DVI x1 Porta LAN x1 Porta USB2.0 x2 Porta USB3.0 x2 Connettore audio x3	
Dimensioni scheda	220 mm (larghezza) x 244 mm (altezza)	ATX
Sistemi operativi supportati	Windows XP / Vista / 7	Biostar si riserva il diritto di aggiungere o rimuovere il supporto di qualsiasi sistema operativo senza preavviso.

Motherboard Manual

SPANISH

Especificación			
CPU	Socket 1155 Procesador Intel Core i7 / i5 / i3 / Pentium / Celeron		Admite Bit de deshabilitación de ejecución / Intel SpeedStep® Mejorado / Intel Architecture-64 / Tecnología Extended Memory 64 / Tecnología de virtualización / Hyper Threading
Conjunto de chips	Intel B75		
Súper E/S	IT8728 Le ofrece las funcionalidades heredadas de uso más común Súper E/S. Interfaz de cuenta Low Pin		Iniciativas de control de entorno, Monitor hardware Controlador/monitor de velocidad de ventilador Función "Guardia inteligente" de ITE
Memoria principal	Ranuras DIMM DDR3 x 4 Capacidad máxima de memoria de 32GB Cada DIMM admite DDR de 512MB/1GB/2GB/4GB/8GB		Módulo de memoria DDR3 de canal Doble Admite DDR3 de 1066 / 1333 Admite DDR3 de 1600(Depending on CPU) No admite DIMM registrados o DIMM compatibles con ECC
SATA 2 & 3	Controlador ATA Serie Integrado		Tasas de transferencia de hasta 3.0 Gb/s / 6.0 Gb/s. Compatible con la versión SATA 2.0 / 3.0.
Red Local	Realtek RTL 8111F		Negociación de 10 / 100 / 1000 Mb/s Funciones Half / Full dúplex
Soporte de sonido HD	ALC662		Soporte de sonido de Alta Definición Salida de sonido de 5.1 canales
USB3.0	B75		Tasas de transferencia de datos hasta 600 MB / s
Ranuras	Ranura PCI Express Gen3 x16 Ranura PCI Ranura PCI Express Gen2 x 1	X1 X2 X1	
Conectores en placa	Conector SATA3 Conector SATA2 Conector de panel frontal Conector de sonido frontal	X1 X5 X1 X1	Cada conector soporta 1 dispositivos SATA3 Cada conector soporta 1 dispositivos SATA2 Soporta instalaciones en el panel frontal Soporta funciones de sonido en el panel frontal

B75MU3+

Especificación			
	Cabecera de ventilador de CPU	X1	Fuente de alimentación de ventilador de CPU (con función Smart Fan)
	Cabecera de ventilador de sistema	X1	Fuente de alimentación de ventilador de sistema
	Cabecera de borrado de CMOS	X1	
	Conector USB2.0	X2	Cada conector soporta 2 puertos USB2.0 frontales
	Conector USB3.0	X1	Cada conector soporta 2 puertos USB3.0 frontales
	Conector de IR del consumidor	X1	
	Conector Puerto de impresora	X1	Cada conector soporta 1 Puerto de impresora
	Puerto serie	X1	
	Conector de salida S/PDIF	X1	Soporta función de salida de sonido digital
	Conector de alimentación (24 patillas)	X1	
	Conector de alimentación (4 patillas)	X1	
Panel trasero de E/S	Teclado PS/2	X1	
	Puerto HDMI	x1	
	Puerto VGA	X1	
	Puerto DVI	X1	
	Puerto de red local	X1	
	Puerto USB2.0	X2	
	Puerto USB3.0	X2	
	Conector de sonido	X3	
Tamaño de la placa	220 mm. (A) X 244 Mm. (H)		ATX
Soporte de sistema operativo	Windows XP / Vista / 7	Biostar se reserva el derecho de añadir o retirar el soporte de cualquier SO con o sin aviso previo.	

Motherboard Manual

PORTUGUESE

ESPECIFICAÇÕES		
CPU	Socket 1155 Processador Intel Core i7 / i5 / i3 / Pentium / Celeron	Superta as tecnologias Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Arquitecture -64 / Extended Memory 64 / Virtualization / Hyper Threading
Chipset	Intel B75	
Especificação Super I/O	IT8728 Proporciona as funcionalidades mais utilizadas em termos da especificação Super I/O. Interface LPC (Low Pin Count).	Iniciativas para controlo do ambiente Monitorização do hardware Controlador/Monitor da velocidade da ventoinha Função "Smart Guardian" da ITE
Memória principal	Ranhuras DIMM DDR3 x 4 Capacidade máxima de memória: 32 GB Cada módulo DIMM suporta uma memória DDR3 de 512MB/ 1GB/2GB/4GB/8GB	Módulo de memória DDR3 de canal duplo Suporta módulos DDR3 1066 / 1333 Suporta módulos DDR3 1600 (Depending on CPU) Os módulos DIMM registados e os DIMM ECC não são suportados
SATA 2 & 3	Controlador Serial ATA integrado	Velocidades de transmissão de dados até 3.0 Gb/s / 6.0 Gb/s. Compatibilidade com a especificação SATA versão 2.0 / 3.0.
LAN	Realtek RTL 8111F	Auto negociação de 10 / 100 / 1000 Mb/s Capacidade semi/full-duplex
Suporte para áudio de alta definição	ALC662	Suporta a especificação High-Definition Audio Saída de áudio de 5.1 canais
USB3.0	B75	Taxas de transferência de dados até 600 MB / s
Ranhuras	Ranhura PCI Express Gen3 x16 Ranhura PCI Ranhura PCI Express Gen2 x 1	x1 x2 x1
Conectores na placa	Conector SATA3 Conector SATA2 Conector do painel frontal	x1 x5 x1
		Cada conector suporta 1 dispositivo SATA3 Cada conector suporta 1 dispositivo SATA2 Para suporte de várias funções no painel frontal

B75MU3+

ESPECIFICAÇÕES		
	Conector de áudio frontal x1 Conector da ventoinha da CPU x1 Conector da ventoinha do sistema x1 Conector para limpeza do CMOS x1 Conector USB2.0 x2 Conector USB3.0 x1 Conector de IR do consumidor x1 Conector da para impressora x1 Porta série x1 Conector de saída S/PDIF x1 Conector de alimentação (24 pinos) x1 Conector de alimentação (4 pinos) x1	Superta a função de áudio no painel frontal Alimentação da ventoinha da CPU (com a função Smart Fan) Alimentação da ventoinha do sistema Cada conector suporta 2 portas USB2.0 no painel frontal Cada conector suporta 2 portas USB3.0 no painel frontal Cada conector suporta 1 Porta para impressora Superta a saída de áudio digital
Entradas/Saídas no painel traseiro	Teclado PS/2 x1 Porta HDMI x1 Porta VGA x1 Porta DVI x1 Porta LAN x1 Porta USB2.0 x2 Porta USB3.0 x2 Tomada de áudio x3	
Tamanho da placa	220 mm (L) X 244 mm (A)	ATX
Sistemas operativos suportados	Windows XP / Vista / 7	A Biostar reserva-se o direito de adicionar ou remover suporte para qualquer sistema operativo com ou sem aviso prévio.

Motherboard Manual

POLISH

SPEC			
Procesor	Socket 1155 Procesor Intel Core i7 / i5 / i3 / Pentium / Celeron		Obsługa Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture-64 / Extended Memory 64 Technology / Virtualization Technology / Hyper Threading
Chipset	Intel B75		
Pamięć główna	Gniazda DDR3 DIMM x 4 Maks. wielkość pamięci 32GB Każe gniazdo DIMM obsługuje moduły 512MB/1GB/2GB/4GB/8GB DDR3		Moduł pamięci DDR3 z trybem podwójnego kanału Obsługa DDR3 1066 / 1333 Obsługa DDR3 1600 (Depending on CPU) Brak obsługi Registered DIMM oraz ECC DIMM
Super I/O	IT8728 Zapewnia najbardziej powszechnie funkcje Super I/O. Interfejs Low Pin Count		Funkcje kontroli warunków pracy, Monitor H/W Kontroler/Monitor prędkości wentylatora Funkcja ITE "Smart Guardian"
SATA 2 & 3	Zintegrowany kontroler Serial ATA		Transfer danych do 3.0 Gb/s / 6.0 Gb/s. Zgodność ze specyfikacją SATA w wersji 2.0 / 3.0.
LAN	Realtek RTL 8111F		10 / 100 / 1000 Mb/s z automatyczną negocjacją szybkości Działanie w trybie połowicznego / pełnego dupliksu
Obsługa audio HD	ALC662		Obsługa High-Definition Audio 5.1 kanałowe wyjście audio
USB3.0	B75		Cena transferu danych do 600 MB / s
Gniazda	Gniazdo PCI Express Gen3 x16 Gniazdo PCI Gniazdo PCI Express Gen2 x 1	x1 x2 x1	
Złącza wbudowane	Złącze SATA3 Złącze SATA2 Złącze panela przedniego Przednie złącze audio Złącze głównego wentylatora procesora	x1 x5 x1 x1 x1	Każde złącze obsługuje 1 urządzenie SATA3 Każde złącze obsługuje 1 urządzenie SATA2 Obsługa elementów panela przedniego Obsługa funkcji audio na panelu przednim Zasilanie wentylatora procesora (z funkcją Smart Fan)

B75MU3+

SPEC		
	Złącze główkowe wentylatora systemowego x1 Złącze główkowe kasowania CMOS x1 Złącze USB2.0 x2 Złącze USB3.0 x1 Złącze Konsument IR x1 Złącze Port drukarki x1 Port szeregowy x1 Złącze wyjścia S/PDIF x1 Złącze zasilania (24 pinowe) x1 Złącze zasilania (4 pinowe) x1	Zasilanie wentylatora systemowego Każde złącze obsługuje 2 porty USB2.0 na panelu przednim Każde złącze obsługuje 2 porty USB3.0 na panelu przednim Każde złącze obsługuje 1 Port drukarki Obsługa funkcji cyfrowego wyjścia audio
Back Panel I/O	Klawiatura PS/2 x1 Port HDMI x1 Port VGA x1 Port DVI x1 Port LAN x1 Port USB2.0 x2 Port USB3.0 x2 Gniazdo audio x3	
Wymiary płyty	220 mm (S) X 244 mm (W)	ATX
Obsługa systemu operacyjnego	Windows XP / Vista / 7	Biostar zastrzega sobie prawo dodawania lub odwoływania obsługi dowolnego systemu operacyjnego bez powiadomienia.

Motherboard Manual

RUSSIAN

СПЕЦ		
CPU (центральн ый процессор)	Socket 1155 Процессор Intel Core i7 / i5 / i3 / Pentium / Celeron	Поддержка технологий Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture-64 / Extended Memory 64 Technology / технологии виртуализация / Hyper Threading
Набор микросхем	Intel B75	
Основная память	Слоты DDR3 DIMM x 4 Максимальная ёмкость памяти 32 ГБ Каждый модуль DIMM поддерживает 512МБ/1ГБ/2ГБ/4ГБ/8 ГБ DDR3	Модуль памяти с двухканальным режимом DDR3 Поддержка DDR3 1066 / 1333 Поддержка DDR3 1600(Depending on CPU) Не поддерживает зарегистрированные модули DIMM and ECC DIMM
Super I/O	IT8728 Обеспечивает наиболее используемые действующие функциональные возможности Super I/O. Интерфейс с низким количеством выводов	Инициативы по охране окружающей среды, Аппаратный монитор Регулятор скорости вентилятора/ монитор Функция ITE "Smart Guardian" (Интеллектуальная защита)
SATA 2 & 3	Встроенное последовательное устройство управления ATA	скорость передачи данных до 3.0 гигабит/с / 6.0 гигабит/с. Соответствие спецификации SATA версия 2.0/3.0
Локальная сеть	Realtek RTL 8111F	Автоматическое согласование 10 / 100 / 1000 Мб/с Частичная / полная дуплексная способность
Звуковая поддержка жесткого диска	ALC662	Звуковая поддержка High-Definition 5.1канальный звуковой выход
USB3.0	B75	скорости передачи данных до 600 МБ / с
Слоты	Слот PCI Express Gen3 x16 Слот PCI Слот PCI Express Gen2 x 1	x1 x2 x1
Встроенный разъём	Разъём SATA3 Разъём SATA2 Разъём на лицевой панели Входной звуковой разъём	x1 x5 x1 x1
		Каждый разъём поддерживает 1 устройство SATA3 Каждый разъём поддерживает 1 устройство SATA2 Поддержка устройств на лицевой панели Поддержка звуковых функций на лицевой панели

B75MU3+

СПЕЦ		
	Контактирующее приспособление вентилятора центрального процессора x1 Контактирующее приспособление вентилятора системы x1 Открытое контактирующее приспособление CMOS x1 USB2.0-разъём x2 USB3.0-разъём x1 Разъём едока ИКЫЙ x1 Разъём Порт подключения принтера x1 Последовательный порт x1 Разъём вывода для S/PDIF x1 Разъем питания (24 вывод) x1 Разъем питания (4 вывод) x1	Источник питания для вентилятора центрального процессора (с функцией интеллектуального вентилятора) Источник питания для вентилятора системы Каждый разъём поддерживает 2 USB2.0-порта на лицевой панели Каждый разъём поддерживает 2 USB3.0-порта на лицевой панели Каждый разъём поддерживает 1 Порт подключения принтера Поддержка вывода цифровой звуковой функции
Задняя панель средств ввода-вывода	Клавиатура PS/2 x1 Порт HDMI x1 Порт VGA x1 Порт DVI x1 Порт LAN x1 USB2.0-порт x2 USB3.0-порт x2 Гнездо для подключения наушников x3	
Размер панели	220 мм (Ш) X 244 мм (В)	ATX
Поддержка OS	Windows XP / Vista / 7	Biostar сохраняет за собой право добавлять или удалять средства обеспечения для OS с или без предварительного уведомления.

Motherboard Manual

ARABIC

المواصفات		
يدعم تقنيات Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture-64 / Extended Memory 64 Technology / Virtualization Technology / Hyper Threading	القناة 3 وحدة المعالجة المركزية Intel Core i7 / i5 / i3 / Pentium / Celeron تردد يصل إلى	Socket 1155
مجموعه الشريان Intel B75		
عدد 4 قنوات DDR3 DIMM سرعة ذاكرة فصوى 32 جيجابايت ميغا بايت و1/512 سعة ذاكرة من نوع DDR3 و2/4 و8 جيجابايت	مذروحة DDR3 وحدة ذاكرة سرعت 1066 / 1333 ميغابايت DDR3 الذاكرة الرئيسية الذاكرة تدعم on CPU (بايت ميجا) وذلك الذي لا تتوافق مع ECC لأنها لا تدعم رقاقة الذاكرة	مذروحة الذاكرة من نوع DDR3 الذاكرة تدعم on CPU (بايت ميجا) وذلك الذي لا تتوافق مع ECC لأنها لا تدعم رقاقة الذاكرة
وسيل التحكم في البيئة: مراقب لمعرفة حالة الأجهزة مراقب في سرعة المروحة Smart Guardian من ITE	IT8728 الأكثر لستخداماً، توفر وظيفة Super I/O Low Pin Count Interface	Super I/O
6.0 ثانية/جيگابايت إلى تصل سرعات البيانات نقل ثانية/جيگابايت.	متصل SATA Serial ATA تحكم	SATA 2 & 3
تغادر 2.0 / 3.0 الإصدار SATA مطلقة لمواصفات		
تضارض تلقائي 100/10 ميغا بايت / ثانية و1 جيجا بايت/ثانية إمكانية الفك المزدوج الكامل/النصفي	Realtek RTL 8111F	شبكة داخلية
تدعم تقنية الصوت عالي التعريف من قوات لخرج الصوت 5.1	ALC662	دعم الصوت عالي التعريف
ثانية / بليت ميغا 600 إلى تصل بيانات نقل معدلات	B75	USB3.0
	1 عدد PCI Express x16 Gen3 2 عدد PCI 1 عدد PCI Express Gen2 x 1	القحات
يدعم كل منفذ واحد من أجهزة SATA3 يدعم كل منفذ واحد من أجهزة SATA2 يدعم تجهيزات اللوحة الأممية يدعم وظيفة الصوت باللوحة الأممية لتوصيل الطاقة لمروحة وحدة المعالجة مع وظيفة Smart Fan	1 عدد SATA3 5 عدد SATA2 1 عدد منفذ اللوحة الأممية 1 عدد منفذ الصوت الأمامي 1 عدد وصلة مروحة وحدة المعالجة المركزية	منفذ على سطح اللوحة منفذ اللوحة الأممية منفذ الصوت الأمامي وصلة مروحة وحدة المعالجة المركزية

B75MU3+

الموافقات			
لتوصيل الطاقة لمروحة النظام	عدد 1	وصلة مروحة النظام	
يدعم كل منفذ قحتي USB2.0 باللوحة الأمثلية	عدد 1	وصلة مسح CMOS	
يدعم كل منفذ قحتي USB3.0 باللوحة الأمثلية	عدد 2	منفذ USB2.0	
	عدد 1	منفذ USB3.0	
	عدد 1	منفذ الأحمر تحت مستهلكة	
يدعم وظيفة خرج الصوت الرقمي	عدد 1	منفذ طباعة	
	عدد 1	منفذ تسلسلي	
	عدد 1	منفذ خرج S/PDIF	
	عدد 1	منفذ توصيل الطاقة (24 ديبوس)	
	عدد 1	منفذ توصيل الطاقة (4 ديدلبيس)	
	عدد 1	لوحة مفاتيح PS/2	
	عدد 1	منفذ HDMI	
	عدد 1	منفذ VGA	
	عدد 1	منفذ دخل/خرج DVI	
	عدد 1	لوحة الخلفية منفذ شبكة اتصال محلية	
	عدد 2	منفذ USB2.0	
	عدد 2	منفذ USB3.0	
	عدد 3	مقبس صوت	
ATX	حجم اللوحة 220 مم (عرض) X 244 مم (ارتفاع)		
بحقها في إضافة لو إزالة الدعم لأي نظام شغل يخطر أو Biostar بخطأ دون إخطار.	Windows XP / Vista / 7		دعم أنظمة التشغيل

Motherboard Manual

JAPANESE

仕様		
CPU	Socket 1155 Intel Core i7 / i5 / i3 / Pentium / Celeron プロセッサ	Execute Disable Bit / Enhanced Intel SpeedStep® / Intel Architecture-64 / Extended Memory 64 Technology / Virtualization Technology / Hyper Threadingをサポートします
チップセット	Intel B75	
メインメモリ	DDR3 DIMMスロット x 4 最大メモリ容量32GB 各DIMMは 512MB/1GB/2GB/4GB/8GB DDR3 をサポート	デュアル チャンネルモードDDR3 メモリモジュール DDR3 1066 / 1333 をサポート DDR3 1600(Depending on CPU) をサポート 登録済みDIMMとECC DIMMはサポートされません
Super I/O	IT8728 もつとも一般に使用されるレガシーSuper I/O機能を採用しています。 低ピンカウントインターフェイス	環境コントロールイニシアチブ、 H/Wモニター ファン速度コントローラ / モニター ITEの「スマートガーディアン」機能
SATA 2 & 3	統合シリアルATAコントローラ	最高3.0 Gb/秒 / 6.0 Gb/秒のデータ転送速度 SATAバージョン2.0 / 3.0仕様に準拠。
LAN	Realtek RTL 8111F	10 / 100 / 1000 Mb/秒のオートネゴシエーション 半/全二重機能
HDオーディオのサポート	ALC662 ハイデフィニションオーディオのサポート 5.1 チャンネルオーディオアウト	
USB3.0	B75	データ転送速度最大600 MB /秒の
スロット	PCI Express Gen3 x16スロット x1 PCIスロット x2 PCI Express Gen2 x 1スロット x1	
オンボードコネクタ	SATA3コネクタ x1 SATA2コネクタ x5 フロントパネルコネクタ x1 フロントオーディオコネクタ x1 CPUファンヘッダ x1 システムファンヘッダ x1	各コネクタは1つのSATA3デバイスをサポートします 各コネクタは1つのSATA2デバイスをサポートします フロントパネル機能をサポートします フロントパネルオーディオ機能をサポートします CPUファン電源装置(スマートファン機能を搭載) システムファン電源装置

B75MU3+

仕様			
	CMOSクリアヘッダ	x1	
	USB2.0コネクタ	x2	各コネクタは2つのフロントパネルUSB2.0ポートをサポートします
	USB3.0コネクタ	x1	各コネクタは2つのフロントパネルUSB3.0ポートをサポートします
	消費者IRコネクタ	x1	
	プリンタポートコネクタ	x1	各コネクタは1つのプリンタポートをサポートします
	シリアルポート	x1	
	S/PDIFアウトコネクタ	x1	デジタルオーディオアウト機能をサポートします
	電源コネクタ(24ピン)	x1	
	電源コネクタ(4ピン)	x1	
背面パネル I/O	PS/2キーボード	x1	
	HDMIポート	x1	
	VGAポート	x1	
	DVI-Dポート	x1	
	LANポート	x1	
	USB2.0ポート	x2	
	USB3.0ポート	x2	
	オーディオジャック	x3	
ボードサイズ	220 mm (幅) X 244 mm (高さ)		ATX
OSサポート	Windows XP / Vista / 7		Biostarは事前のサポートなしにOSサポートを追加または削除する権利を留保します。

2012/04/06